

3•2•1® GSX SERIES III

DVD HOME ENTERTAINMENT SYSTEM

Owner's Guide

Guía de usuario

Notice d'utilisation





SAFETY INFORMATION

Please read this owner's guide


Please take the time to follow this owner's guide carefully. It will help you set up and operate your system properly and enjoy all of its advanced features. Save this owner's guide for future reference.


WARNING: To reduce the risk of fire or electric shock, do not expose the system to rain or moisture.

WARNING: Do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the apparatus. As with any electronic product, use care not to spill liquids in any part of the system. Liquids can cause a failure and/or a fire hazard.

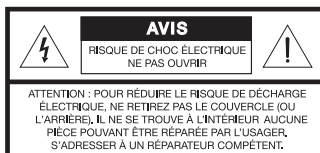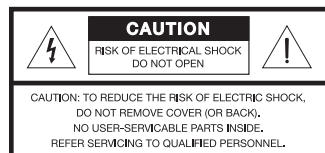

The CAUTION marks shown here are located on the bottom of your 3•2•1® home entertainment system media center and the rear panel of the Acoustimass® module:

 
 The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of uninsulated, dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

 The exclamation point within an equilateral triangle alerts the user to the presence of important operating and maintenance instructions in this owner's guide.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, insert fully.

CAUTION: Do not place any naked flame sources, such as lighted candles, on or near the apparatus.

Class 1 laser product



This CD player is classified as a CLASS 1 LASER PRODUCT according to EN 60825-1:1994+A1+A2, IEC60825-1:1993+A1+A2.

CAUTION: Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. The DVD player should not be adjusted or repaired by anyone except properly qualified service personnel.

Class B emissions limits

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.



Batteries

Please dispose of used batteries properly, following any local regulations. Do not incinerate.

CE This product conforms to the EMC Directive 2004/108/EC and to the Low Voltage Directive 2006/95/EC. The complete Declaration of Conformity can be found at: www.Bose.com/static/compliance/index.html.

Additional safety information

See the additional instructions on the *Important Safety Information* sheet enclosed in the shipping carton.

CONTENTS

INTRODUCTION 2

Before you begin	2
For your records	3
Unpacking	4

SETUP 6

1 Placing the system components	6
2 Connecting the speakers to the module	8
3 Connecting the module to the media center	10
4 Connecting the system video to your TV	12
5 Connecting a cable box or other component	17
To connect another component	19
To get digital audio from the component	20
To use video pass through	21
6 Connecting audio from your TV as an option	22
7 Installing the FM and AM radio antennas	25
8 Connecting the module to power outlet	28
9 Setting the remote to control your TV	
and components	30
Inserting the remote batteries	30
Setting the remote for your TV	31
Controlling another component	32

FIRST TIME USE 33

Trying out the DVD	33
--------------------------	----

CONTROLS AND INDICATORS 34

The remote control	34
Power and source buttons	35
Menu and movement buttons	36
Play and numeric buttons	37
Record and A,B,C buttons	
(not in Europe)	38
Colored buttons	
(in Europe only)	38
uMusic® buttons	38
The media center	39
Display	39
Disc tray	39

OPERATION 40

Playing a video disc or CD	40
Selecting a play option	40
Keeping your discs clean	41
Checking for disc compatibility	42
For DVDs: Setting Parental Control	42
Choosing a password	42
Setting a restriction level	43
Ratings supplied by the MPAA	43

Playing a cable box or other component	44
Adjusting for audio delay	44
Getting digital audio from a source	45
Choosing other options	45
Listening to the radio	46
Creating a preset	46
Removing a station from a preset	46

ADJUSTMENTS TO THE PERFORMANCE 47

Changing system features	47
To get to the System menu	47
Selecting a new option	48
Audio options	49
Video options	50
Media center options	52
Stored CDs options	54
Choosing new settings	56
To get to the Settings menu	56
Settings options	57

REFERENCE 60

Replacing remote batteries	60
Protecting the system	60
Cleaning the media center	60
Cleaning the speakers	60
Troubleshooting	61
For Customer Service	65
Limited warranty	65
Technical Information	65

END USER LICENSE AGREEMENT 70

COPYRIGHT AND LICENSE PROTECTIONS 71

DEVICE CODES A-1

INTRODUCTION

Before you begin

Thank you for purchasing the 3•2•1® DVD home entertainment system. Using Bose® proprietary signal processing technology, the 3•2•1 system provides improved spaciousness from stereo recordings and bold movie effects for surround-sound sources.

System features include:

- Small, easy-to-place shelf speakers
- Easy-to-hide Acoustimass® module
- Integrated DVD/CD player and AM/FM tuner
- Remote and media center controls
- HDMI video connection to your TV
- Audio In connectors for three components
- Your choice of language for text displays
- New ways to enjoy your favorite CD tracks with the uMusic® intelligent playback system


What is a uMusic system?

This system features breakthrough Bose technology that enables you to:

- *Store your favorite music in a library with capacity for approximately 200 hours of music (about 200 CDs).*
 - *Teach the system which tracks you like or dislike, so it automatically plays the music you want to hear most.*
-

For your records

As you unpack the system, look for the serial numbers on the rear of the Acoustimass® module and the bottom of the media center.

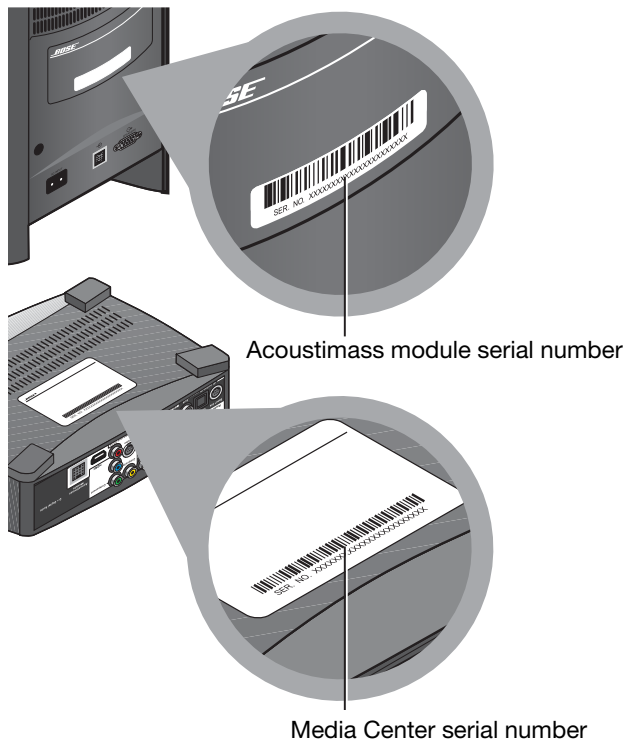

This is a good time to record the serial numbers on the lines below and on your product registration card. You may need them if you ever contact Bose® Customer Service.

Acoustimass module serial number:

Media center serial number:

Dealer name:

Dealer phone:

Purchase date:

We suggest you keep your sales receipt and the warranty information (on the product registration card) together with this owner's guide.

INTRODUCTION


Unpacking

Carefully unpack your system. Save all packing materials, which provide the safest way to transport your system. Make sure your system includes the parts shown.


WARNING: To avoid danger of suffocation, keep the plastic bags out of the reach of children.

As you identify them, you may want to place a check mark in the box next to the name of each part.

If any part of the system appears damaged, do not try to use it. Notify Bose or your authorized Bose® dealer right away. For contact information, refer to the address sheet included in the carton.

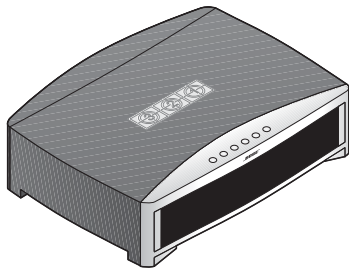


☐ Media center

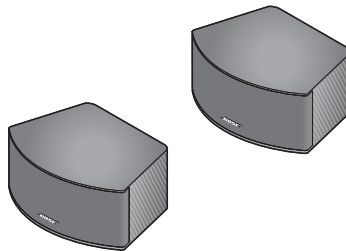

☐ Speakers



☐ Acoustimass® module

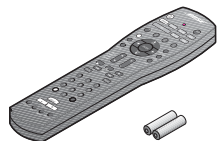


❑ Remote control and batteries




❑ Rubber feet for Acoustimass® module



 
❑ Rubber feet for speakers




❑ Setup disc

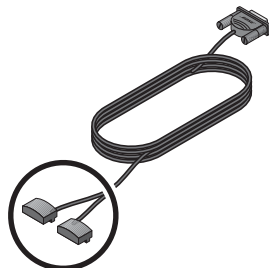


❑ Speaker cable

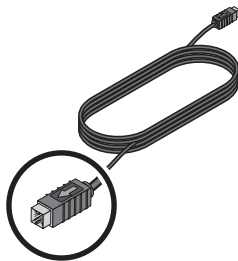

❑ Acoustimass module cable

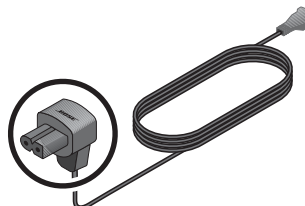


❑ Acoustimass module power cord

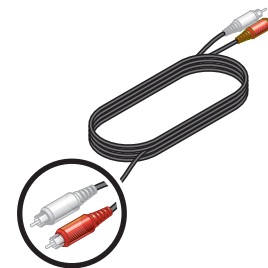


❑ Stereo audio cable




❑ HDMI video cable

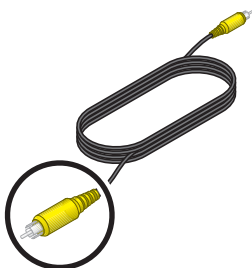

❑ Composite video cable

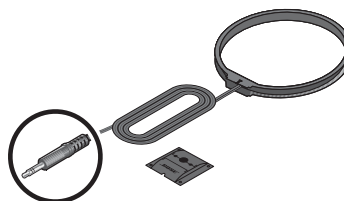

❑ AM antenna and stand

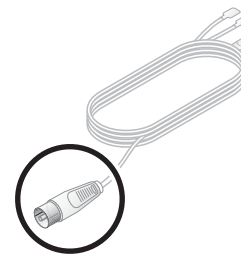

❑ FM antenna

SETUP


1

Placing the system components

What you need to use:



Media center

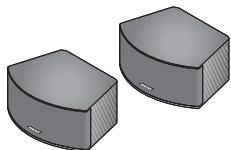


Speakers




Acoustimass® module

The image below shows one of the many ways you can position your new 3•2•1® system.

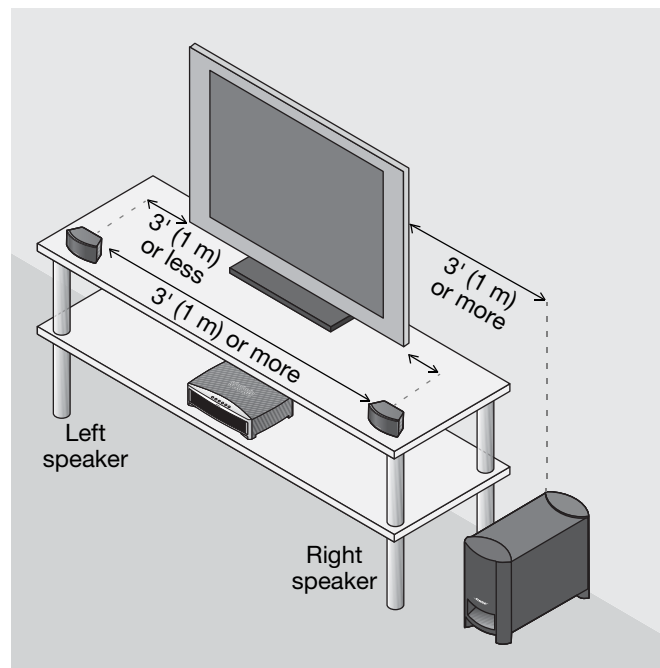

See Steps 1-6 for details.


1. On the bottom of each speaker, attach one set of small rubber feet.

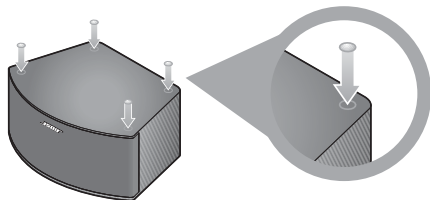

2. Place the left and right speakers:

- at least 3 feet (1 meter) apart
- within 3 feet (1 meter) of the TV screen
- near the front edge of any shelf
- aimed straight ahead (not angled) to face the listening area

3. On the legs of the Acoustimass® module, attach the large rubber feet.

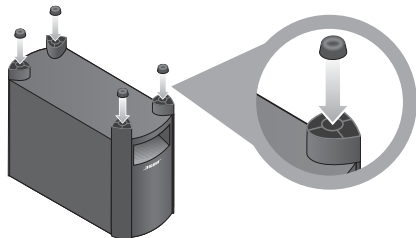

4. Place the Acoustimass module:

- at the same end of the room as the speakers and your TV
- at least 3 feet (1 meter) from the TV to prevent interference with the screen
- several feet (.8 meters) from audio or video tapes to prevent magnetic damage to them
- standing upright, not lying on a side, the front, or the back
- with the front port aimed out from or along a wall for balanced performance
- hidden under a table, behind a sofa or chair, or behind drapes as preferred
- NOT in an enclosure, on a bed, on a sofa, or on a surface that can block the ventilation openings.

CAUTION: Do not block ventilation openings on the bottom and rear of the module.

5. Place the media center:

- where nothing obstructs the front panel
- near any components you will connect




6. Continue with **2** on the next page.

SETUP


2

Connecting
the speakers
to the module


What you need to use:

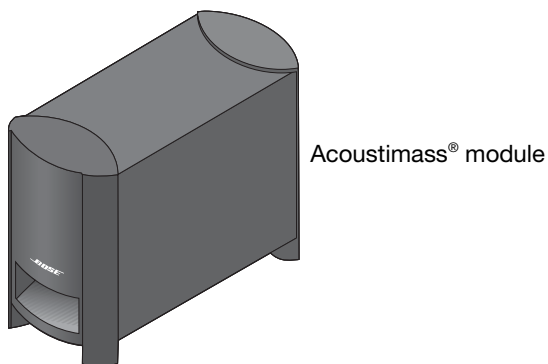

1. Notice the two plugs at one end of the speaker cable.

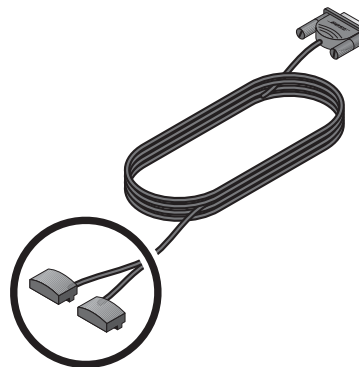


2. Separate the two plugs so each one reaches a speaker.

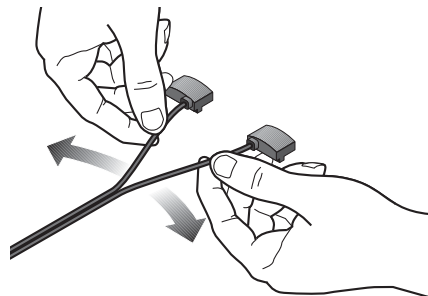


(Refer to **1** for placement guidelines.)

3. Insert each plug into the connector on the proper speaker.

The plug marked RIGHT goes into the speaker placed to the right of your TV.

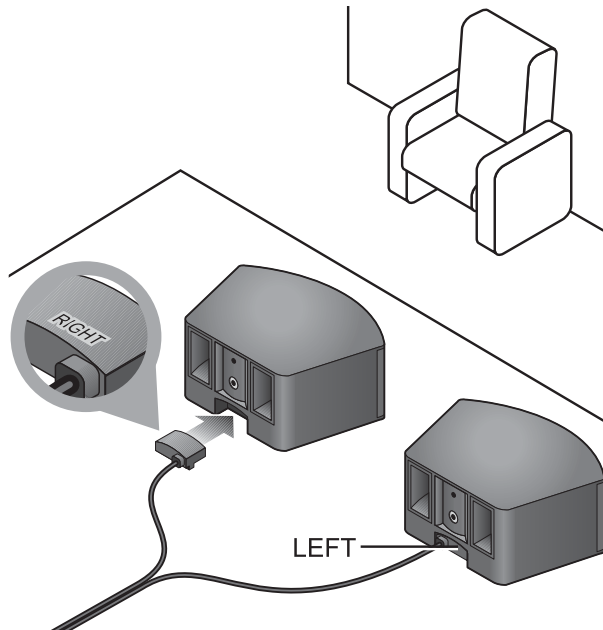

4. Insert the remaining single plug into the connector labeled SPEAKERS on the back of the Acousti-mass® module.

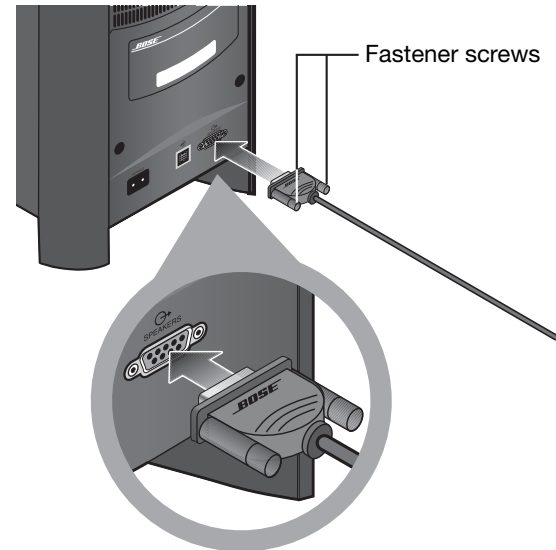

5. Tighten each fastener screw by hand to secure the plug.


CAUTION: Do not plug the Acousti-mass module into an AC power (mains) outlet until all other components are connected.

6. Continue with **3** on the next page.

SETUP

3 Connecting the module to the media center


What you need to use:

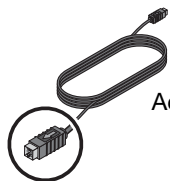

Acoustimass® module cable




Media center

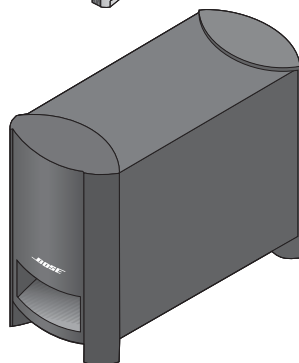


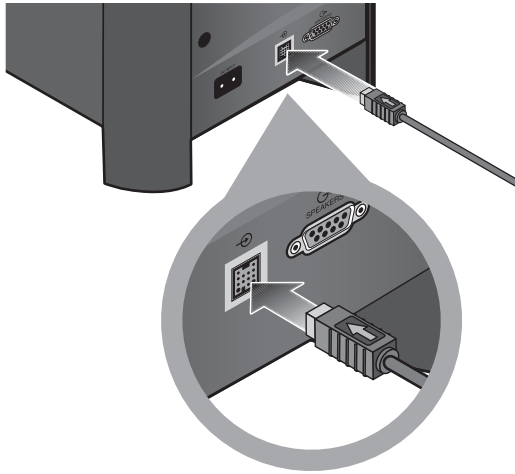
Acoustimass module

1. Notice the arrow on the top of the multi-pin plug at each end of the Acoustimass module cable.

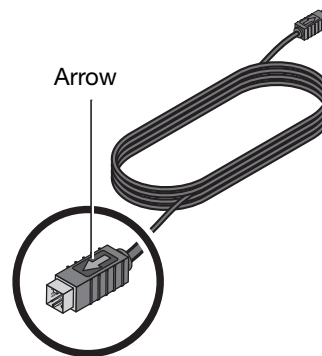


2. Make sure you can see the arrow on top before you insert either end of the cable.

3. Insert this plug into the connector labeled  on the back of the Acoustimass® module.



Make sure the arrow on the plug faces up as you insert it.

4. On the other end of the cable, make sure you can see the arrow on top of the plug.
5. Insert this plug into the connector labeled Acoustimass Module on the back of the media center.

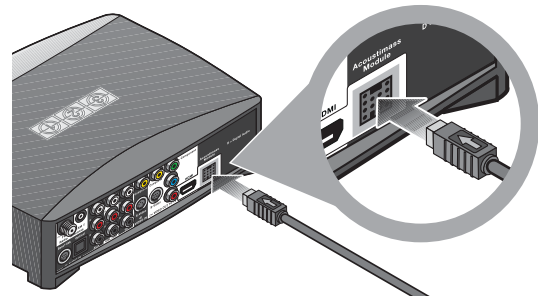

6. Continue with **4** on the next page.

SETUP

4


Connecting the system video to your TV

What you may need to use:



HDMI
video cable


OR

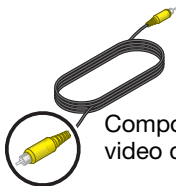

Composite
video cable



Media center

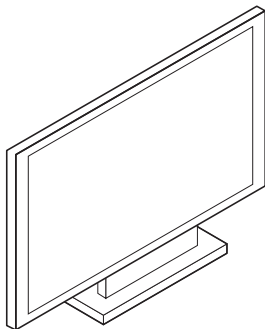

Your TV


This connection allows you to see DVDs and other video from the 3•2•1® system on your TV.

1. Select the HDMI video cable.



2. Check to see if your TV has an unused HDMI connector for VIDEO IN.

This may be located on the side or rear connector panel of the TV.

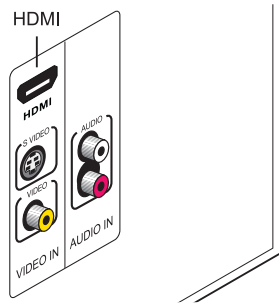

3. Follow the directions that are appropriate for your TV:

TV with HDMI

on page 14

or


TV without HDMI

on page 15

SETUP

TV with HDMI


1. Insert one end of the HDMI cable into the HDMI connector on your TV.

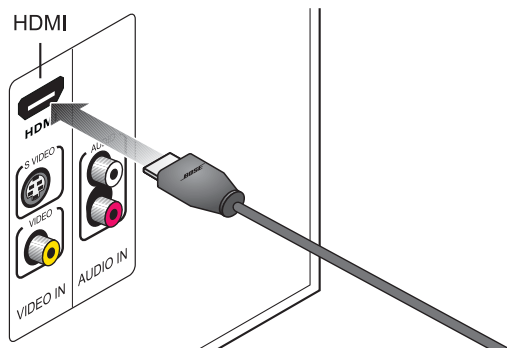

Match the wide side of the plug to the wide side of the connector.

2. Insert the other end of this cable into the HDMI connector on the media center.



Make sure the Bose® logo shows as you insert the plug.

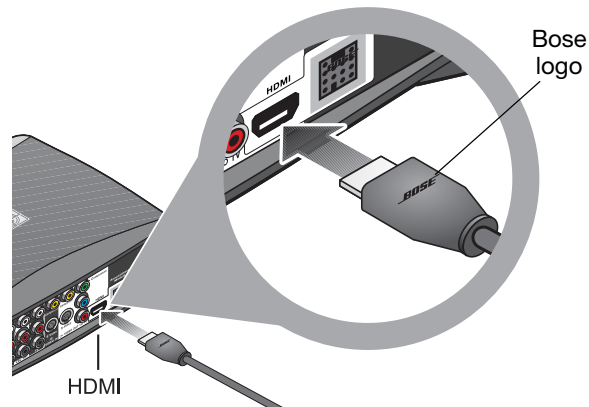

3. Continue with **5** on page 17.


Note: If you make this HDMI connection, you do not need the supplied yellow Composite video cable to make any connections.

DO NOT use either of the two ONLY PASS-THROUGH connectors on the back of the media center for video from a component. Neither S-Video nor Composite signals can pass through the HDMI cable to the TV.

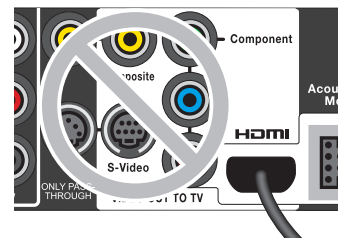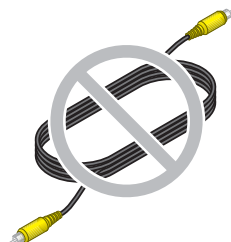


TV without HDMI

1. Notice the yellow plug at each end of the Composite video cable.

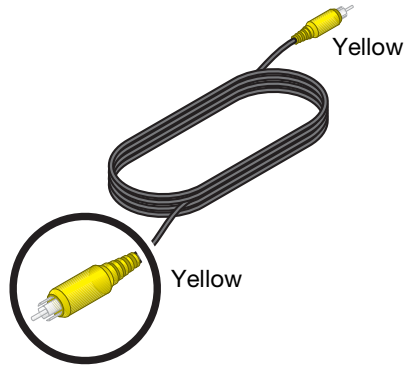

Note: There may be other kinds of video connectors on your TV that offer higher resolution than Composite. To use either S-Video or Component connectors, you need the appropriate cables. These cables are available at most electronics stores.


2. Plug the Composite video cable into the yellow VIDEO IN connector on your TV.

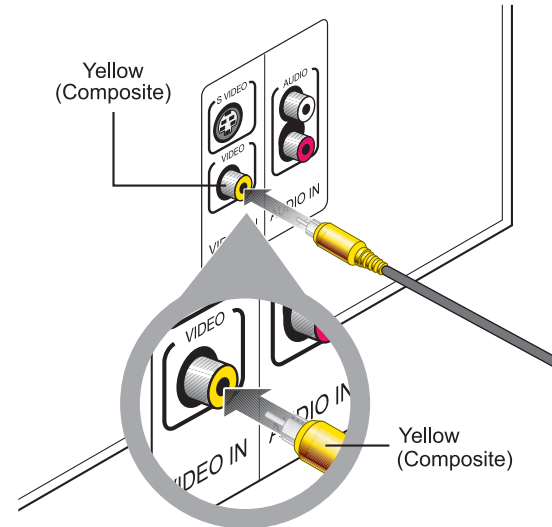

Note: If there is just one Composite Video In connector on your TV, it may be in use already for another video component. You can disconnect that component from the TV, and see "To use video pass through" on page 21.

SETUP

3. Insert the other end into the yellow Composite VIDEO OUT connector on the back of the media center.

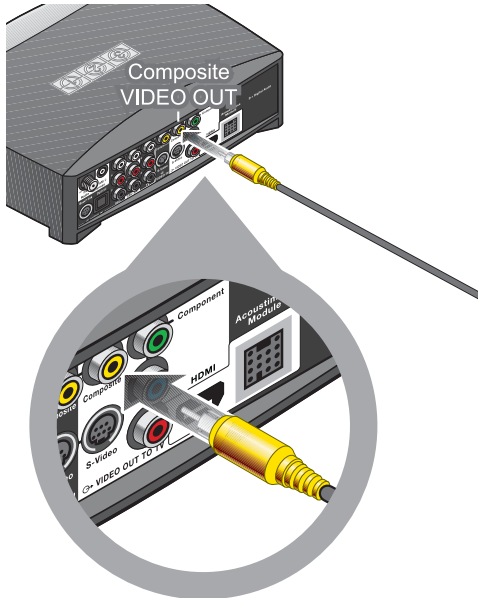



.a

Note: If you make this Composite connection, you can use the *ONLY PASS-THROUGH* connector on the media center for video from another component. See “To use video pass through” on page 21 for further information.

4. Continue with **5** on the next page.


5 Connecting a cable box or other component

What you need to use:

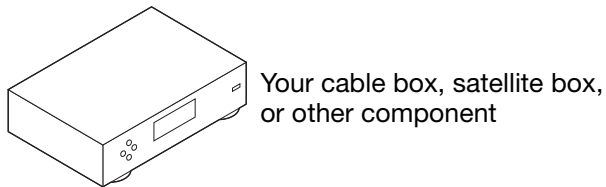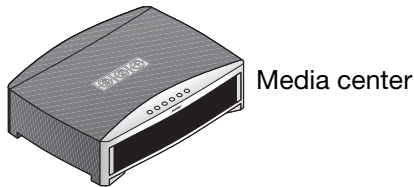


You can listen to another sound source — like a cable or satellite box — through the 3•2•1® speakers instead of your TV.

This requires an audio connection only. Leave the video from your component connected to your TV.

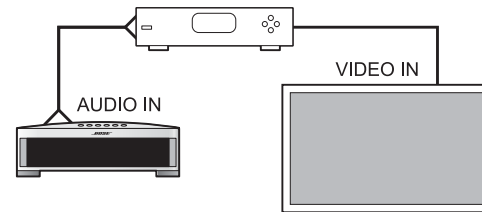

5. Select the audio cable that has red and white plugs at each end.

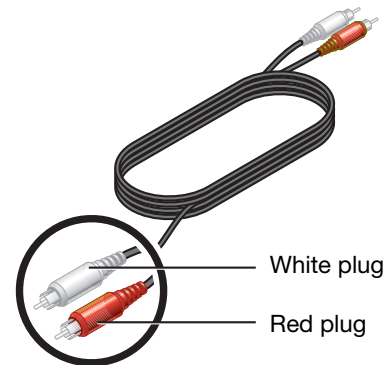


SETUP

6. Check to see if your cable or satellite box has red and white AUDIO OUT connectors.


A red and white audio cable may (a) or may not (b) already be attached to these connectors.

a.

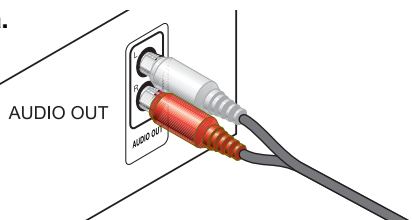

OR

b.

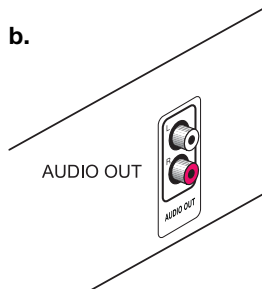


- c. If there are no AUDIO OUT connectors at all, continue with **6** on page 22.

3. To use the AUDIO OUT connectors, follow **a** or **b** as appropriate.


a. If an audio cable is already attached

Disconnect the cable from the TV only.

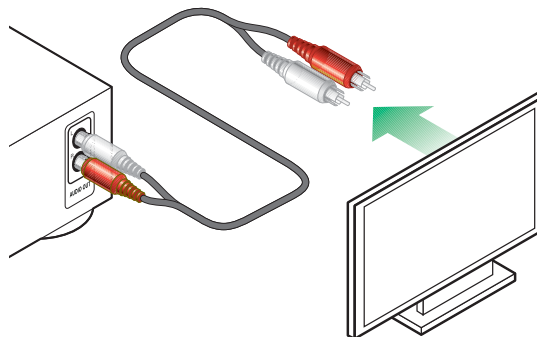


b. If an audio cable is not yet attached

Connect the cable to your cable or satellite box. Be sure to connect red to red and white to white.

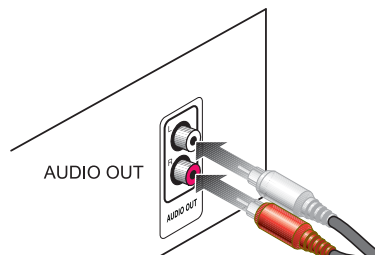


4. Insert the plugs at the other end of the audio cable into the CBL•SAT AUDIO IN connectors on the media center.

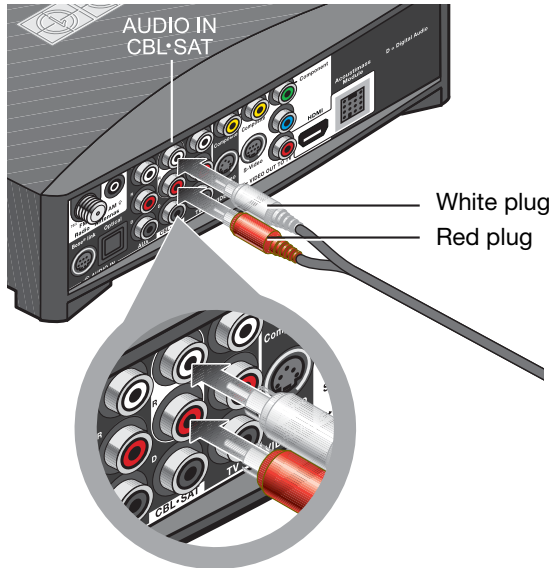

To connect another component

In addition to your cable or satellite box, you can connect a second component, like a VCR. For this you need another audio cable with red and white plugs, available at most electronics stores.

1. Use this additional cable to connect to the AUDIO OUT on your component. Follow the method used in steps 1-3 on the previous pages.
2. Connect the other end of this cable to the AUDIO IN AUX on the 3•2•1® system media center.

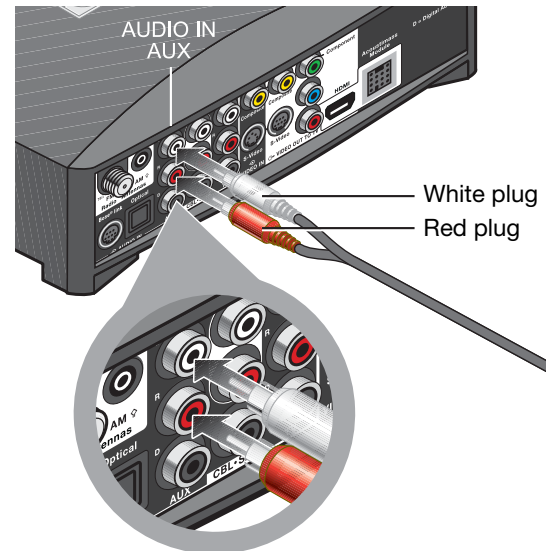


SETUP

To get digital audio from the component


For a component that is already connected to the media center, you can make a digital audio connection too.

For this higher quality audio, you need a digital audio cable that works with your component. Such cables are available at most electronics stores.

1. Identify the digital connector on your component as either an Optical or Coaxial connector.

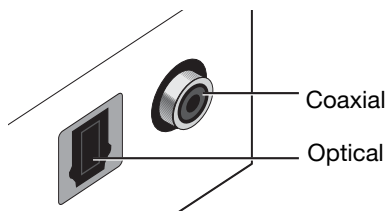

2. Be sure to use the right cable for this connector.

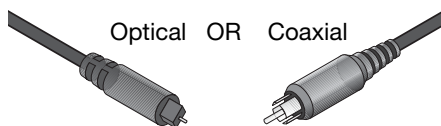


Note: If your component has an Optical and a Coaxial connector, use either one but not both.

3. Connect one end of your digital cable to the digital AUDIO OUT connector on your component.

Be sure to keep the red and white audio cable connected. This allows you to hear the audio if the program audio is not digital or the digital signal is interrupted.

4. Locate the appropriate digital AUDIO IN connector, labeled D, on the system media center.

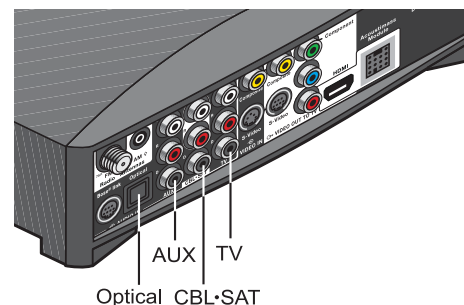


You can make:

- up to 3 coaxial connections
- up to 2 coaxial and one optical connection

Note: The media center Optical connector is factory set to work with a cable or satellite box. If your Optical component is neither of those, you need to select your component in an on-screen System menu. See “Getting digital audio from a source” on page 45.

5. Plug the other end of your digital cable into the appropriate AUDIO IN connector on the media center.

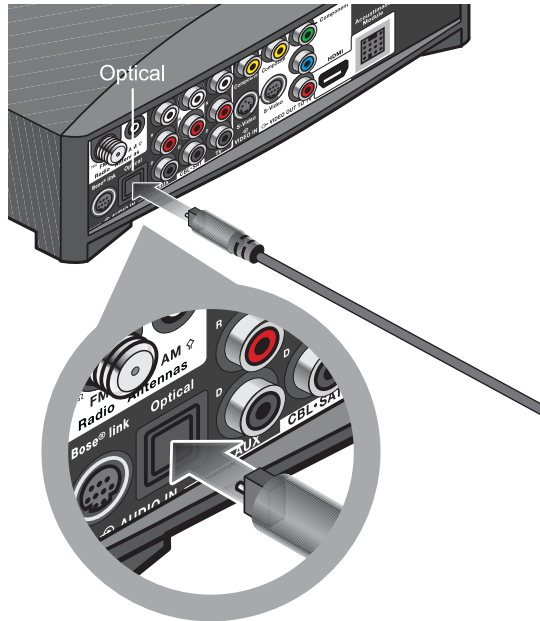

The example here shows an Optical digital connection only.

To use video pass through

This calls for another composite cable or two S-Video cables, which are available at most electronics stores.


You can make a pass through connection if:

- You have a Composite or S-Video connection between the TV and the media center (not HDMI or Component).

AND:

- You want to connect another video component through the media center to the TV.

Be sure to use one matched pair as shown here:

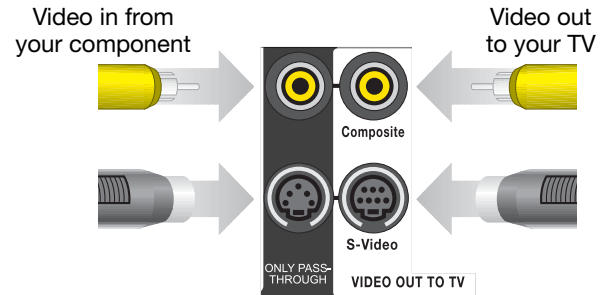


DO NOT use either of the two ONLY PASS-THROUGH connectors (on the left) if you have made an HDMI or Component connection VIDEO OUT TO TV.

Continue with **6** on the next page.

SETUP

6 Connecting audio from your TV as an option


What you need to use:

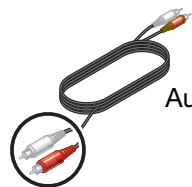

Audio cable



Media center

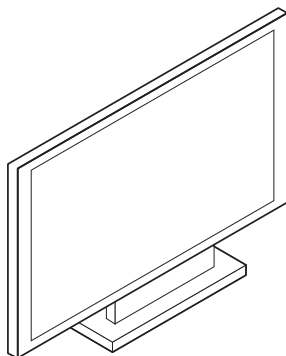

Your TV

For some setups, in order to hear your TV sound from your 3•2•1® speakers, you need to make this connection.


If:

- Your cable box does not provide red and white AUDIO OUT connectors.
- You watch TV programs without using a cable or satellite box.
- You connect a video camera or game console to your TV.

If none of the above apply, continue with **7** on page 25.

Note: If you have already connected the audio cable provided with the system, you need another cable for this connection. These cables are available at most electronics stores.

1. Insert the red and white plugs at one end of the cable into the AUDIO OUT connectors on the TV.

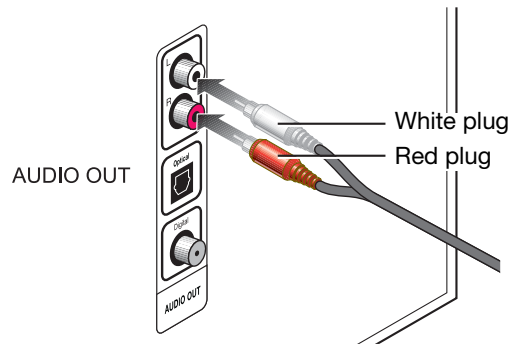

Be sure to match red to red and white to white.


Note: In addition to this connection, you can make a digital AUDIO OUT connection from the TV to the media center. For more information, review “To get digital audio from the component” on page 20.

Note: If your TV does not provide AUDIO OUT connectors, you cannot connect the TV audio to the 3•2•1® system. Continue to use your TV speakers for TV program audio.

The audio from other components that are connected to the 3•2•1 media center will play through the 3•2•1 speakers.


SETUP

2. Insert the red and white plugs at the other end of this cable into the AUDIO IN TV connectors on the media center.

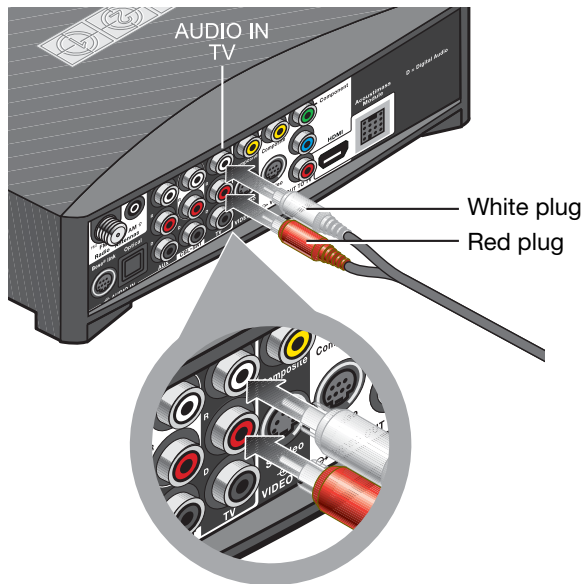

Be sure to match red to red and white to white.



3. Use your TV remote control to turn the TV speakers down to minimum volume.

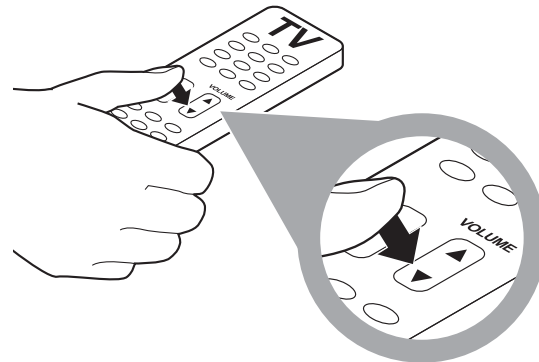

This prevents the echo effect of audio playing through both the TV speakers and your 3•2•1® system speakers.

7 Installing the FM and AM radio antennas


What you need to use:

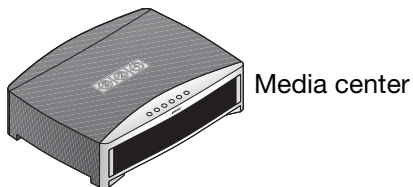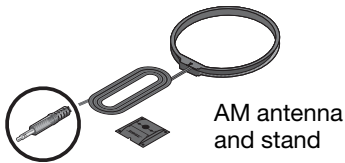


For radio reception of broadcast radio programs, you need to use the supplied antennas.

For FM:

1. Select the FM antenna.

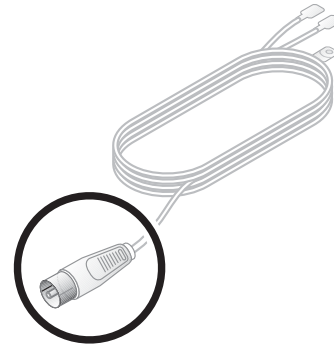

2. Insert the antenna plug into the FM antenna connector.

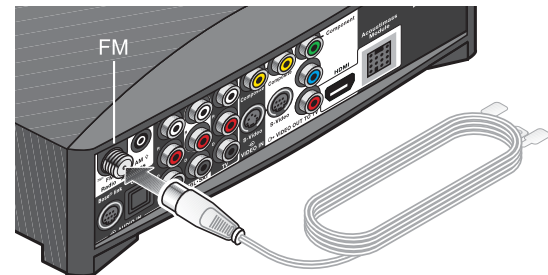

SETUP


3. Straighten the antenna cable and spread the two ends far apart.




You may need to raise the ends and adjust the position to get clear reception.

For AM:

1. Select the AM antenna and stand.

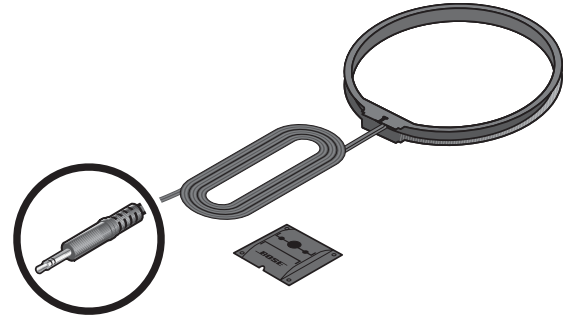


2. Insert the antenna plug into the AM antenna connector.

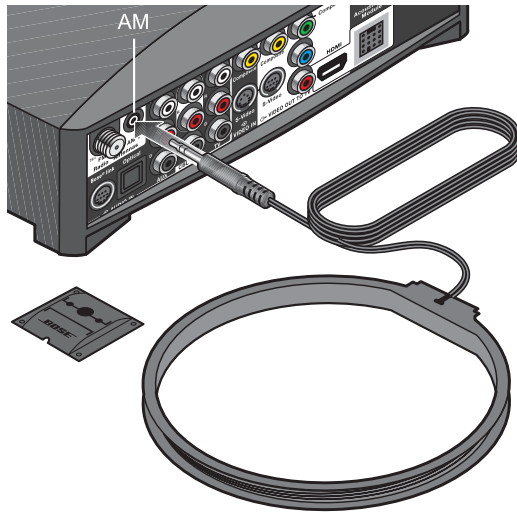

3. Press firmly to attach the antenna loop to the provided stand.

Small tabs on the antenna ring fit into notches on the stand.

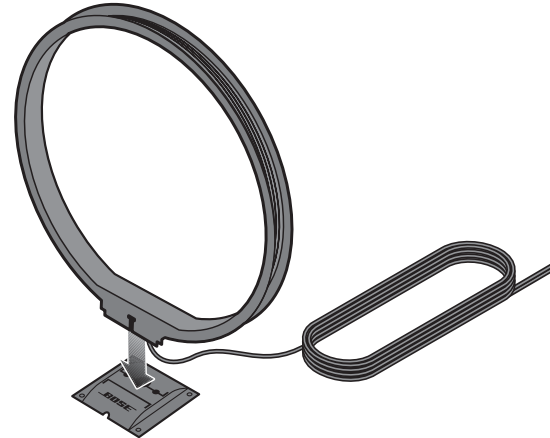

4. Place the antenna in an upright position and at least 20 inches (50 centimeters) from both the media center and the Acoustimass® module.
5. Continue with **8** on the next page.


SETUP

8 Connecting the module to a power outlet

What you need to use:




1. Notice the large plug at one end of the Acoustimass module power cable.

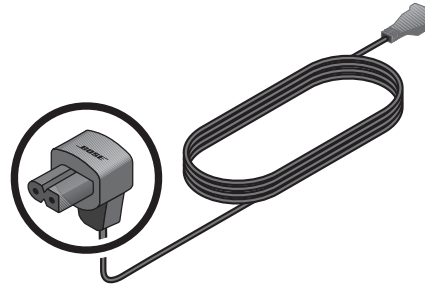

Acoustimass module

2. Insert this plug into the power connector that is marked ~ on the Acoustimass® module.

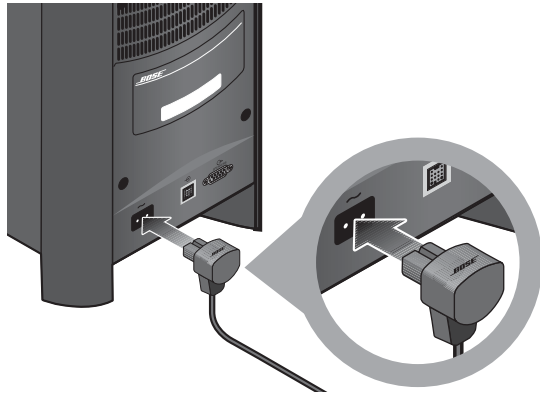

Note: On some systems, the Acoustimass module includes one of two controls.


On 220-240V models only, turn the POWER switch to on (I).



On dual-voltage systems only, set the voltage switch for the power that is appropriate to the region where you use the system.



3. Plug the other cable end into the AC (mains) power.

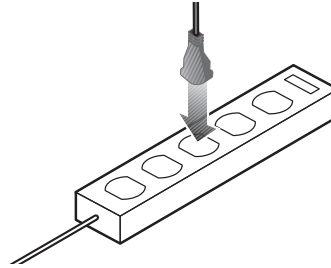

CAUTION: Bose recommends using a safety agency-approved surge protector on all electronic equipment. Voltage variations and spikes can damage electronic components in any system.

Note: Surge protectors are available at most electronics stores.

4. Continue with **9** on the next page.


SETUP

9 Setting the remote to control your TV and components


What you need to use:



Remote control and batteries

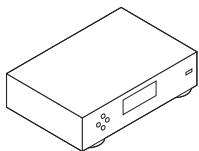

Your component

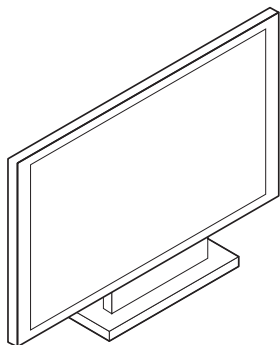


Your TV

When the batteries are installed, you can set the 3•2•1® remote to control your TV and other components connected to the media center.

Inserting the remote batteries


The two supplied AA batteries go into the compartment on the back of the remote control.

1. Slide the battery compartment cover off.

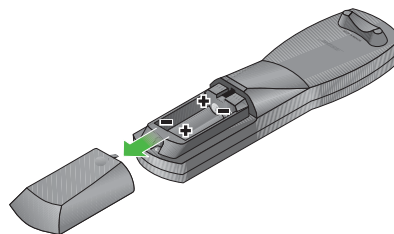

Symbols inside the compartment show how to match the – and + symbols on the batteries.

2. Insert the two batteries, making sure to match the markings.

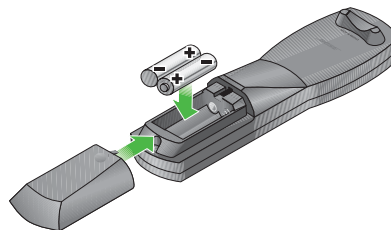

3. Slide the cover back until it clicks into place.

Setting the remote for your TV

To use the 3•2•1® remote with your TV, you must set the remote for the proper TV device code.

1. Refer to the list of “Device codes” on page A-1.
2. In the list for TVs, find the brand of your TV.
3. Write down several codes for your brand so you can try more than one, if needed.

Note: If one code works to turn your TV on and off but does not change channels, you can try other codes to find one that provides more complete TV control.

4. Turn on the TV and your 3•2•1 system.


5. On the 3•2•1 remote, press and hold the TV button for several seconds.



Wait until the red light at the top of the remote turns on.

6. Use the number buttons on this remote to enter the device code for your TV.


The light turns off briefly as you press each key.

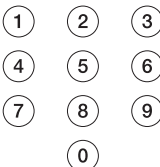

7. Make sure the light turns off completely after all digits are entered.

If the light blinks now, the code is invalid. Return to step 5 and try a different code for your TV.

8. Point the 3•2•1 remote at your TV and press the TV On/Off button.

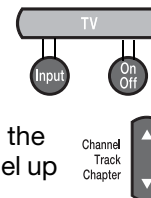

Use the 3•2•1 remote to turn the TV on again and change channels, using the number buttons or by pressing Channel up or down.

If it performs both operations, this code is correct. Write the code numbers below:

If this code does not work, repeat steps 5-8 using a different code for your TV.

Note: For a CD changer or combination CD/DVD player and changer, your brand may not be listed in the CD/DVD device codes on page A-21. In some cases, the same brand of DVD or VCR device codes can work with a changer.

SETUP

Controlling another component

With your CBL•SAT, VCR, or other component turned on, follow these steps.

1. In the Device Codes list, find the codes for the type and brand of your component.

2. On the 3•2•1® remote, press and hold the button for this component for several seconds.




Wait until the red light at the top of the remote turns on.

3. Enter the device code for your component.
The light turns off briefly as you press each key.
4. Make sure the light turns off completely after all digits are entered.

If the light blinks instead of turning off, the code is invalid. Return to step 2 and try a different code for your component.

5. Point the 3•2•1 remote at your component and press the On/Off button for this source.

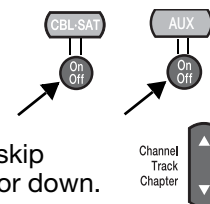

Use the 3•2•1 remote to turn the component on again and to skip forward by pressing channel up or down.

 
If it performs both operations, this code is correct. Write the code numbers below:

If this code does not work, repeat steps 2-5 using a different code for your component.


Trying out the DVD

When you first turn on the system, you can play the provided DVD to get a step-by-step review of your setup.

1. Before you continue, make sure that:
 - All of the cables needed for your setup are connected.
 - Batteries are installed in the 3•2•1® system remote control.
 - The system power cord is plugged in at both ends.
2. Turn on your TV.
 - Use the TV On/Off button on the 3•2•1 remote if you have it set up to control your TV.
 - Or use the remote control that came with the TV.
3. Play the provided DVD.
 - a. Point the 3•2•1 remote control at the media center and press CD/DVD.




- b. On the media center controls, press Eject.
- c. Insert the disc into the disc tray.
- d. Press Eject again to close the tray and begin automatic play.
- e. If the DVD does not begin playing, press the play button on the remote.

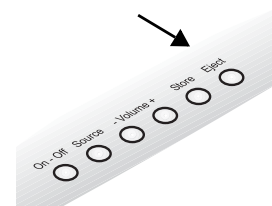

Playing the DVD helps verify that your system setup is correct.

Note: If you do not see the DVD video on your TV screen, change the Video Input on the TV.

Use the TV Input button on the 3•2•1 remote if you have it set up to control your TV.

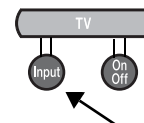

Or use the button for Video Input on your TV remote control. For more information, refer to the owner's manual that came with your TV.

If you STILL do not see the DVD image on your screen, see the problem identified as "Sound, but no picture" under Troubleshooting on page 65.

CONTROLS AND INDICATORS

The remote control

Aim the 3•2•1® remote control at the media center or at the component you are controlling with the remote.

1. Press the white On/Off button near the top of the remote control.

The system turns on to the last used source*, which may be:

- Stored music
- CD•DVD
- FM•AM
- TV
- CBL•SAT
- AUX

If your media center does not respond to the remote:

- Make sure there is nothing blocking the front display where signals are received.
- Aim more directly at the media center.
- Move closer to the system.
The control range of the remote is roughly 20 feet (6.2 meters).

**If your 3•2•1 system is connected by Bose® link cable to a Lifestyle® system in another room, the Lifestyle® system can be the selected source.*

2. Get to know how the remote works:
 - See the brief descriptions on pages 35-38.
 - Try out the various buttons to see how they work.



Power and source buttons



Turns the 3•2•1® system on and off.
Play begins with the source last used.



Silences or restores the sound.



Selects stored CDs as the music source and turns on the system.
Play begins in the play mode last used.

 


Selects the built-in CD/DVD player as source and turns on the system.



Selects the built-in FM/AM radio as source and turns on the system to the station last used.

Switches between FM and AM when the radio is playing.





Selects audio from the TV source and turns your 3•2•1 system on if it was off.

If the remote is set up control your TV:

- Input selects a TV Video Input.
- On/Off turns the TV on and off.

Your remote also provides one of the two buttons shown here:

- For adjusting the on-screen aspect ratio of video from cable, satellite, or TV (but not DVD). 
- For displaying teletext information that is provided with broadcast programs (in Europe only). 



Selects the audio from the device connected to CBL•SAT on the media center rear panel.

Turns your 3•2•1 system on if it was off.

If the remote is set up to control this source, On/Off turns the cable or satellite box on and off.



Selects the audio from the device connected to AUX on the media center rear panel.

Turns your 3•2•1 system on if it was off.

If the remote is set up to control this source, On/Off turns the AUX device on and off.

CONTROLS AND INDICATORS

Menu and movement buttons



Library

Enters the library of stored CD tracks.



Settings

Enters the Settings menu for the source that is playing.



System

Enters the System main menu.



DVD Menu

Displays the DVD menu for the current disc on your TV screen.



Guide

 
Displays an on-screen program guide for any connected video devices that provide a guide.



Exit

Exits the 3•2•1® Settings or System menu.

Exits the on-screen menus or information screens of other connected video sources.



Confirms the selection of a menu item.



Moves up, down, left, or right in a menu or screen.



Tunes the FM/AM radio up or down to the next frequency.

Selects the next or previous item in a menu list.



Volume

Raises or lowers the volume.

- Pressing + raises the volume and unmutes the system (if muted).
- Pressing – lowers the volume.

Channel
Track
Chapter

Skips backward or forward to the next:

- TV, cable, or satellite channel
- CD track
- DVD chapter

Play and numeric buttons



Halts play of recorded music or video.



Pauses or resumes paused play of recorded music or video.



Starts or resumes play of recorded music or video.



Seek

For CD or MP3: Moves to the previous or next track.

- Press and hold scans through a track.

For DVD and DVR: Moves backward or forward in video.

- More presses increase the speed.

For FM/AM: Moves to the previous or next strong radio station.



For CD: Randomly plays the music.

- Pressing again ends random play.

For DVR: Moves backwards a few seconds with each press.

For Stored: In CD#, Playlist, and Whole CD play modes only, plays the music in random order.

- Pressing again ends random play.



For CD or MP3: Repeats the current track.

- Pressing again repeats the disc.
- Pressing three times ends the repeat.

For DVR: Moves forward a few seconds with each press.

For Stored: In CD#, Playlist, and Whole CD play modes only, repeats the track playing.

- Pressing twice replays the entire disc or playlist.



For CD: Selects a track.



For DVD: Selects a chapter.



For TV, cable, or satellite: Selects the channel of the numbers pressed.



For FM/AM: Selects a preset radio station.

For Stored: Selects a uMusic® preset.



Info

For CBL•SAT: Displays or dismisses an on-screen information window (if one is available).

For MP3: Holding down the button displays or dismisses artist and title information on the media center display panel.

For Stored: Displays detailed track information.







Previous

For TV, cable, or satellite: Returns to the channel last selected.

CONTROLS AND INDICATORS





Record and A, B, C buttons (not in Europe)

These buttons can be used with a DVR, VCR, a cable box, or satellite box. This requires that the 3•2•1® remote is set to control the component.

-  Starts DVR or VCR recording of the cable, satellite, or TV program that is playing.
-  Makes a selection from a cable on-screen List A.
-  Makes a selection from a cable on-screen List B.
-  Makes a selection from a cable on-screen List C.

Colored buttons (in Europe only)

These buttons can be used with Teletext, a cable box, or a satellite box.

-  Red – Selects the screen content labeled red.
-  Green – Selects the screen content labeled green.
-  Yellow – Selects the screen content labeled yellow.
-  Blue – Selects the screen content labeled blue.

uMusic® buttons



Selects the uMusic intelligent playback system for stored music play.
Ends other stored music play modes.



Applies a negative (–) or positive (+) rating to stored music.

Ratings can be applied to the track that is playing or to music that is selected in the stored music library.

– ratings end play of the current track and begin a new selection.

+ ratings continue playing the current track.



Selects and plays stored music that matches features of the current track.



Plays tracks of a CD chosen by number in the uMusic system.



Plays all tracks in the playlist (if one is set up).

Other play modes, such as Encore, may be applied while the playlist is selected.




Skips the currently playing track to begin play of the CD that included this track.
Plays all tracks on the CD in order.

The media center

The front of the media center features:


Control buttons

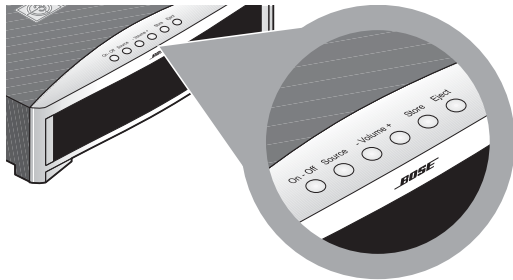

On•Off	Turns the system power on or off.
Source	Displays and sets the choice of play options.
– Volume +	Lowers or raises the volume level.
Store	Copies audio CD tracks into the library.
Eject	Opens or closes the disc tray.

Note: When you use the Source button on the media center to select a connected component for play, your 3•2•1® remote will not control that component. Press the CBL•SAT or AUX button on the remote to control that source.

Display

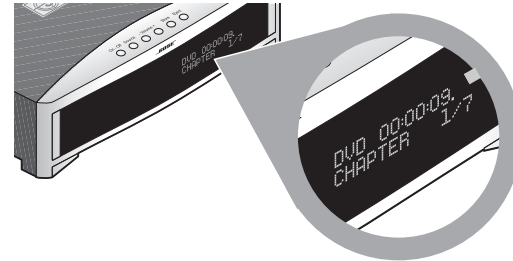


When the system is turned on, the display shows:

- selected source (CD/DVD, for example)
- source status (stopped, for example)
- source data (elapsed DVD time, for example)
- system status (like disc tray OPEN, shown below)

Disc tray

Use the Eject button to open and close this tray. Do NOT push the tray to close it.

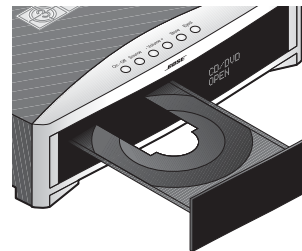

OPERATION

Playing a video disc or CD

1. Press CD•DVD on the 3•2•1® remote.

This turns on the 3•2•1 system and selects the CD/DVD source.

For video play, also turn on the TV.

You may need to change the TV Video Input to see the correct video.

Note: To prevent mid-play video disc problems, be sure the disc is clean. This is particularly important with rented DVDs.

2. On the media center control panel, press Eject to open the disc tray.
3. Place the disc (right side up) in the tray.
4. Press Eject again to close the tray.

The disc begins to play automatically.


If not, press Play on the 3•2•1 remote.

The media center display registers disc information and progress as the play continues.

Note: If the display text is not in your language, see “Language choices” on page 48.

Note: There are several ways to select a TV Video Input:

- If your 3•2•1 remote is set to work with your TV, press the TV Input button.
 - If the remote is not set to work with your TV, use the Input button on your TV remote control. Or see your TV owner's guide for instructions.
-

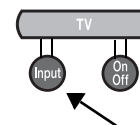

Selecting a play option

If you want to:

Interrupt play, press Pause on the remote control.



- To resume playing a paused disc, press Pause again. Or press Play.



Halt play, press Stop.



- To resume playing a stopped disc, press Play.
- To restart the disc at the beginning, press Stop once more and then press Play.



Skip to the next CD track or DVD chapter, press Chapter up.



Skip to the previous CD track or DVD chapter, press Chapter down.

Replay part of the disc, press Repeat.

- Press once to replay the CD track or DVD chapter.
- Press twice to replay a CD disc or DVD title.
- Press three times to end the replay.



Scan backward or **forward** through the disc, press and hold Seek reverse or Seek ahead.



Press Play to end the scan.




Stop a disc **and open** the disc tray, press Eject on the media center.

Keeping your discs clean

Scratches or dirt on a disc can prevent it from playing properly.

To avoid this problem:

- Handle discs by their edges to prevent fingerprints and scratches. Return them to their cases after use.
- Avoid exposing discs to:
 - chemical products that can cause damage.
 - writing directly on the disc or on a label attached to the disc.
 - direct sunlight, high temperatures, and humidity
- Use a soft, dry and lint-free cloth to clean the disc. Wipe straight out from the center to the edge.

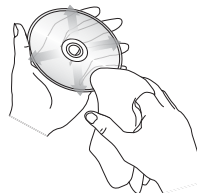

Do not use
a circular
motion




OPERATION

Checking for disc compatibility

If you have trouble playing a disc, check to be sure it is one of the compatible types below.

- Video DVD 
- Video CD 
- DVD-R, DVD-RW
- Audio CD 
- CD-R
- SACDs (CD-compatible content only)
- MP3 CDs:
 - burned in a single closed session
 - in disc format ISO9660
 - with .mp3 as the extension and no other periods in the file name.

Region codes

For any DVD player and DVD disc to work together, the code for the region where they were sold must match. A code symbol is marked clearly on the bottom of your system media center and on the DVD cover (where it may be very small). For example, Region 1 is .


Copy protection

Music and other content may be protected by international and domestic copyright laws and may contain specific restrictions on use and/or reproduction. Please respect the rights of the artists and other copyright holders.

For DVDs: Setting Parental Control

You can password protect some DVDs that are not appropriate for other family members.

Choosing a password

1. Turn on your TV and your 3•2•1® system.
Be sure to select the same TV Video Input that you use to watch a DVD.
2. Press the System button on your 3•2•1 remote control.
The System menu appears on screen.
3. Press the right arrow button to select the DVD Lock icon .
4. Press ENTER.
5. Use the number buttons to create your four-digit password.

Setting a restriction level

1. Choose a Parental Control Setting from the chart of ratings defined by the Motion Picture Association of America (MPAA).

Ratings supplied by the MPAA

Parental Control Setting	MPAA Rating	Audience Restriction
8		None
7	NC-17	Adult audiences
6	R	Mature audiences
5		Mature teenage audiences
4	PG-13	Teenage audiences
3	PG	Mature young audiences
2		Most audiences
1	G	General

The numbers above the one you select will be restricted.

 
2. In the System menu, select DVD Lock and enter your password.
3. Use the arrow buttons to reach Lock UnRated Discs and select Yes.
4. Move down to Lock Discs Rated Above and right to the numbers.
5. Press the up or down arrow button to select a number.
Any numbers above this selection will be restricted by password protection.
6. Press ENTER to save this setting and Exit to move out of the System menu.

OPERATION

Playing a cable box or other component


1. Press the button for the source (CBL•SAT or AUX) you want to play.

This turns on the 3•2•1® system to the selected source.



2. Turn on your component and, if it is a video source, turn on the TV.

 If the 3•2•1 remote is set to control the component, you can press the source On/Off button on the remote.



3. Choose the proper Video Input on your TV if the source is a video component.


Adjusting for audio delay

While playing a DVD, you may notice that the picture and audio are not in perfect sync. For example, you see a person's lips move after you hear the words.

To make small adjustments to this timing, use the audio delay setting on the 3•2•1 system:

1. Press the Settings button on the 3•2•1 remote control.

The Settings menu appears on screen.

2. Move down to the audio delay icon  and press ENTER.

3. Select an adjustment (1-8) and wait to see if this corrects the problem.


Each selection makes a minute timing adjustment. It may be difficult to notice the change.

Getting digital audio from a source

For an Optical digital audio connection to the media center, the connected component must be recognized by the system.

Currently, the system is set to recognize CBL•SAT as the Optical component.

If the Optical connection is for a different component:

1. Display the 3•2•1® system menu on the TV by pressing System.
2. Move right to the Media Center icon  and press ENTER.
3. Move down to Optical Source and press ENTER.
4. Move up or down to select a component from the list and press ENTER.
5. Press Exit to leave the System menu.

Note: When using your 3•2•1 system with the TV, turn the volume on your TV set all the way down. This prevents an echo effect from two sets of speakers playing.

Choosing other options

The 3•2•1 system provides optional settings and adjustments to meet your specific needs.

For example you can:

- Set a countdown time for the system to turn off automatically.
- Choose another language for text on the media center display and in system menus.
- Adjust the bass or treble audio compensation.
- Change the image format on your TV screen.

Note: Your TV may provide an on-screen menu to make changes to the video image.

For a full list and description of these options, see “Adjustments to the performance” on page 47.

OPERATION

Listening to the radio

Your 3•2•1® system includes an FM and AM radio.

1. On the 3•2•1 remote, press FM•AM.



This turns on the 3•2•1 system and plays the radio station last selected.

2. Press the FM•AM button to switch between FM and AM.

3. Press the Channel up or down buttons to tune from one station to another.



To tune to:

- A preset station, press the Preset number button.
- The next clear station, press a Seek button.

Creating a preset

You can assign a preset number for 20 FM and 20 AM stations. Then, by pressing the preset number, you tune immediately to the particular station:

1. Tune to the station you want to assign to a preset.
2. Choose the number you want to assign to that station.

3. Press and hold the chosen number button:

- For numbers 1 through 9, press and hold the button.

PRESET:x* SET appears briefly on the media center display.

- For numbers 10 through 20, press the first number, then press and hold the second number.

PRESET:xx* SET appears briefly on the display.

Removing a station from a preset

1. Press the number of the preset.
2. Listen to be sure this is the preset you want to erase.
3. Press and hold zero.

PRESET:xx* ERASED appears briefly on the display.

**x represents the number you select.*

ADJUSTMENTS TO THE PERFORMANCE

Changing system features

If your system operates as you want it to, you may not need any changes.

Some kinds of setup, however, require a change for optimal performance. In most cases, you make a System change just once.

The features that you can change include:

- Stored CDs*
- Audio
- Video
- Media Center
- DVD Lock

Using the DVD Lock feature is described in “Playing a video disc or CD” on page 40.

For details on the other options available, refer to the tables on the pages that follow.

To get to the System menu


The System menu appears on your TV screen only.

1. Turn on your 3•2•1® system.
2. Turn on your TV and select the TV Video Input that you use to watch a DVD.
3. Press the System button on your 3•2•1 remote.
The System menu appears on your TV screen.
4. To get into the menu, move right and select an icon (like Media Center, shown on page 48) for one of the system features.
The list of options appears on the menu screen.

Note: *Entering the System menu pauses a DVD or CD.*

*Refer to the separate uMusic® booklet for information on this source.

ADJUSTMENTS TO THE PERFORMANCE

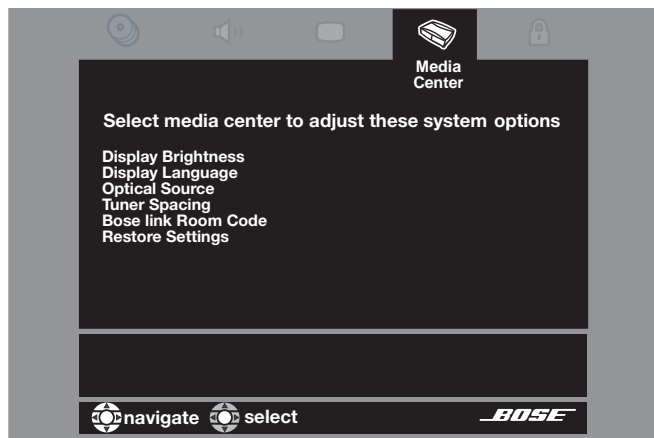

Selecting a new option

1. Make sure you see the System menu on your TV screen.
2. Move right to select the system feature you want to change and press ENTER.
3. Press the up and down buttons to move to the option you want.

As explanation for each options appears at the bottom of the menu when you highlight the option by moving up or down.
4. Press ENTER to select the option.
5. Change the option by selecting a new setting (or by pressing number buttons, as needed).
6. Press Exit to leave the System menu.

Language choices

You can select the language you prefer to see on-screen and on the media center display. To make this change, move to the Display Language option in the Media Center feature of the System menu.

Audio options

These options affect the way the system sounds in your home.

Option	Default Setting (Options)	Description
Bass Compensation	0 (-14 to +14)	Zero is for standard low-tone performance. – decreases and + increases these low tones.
Treble Compensation	0 (-14 to +14)	Zero is for standard high-tone performance. – decreases and + increases these high tones.
Audio Processing	Automatic (User Adjustable)	Keeps Bose® processing as the standard. Allows some processing options (Movie EQ, Range Compression, Mono Decoding) to appear in Settings menus.
Input Levels: TV Analog Input Level TV Digital Input Level CBL•SAT Analog Input Level CBL•SAT Digital Input Level AUX Analog Input Level AUX Digital Input Level	Normal (-6, -3, +3, +6)	Decreases or increases the volume level setting for the input of a connected component. This minimizes abrupt volume changes when you switch from DVD or FM•AM audio on the Bose media center to audio from a connected component. <i>Note: To match AM and FM levels, which can vary depending on the program or station, adjusting the volume on your audio component may be preferable.</i>
DVD Audio (Only for TVs connected to the media center by HDMI cable.)	Bose 3•2•1 (TV Stereo)	Plays the DVD audio from 3•2•1® media center over the 3•2•1 speakers. Sends two channels of DVD audio by HDMI cable to the TV and plays this sound on the TV speakers as well as on the Bose® speakers.

ADJUSTMENTS TO THE PERFORMANCE

Video options

These options affect the way the picture looks on your TV.

Option	Default Setting (Options)	Description
<p>Widescreen TV</p> <p>Note: If your TV is connected using an HDMI cable, you may not see a choice of settings.</p>	<p>Yes (16:9) (No 4:3)</p>	<p>Yes tells the system that widescreen (16:9) is the TV format.</p> <p>No tells the system that 4:3 is the TV format.</p> <p>For a TV connected using a Composite, S-Video, or Component cable, selecting No also makes available the DVD Image option (below).</p> <p>Note: If you are not sure what type of cable is used to connect your TV, check the Video Connector indicator, which is explained on page 51.</p>
<p>DVD Image</p> <p>Note: This option is NOT available UNLESS you have selected No in the Widescreen TV option (above) for your TV connected using a Composite, S-Video, or Component cable (not HDMI).</p>	<p>Modified (Original)</p>	<p><u>For a TV connected using an HDMI cable:</u></p> <p>Modified allows the Bose® system to automatically provide the resolution that is preferred for your TV (usually 720 or 1080), so the image fills the screen. You can change this video resolution in the Settings menu.</p> <p>Original tells the Bose® system to keep the image in the original DVD format (in 480 or 576 resolution), regardless of how it fills the screen. No change can be made to this video resolution in the Settings menu.</p> <p>(Some TVs determine automatically how to fill the screen, overriding any choice.)</p> <p><u>For a TV connected using non-HDMI cable:</u></p> <p>Modified allows the Bose system to adjust the images on some <u>widescreen</u> DVDs to fill a 4:3 TV screen. This is done by removing the black bars on top and bottom and by cropping the sides of the image. (Many DVD images, even widescreen, will still appear with black bars on top and bottom.)</p> <p>Original tells the Bose system to keep the image in the original format of the DVD. A <u>widescreen</u> DVD image will have black bars on top and bottom.</p>

Option	Default Setting (Options)	Description
Video Connector (Only an indicator.)	(HDMI) (Composite + S-Video) (Component)	Identifies the type of video connection made on the back panel of the media center. This is not an adjustable setting.
Video Black Level (Appears on screen only if the TV connects to the media center using a Composite or S-Video cable.)	Normal (Extended)	Screen black level generally appropriate for most TVs. Darkens the intensity of the black on screen.
TV Video Format	NTSC - US (PAL - EUROPE) (MULTISTANDARD)	Correct for NTSC (U.S. standard) monitors. Correct for PAL (European standard) monitors. Only for a TV that supports multiple formats (NTSC and PAL).
Progressive Scan (Appears on screen only if the TV connects to the media center using a Component cable. It is not needed with HDMI.)	Off (On) Note: If selecting On distorts your screen, press the remote up arrow to reselect Off.	Screen image repaints in standard style. Screen image repaints in advanced style (if your TV provides this option). Note: With an HDMI connection, you will not see the On option. The HDMI cable automatically senses your TV capabilities and applies progressive scan as appropriate.

ADJUSTMENTS TO THE PERFORMANCE



Media center options

These options affect general operation of the system.

Option	Default Setting (Options)	Description
Display Brightness	4 (1 to 4)	Media center display shows text at its brightest. Choosing a lower number darkens text on the display.
Display Language	English (Dansk, Deutsch, Español, Français, Italiano, Nederlands, Svenska)	On-screen display menus appear in the selected language.
Optical Source	CBL•SAT (TV, AUX)	Set for a component connected by Optical cable to the CBL•SAT AUDIO IN on the 3•2•1® media center. Identifies a different component connected by Optical cable to the media center.
Tuner Spacing	US (European)	Applies the regional standard for incremental spacing between AM and FM stations.
Bose Link Room Code	B (C, D, E, F, G, H, I, J, K, L, M, N, or O)	Links the 3•2•1 system to a unique code so it works with Bose® link as a second room sound source. Bose link expansion is a Lifestyle® system feature.

Option	Default Setting (Options)	Description
uMusic Preset	1 (2, 3, 4, 5, 6, 7, 8, 9)	The Preset selected for making edits.
uMusic Preset Action	Edit Name Clear Playlist Clear Ratings	Opens a screen for naming or renaming the selected uMusic® Preset. Empties the system playlist. Deletes all ratings entered in the selected uMusic Preset.
Restore Settings	No (Yes)	Maintains your established changes in the Settings menu. Returns all of your selections in the Settings menu to the original factory settings.

ADJUSTMENTS TO THE PERFORMANCE

Choosing new settings

You can use the 3•2•1® Settings menus for quick adjustments while you watch a video or listen to music.

For example, if you want to change the screen resolution for DVDs, you will find that option in the TV Settings menu.

To see these options, enter the Settings menu for the selected source. Symbols and definitions for the options that are offered appear on screen.






Note: *Some of the settings made while you are playing a particular source are temporary. When you change sources or turn off the system, these settings revert to the factory selections.*

To get to the Settings menu




1. Use the 3•2•1 remote to select the audio or video source that you want to change.
2. Press the Settings button.
The Settings menu that affects this source appears on your media center display.
It also appears on screen if your TV is on and you select the proper TV Video Input.
3. Move up or down to the option you want and press ENTER.
4. Move right to select a new setting for that option and press ENTER.
5. Press Exit to leave the Settings menu.

The Settings menu appears as a vertical bar of icons. To familiarize yourself with the icons, see “Settings options” on pages 55-59.







Settings options

	Features	Default Setting (Options)	Effect
 	<p>Audio Delay</p> <p><i>Available only for DVDs and connected video components.</i></p>	<p>0</p> <p>(0, 1, 2, 3, 4, 5, 6, 7, 8)</p>	<p>Each number change adjusts the delay by about 30 milliseconds.</p> <p>The most noticeable mismatch in the video and audio synchronization (caused by the video processing in some TVs), occurs in scenes with people talking.</p> <p>If they appear to finish sentences before their lips stop moving, select a different Audio Delay setting to correct this condition.</p>
 	<p>Movie EQ</p> <p><i>Available only if Audio Processing is set to Adjustable in the Audio System menu.</i> <i>(Not available for CD or FM-AM.)</i></p>	<p>Off</p> <p>(On)</p>	<p>Leaves the equalization of the movie soundtrack as originally recorded.</p> <p>Adjusts the equalization of the movie soundtrack to better suit some home theater installations.</p> <p>Note: To turn on Movie EQ, the Audio Processing option in the System menu must be set as User Adjustable.</p>
	<p>Range Compression</p> <p><i>Available only if Audio Processing is set to Adjustable in the Audio System menu.</i> <i>(Not available for CD or FM-AM.)</i></p>	<p>Off</p> <p>(On)</p>	<p>Leaves the volume range of the movie soundtrack as originally recorded.</p> <p>Reduces the volume range of sounds on a movie soundtrack.</p> <p>Late at night or at other quiet times, the startling difference between the quietest and loudest audio passages in a movie can be a problem. Turning this feature On moderates those effects.</p> <p>Note: To turn on Range Compression, the Audio Processing option in the System menu must be set as User Adjustable.</p>





ADJUSTMENTS TO THE PERFORMANCE

	Features	Default Setting (Options)	Effect
  	Mono Decoding <i>Available only if Audio Processing is set to Adjustable in the Audio System menu. (Not available on CD or FM-AM.)</i>	Off (On)	When one-channel (mono) is the audio input, this mono signal is sent to both speakers. Processes the signal from one-channel (mono) audio input (if it is detected) for right and left channel output.
	Audio 1 + 1 <i>Available only if a dual mono signal is detected on a video CD or digital broadcast.</i>	1 (2, Both)	Allows you to decode and play bilingual audio from a VCD or single-channel digital broadcast. When the digital audio content is on two channels, each channel carries a unique mono soundtrack (1 + 1). Changing this setting allows you to hear the audio on mono channel 2, or both mono channels at the same time.
	Video Resolution <i>Adjustable only for a TV connected by HDMI AND only if the DVD Image setting in the System menu is Modified.</i>	_____ * Default (1080p, 1080i, 720p, 480/576p, 480/576i)	Your 3•2•1® system sets its DVD video resolution to match the default that is communicated to it by the TV. You can experiment with other settings to see which one provides the best picture. HDTVs can accept different resolutions as input, and in some cases the highest number does not result in the best picture. Important note: When you change resolution, your TV screen takes several seconds to make the transition. Allow for this adjustment before pressing other buttons.




ADJUSTMENTS TO THE PERFORMANCE

	Features	Default Setting (Options)	Effect
	Time (For DVD only.)	_: _ _ (0:00)	Changing the elapsed time moves to a different point in the DVD.
	Title (For DVD only.)	__ of __	Changing the first number moves to a different title on the current disc. Some DVDs do not allow direct access to titles.
	Chapter (For DVD only.)	__	Changing this number moves to a different chapter on the current disc. Some DVDs do not allow direct access to chapters.
	Audio Track (For DVD only.)	Dependent on disc	Gives you a choice of audio tracks on the current disc.
	Subtitle Language (For DVD only.)	Dependent on disc	Gives you a choice of subtitle languages (if several are included on the disc).
	Camera Angle (For DVD only.)	1 of __	Gives you a choice of camera angles (if several are included on the disc).

ADJUSTMENTS TO THE PERFORMANCE

	Features	Default Setting (Options)	Effect
	A-B Repeat (For DVD only.)	A, B	<p>Repeats a segment of the DVD after the start and end points are defined. To begin:</p> <ol style="list-style-type: none"> 1. Move backward or forward to the point in the DVD where you want the segment to start. 2. Press ENTER. 3. Move to the point where you want it to end. 4. Press ENTER. <p>Repeats until you select this setting option again and press ENTER.</p>
	Track (For CD only.)	__ of __	Changing this first number moves to a different track on the current disc.
	Sleep Timer	Off (10-90)	<p>Setting countdown minutes causes your 3•2•1® system to turn off when the time reaches 0.</p> <p>The choices, from 10 to 90 minutes, are divided into 10-minute increments. To cancel the timer, select Off.</p>
	Output Mode (For FM only.)	Auto (Mono-Stereo)	<p>Allows you to choose stereo or monaural (mono) audio performance by selecting:</p> <ul style="list-style-type: none"> • Auto – The FM tuner will automatically play in stereo if that is available. Otherwise, it will play in mono (single channel). • Mono – The FM tuner will always play in mono. • Stereo – The FM tuner will always play in stereo if available. Otherwise, it plays mono. <p>When you change the tuner frequency, the setting resets to Auto.</p>

ADJUSTMENTS TO THE PERFORMANCE


	Features	Default Setting (Options)	Effect
	RDS Info <i>(For FM and only on some systems.)</i>	On (Off)	Displays any station and program information that is available from the Radio Data System.
	uMusic Preset	1 or the last preset used (1-9 or names)	Displays the number or name of the current preset for editing.
	Play Mode <i>(An indicator only.)</i>	uMusic (Library, Encore, CD#, Playlist, Whole CD, Shuffle, Repeat)	Shows which stored music play mode is currently selected. This is not an adjustable setting.

REFERENCE

Replacing remote batteries

Replace both batteries when the remote control stops operating or its range seems reduced. Alkaline batteries are recommended.

1. Slide open the battery compartment cover on the back of the remote.
2. Remove both batteries.
Be sure to dispose of the batteries according to the regulations in your area.
3. Insert two AA (IEC-R6) 1.5V batteries, or the equivalent. Match the + and – symbols on the batteries with the + and – markings inside the compartment.
4. Slide the battery compartment cover back into place.

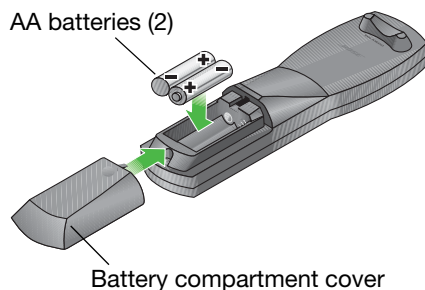

Protecting the system

Follow the guidelines below for keeping the system in good working order.

- Do not allow liquids to spill into any openings.
- Do not use any solvents, chemicals, or cleaning solutions containing alcohol, ammonia, or abrasives.
- Do not use any sprays near the system.

Cleaning the media center

Use only a soft, dry cloth to clean the outside surfaces of the media center.

Cleaning the speakers

Use a soft, damp cloth. Or use an ammonia-free window cleaner on a soft cloth to maintain the finish.

Troubleshooting

System issues	What to do
System doesn't turn on	<ul style="list-style-type: none"> • Make sure the Acoustimass® module power cord is inserted securely into the AC (mains) power outlet and into the power connector on the Acoustimass module. • Be sure to press a source button (CD•DVD, CBL•SAT, etc.) on the 3•2•1® remote. • Unplug the power cord for 60 seconds, then plug it in again. This allows the unit to reset itself after a power surge or power interruption. • For a 230-240V system (used typically in Europe), make sure the power switch on the Acoustimass module is turned on (I). • For a dual voltage 3•2•1 system only, make sure the voltage setting is correct for your region. If it is set to 115V, the system may not operate in a 230V region. <p>CAUTION: Do not change the voltage switch from 230V to 115V unless you are certain it is appropriate for the power supply in your location.</p>
No sound	<ul style="list-style-type: none"> • Increase the volume. • Check to see if MUTE is lit on the display. If it is, press the Mute button on the remote control to unmute the sound. • Be sure that you have pressed the correct source button (CD•DVD, CBL•SAT, etc.) on the 3•2•1 remote. • Check the audio connections for the component you want to play. • Connect the FM and AM antennas. • Make sure that the cable between the Acoustimass module and the media center is connected securely. • Check connections between the speakers and the Acoustimass module. • Turn off the media center for 60 seconds, then on again, to restore communication between the media center and the speakers.
Sound is distorted	<ul style="list-style-type: none"> • Make sure speaker cables are not damaged and the connections are secure. • Reduce the volume level on the external device playing through the 3•2•1 system speakers.
Sound is marred by a loud hum or buzz	<ul style="list-style-type: none"> • Try plugging your system into a different AC outlet. • Check to see if your media center and its audio input cable are within 3 ft (1 m) of any other electronic or electrical device. Some examples are a TV, cable box, VCR, wireless internet router, dimmer switches, blinking lights, or microwaves. • Move the media center farther away and notice if the humming still occurs.

REFERENCE

System issues	What to do
No sound from TV only	<ul style="list-style-type: none"> • If your TV has Variable instead of Fixed audio output, you need to turn off the TV speakers internally. Refer to your TV owner's guide and follow the instructions provided there.
Speech and lip movement on screen are not in sync	<ul style="list-style-type: none"> • Adjust the Audio Delay using the Settings menu on screen. For details, refer to "Choosing new settings" on page 54.
Radio does not work or has poor reception	<ul style="list-style-type: none"> • Make sure the antennas are connected and positioned as shown in "Installing the FM and AM radio antennas" on page 25. • Adjust the FM antenna position to reduce interference. • Move antennas farther from the media center, TV, or other electronic equipment. • Select another station. You may be in an area of weak signal coverage for some stations.
Volume level changes when another sound source is selected	<ul style="list-style-type: none"> • Change the Audio Level for the source input so its volume matches the volume of the radio and DVD in the Bose® system. Refer to "Audio options" on page 49.
Remote issues	What to do
3•2•1® remote does not control your TV, CBL•SAT, or AUX component	<ul style="list-style-type: none"> • Make sure that the remote is set to control the component. Refer to "Setting the remote for your TV" on page 31. • Make sure that the front of the component is not obstructed. • Reset the remote using a different device code for the component you want to control. Refer to "Device codes" located at back of the book. There may be several codes that can turn the component on and off, but only one that provides further control (channel changing, for example).
3•2•1 remote behaves erratically or does not work	<ul style="list-style-type: none"> • Aim the remote at the front of the media center. • Make sure the battery polarity (+ and –) matches the polarity marked in the battery compartment. • Install new batteries. Refer to "Replacing remote batteries" on page 60.

Video issues	What to do
Sound, but no picture	<ul style="list-style-type: none"> • Make sure the TV is on. • Make sure the TV is set to the correct Video Input to see the video from DVDs on the Bose® system. • Make sure a DVD is in the disc tray. • If the TV is connected to the media center using the HDMI cable: <ul style="list-style-type: none"> – Switch from one Video Input to another and then back to the original input. – Turn everything off, then: <ul style="list-style-type: none"> A. Turn on the TV and set the TV Video Input for the Bose system video. B. Turn on the 3•2•1® system and press DVD. – Turn off both the TV and the 3•2•1 system and then: <ul style="list-style-type: none"> A. Unplug the HDMI cable from both ends. B. Disconnect the power cables from both your TV and the 3•2•1 Acoustimass® module. C. Re-connect power to the television and to the Acoustimass module. D. When the 3•2•1 startup message disappears from the display, re-connect the HDMI cable. E. Turn on the TV first, then turn on the 3•2•1 system. – Disconnect the HDMI cable that connects the TV to the 3•2•1 media center. Reconnect the two using a Component cable, an S-Video cable, or the Composite cable provided with the system.
Incorrect picture for the selected source	<ul style="list-style-type: none"> • Make sure the TV is set to the correct Video Input.
Picture is black and white, flickers, gets dark, or rolls	<ul style="list-style-type: none"> • Check the video cable connections. • If the media center is connected to the TV using a Component cable, make sure the colored cable plugs (red, green, and blue) match the connector colors on the media center and on the TV. • Check the Video Format setting (NTSC or PAL) and change it. Refer to “Video options” on page 50.
Picture is not clear or is unstable	<ul style="list-style-type: none"> • Use the Settings menu to lower the output resolution of the system. Your 3•2•1 system sets its DVD video resolution to match the default that is communicated to it by the TV. You can experiment with other settings to see which one provides the best picture. <p>HDTVs can accept different resolutions as input, and in some cases the highest number does not result in the best picture.</p>

REFERENCE

Disc issues	What to do
<p>DVD or CD does not play</p> <p><i>Note: If you are using the HDMI cable between the TV and media center, there are other possible solutions in "Sound, but no picture" on the previous page.</i></p>	<ul style="list-style-type: none"> • Make sure the Acoustimass® module power cord is inserted securely into the AC (mains) power outlet and into the power connector on the Acoustimass module. • Check to see if the Play symbol in the display is lit. • After pressing the CD•DVD button, wait a few seconds and press Play. • Make sure the disc is properly inserted (label-side up). • Eject the disc and try loading it again. • Clean the disc to remove fingerprints, dust, or dirt. Refer to "Keeping your discs clean" on page 41. • Try another disc. Some discs are defective and will not play. • Make sure the disc is compatible with the media center disc player. Also make sure the region codes match. Refer to "Checking for disc compatibility" on page 42.
<p>Disc won't eject</p>	<ul style="list-style-type: none"> • Follow these steps: <ol style="list-style-type: none"> 1. Turn off the unit. 2. Unplug the Acoustimass module power cord from the outlet for 60 seconds, then reconnect it. This allows the unit to reset itself. 3. Before powering on, press and hold Eject on the media center.
<p>Lock DVD password lost</p>	<ul style="list-style-type: none"> • Enter the password 2673 to gain entry to the Lock DVD screen.
Storing issues	What to do
<p>NO LABEL appears on the media center display when your music is playing or storing</p>	<ul style="list-style-type: none"> • If the CD is a recent release, it may not be in the catalog of music installed in the system. The uMusic® system uses this catalog of information to identify and classify the CDs you store. When you are registered with Bose, a music information update CD is sent out periodically. Be sure to register your system if you have not. • For now, you can manually enter information using the Stored CD edit screen (Refer to "Choosing new settings" on page 54).
<p>BUSY PROCESSING CDs appears on the media center display and the system won't allow you to store more CDs</p>	<ul style="list-style-type: none"> • Turn off the system, wait 30 minutes, and try again. To store another 10 CDs, turn the system off overnight before you begin storing again. <p><i>Note: When you store a CD, the tracks are first placed in a holding area with space for up to 10 CDs. If the holding area is full, the message appears. For more information about storing CDs, refer to the INTRODUCING uMusic Intelligent Playback System booklet provided with the system.</i></p>

For customer service

For additional help in solving problems, contact Bose® Customer Service. Refer to the address sheet included in the carton.

Limited warranty

This system is covered by a transferable limited warranty. Details of the limited warranty are provided on the *Product Registration Card* that came with your system.

Technical information

Power rating

USA/Canada: 120V~ 60Hz 300W

International: 220-240V~ 50/60Hz 300W

Dual voltage: 115/230V~ 50/60Hz 300W

Antennas

FM 75Ω – external FM antenna

AM – external AM antenna

Maximum ambient temperature

104°F (40°C)

Dimensions

Media center: 3¼"H x 13¾"W x 10"D
(8.3 cm x 34.9 cm x 25.4 cm)

Remote control: 1⅛"H x 2½"W x 9"D
(3.0 cm x 6.5 cm x 22.9 cm)

Speakers: 2½"H x 5½"W x 4"D
(6.4 cm x 14 cm x 10.5 cm)

Acoustimass® module: 14½"H x 8¾"W x 19⅛"D
(36.7 cm x 22.2 cm x 48.5 cm)

Weights

Media center: 6.7 lb (3.0 kg)

Speakers: 1 lb (.45 kg) each

Acoustimass module: 23.3 lb (10.6 kg)

Finish

Media center: polymer

Speakers: polymer

Acoustimass module: polymer

GLOSSARY


4:3 – See “Aspect ratio.”

16:9 – See “Aspect ratio.”


A Analog audio – The sounds that we hear with our ears, unlike digital audio that is encoded as bits of information.

Aspect ratio – An expression for the width of the picture relative to the height. For example, if the aspect ratio is 4:3 (considered a normal screen), the shape of that picture is 4 units wide by 3 units high. The standard TV aspect ratios are 4:3 and 16:9 (called widescreen).

4:3 screen

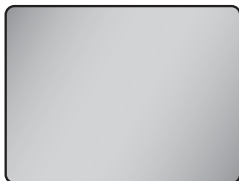

16:9 screen

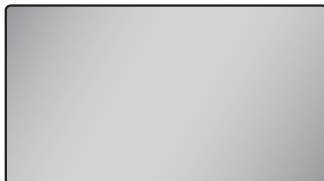

C CD – The abbreviation for a compact disc that stores digitally encoded music that is read by the laser beam in a compact disc player. This provides high-quality playback.

Chapter – A main division of contents in a DVD title.

Coaxial cable – Can carry digital audio signals between a source device and the 3•2•1® system.

Component video – Also called YPbPr for its three-part video signals that include luminance and two color signals. Component video requires the use of a Component cable. This provides considerably better resolution than is possible from either Composite or S-Video signals.

Composite video – The simplest of video signals, which combines black and white with color information. Its low- resolution signal is compatible with the broadest range of televisions and other video components and requires a simple RCA video cable.

D Digital audio – Audio in digital form, which is encoded as bits of information.

Dolby Digital – A means of encoding multi-channel audio, developed by Dolby Laboratories and accepted as an international standard.



– The logo representing Dolby Digital.

DTS – An abbreviation for Digital Theater Systems. DTS encoding provides a type of multi-channel surround sound format used on certain CDs and many DVDs.



– The logo representing DTS.

DVD – An abbreviation most commonly known to mean digital video disc or digital versatile disc. A DVD looks like a CD but contains high-quality video and multi-channel audio for movies.

DVD-R, DVD-RW – Abbreviations for Recordable (R) and ReWriteable (RW) Digital Video (or Versatile) Disc (DVD). Data can be added to a DVD-R once only, and to a DVD-RW more than once.

DVD-ROM – The abbreviation for Read Only Memory (ROM) on a Digital Video (or Versatile) Disc (DVD), which allows no data to be added.

DVD video – A standard for storing and reproducing audio and video on DVD-ROM discs, based on MPEG video, Dolby Digital audio, and other proprietary data formats.

DVR – An abbreviation for Digital Video Recording (otherwise known as PVR for Personal Video Recording). With a hard drive, an electronic program guide, and internal processing, a DVR simplifies recording and playback of programs.

GLOSSARY

- H HDCP** – An abbreviation for High-bandwidth Digital Content Protection. HDCP is a form of Digital Rights Management licensed by Digital Content Protection, LLC, to control digital audio and video content as it travels across Digital Visual Interface (DVI) or High-Definition Multimedia Interface (HDMI) connections. (It prevents unauthorized copying of programs.)
- HDMI** – An abbreviation for High-Definition Multimedia Interface. HDMI is a de-facto standard interface that delivers clear, all-digital audio and video via a single cable.
- HDTV** – An abbreviation for High-Definition TV, a digital television format that delivers sharper picture quality with more lines of resolution. HDTV offers a much better picture quality than standard television.
- I IR** – An abbreviation for infrared. Pertains to the type of remote that sends/receives commands on an infrared light beam.
- L Letterbox** – A video format that has an aspect ratio wider than 4:3 (refer to Aspect ratio) and is shown with black bars above and below the picture.
- M MP3** – This is a compressed audio format (MPEG-1 Layer III) that allows the recording of many hours of music on a single CD.
- MPEG** – An abbreviation for Moving Picture Experts Group, the committee of experts from the audio, video, and computer industries involved in setting standards for compression of moving images.
- N NTSC** – An abbreviation for National Television System Committee and the label for its video format standard used for televisions in the U.S. and other countries.
- O Optical cable** – Carries digital audio via optical fiber between a source device and your 3•2•1® system.
- P PAL** – An acronym for the Phase Alternate Line video format used extensively in Western Europe.
- PCM** – An abbreviation for Pulse Code Modulation. A common form of digital audio signal.
- Progressive scan** – A video format that displays all lines of the picture frame in a single pass and refreshes the TV image 30 times per second. Not compatible with all video displays.
- PVR** – Refer to DVR.
- R RDS** – A system that displays radio broadcast station and programming information. This feature is available on European systems only.
- Resolution** – The sharpness of a video image, signal, or display, generally described either in terms of lines of resolution or pixels.

S SCART – A type of connector commonly found on consumer electronics products manufactured for use in Western Europe.

Screen ratio – See Aspect ratio.

Source – Any device that provides audio or video signals for use with the 3•2•1® system. The AUDIO OUT from such a device connects to the AUDIO IN on the media center

S-Video – A video signal that separates the black and white from the color information. S-Video provides higher resolution than Composite video, but not as high as Component video. This type of connection requires use of an S-Video cable.

T Teletext – An information retrieval service provided by television broadcast companies in Europe and some other countries, not including the U.S.

Title – A main component of contents on a DVD. There can be several titles on a DVD, one of which may be a movie.

V Video CD – A compact disc (CD) that contains video.

W Widescreen – A TV having an aspect ratio of 16:9 with a picture shape that is 16 units wide by 9 units high. (Refer to Aspect ratio.)

Y YPbPr – See Component video.

END USER LICENSE AGREEMENT

IMPORTANT: READ CAREFULLY: This End User License Agreement (“EULA”) is a legal agreement between you, the End User (“End User” or “You”), and Bose Corporation (“Bose”) governing your use of the technology and software and data and data content belonging to Bose, its vendors and licensors (“Technology”), that is contained in this audio/video device (“System”). By tearing open the protective wrapping on this System, you are agreeing to be bound by the terms of this EULA. In the event you disagree with any of the terms contained herein, DO NOT UNWRAP THIS SYSTEM. Return the sealed System to Bose Corporation for a full refund.

Copyright laws and international copyright treaties, as well as other intellectual property laws and treaties protect the Technology contained within this System. The Technology is being licensed, not sold. This EULA grants you the right to use the Technology only on this Bose® System. You may NOT transfer, lend, distribute, prepare derivative works, reverse engineer, de-compile, or disassemble the Technology, except and only to the extent that applicable law expressly permits such activity. You agree that you will use the Technology and the System solely for your own personal non-commercial use.

The Technology contains software that allows You to obtain vendor-supplied music-related information, including name, artist, track, and title information (“Data”). You may use Data only by means of the intended End User functions of the Technology. You agree not to assign, copy, transfer or transmit such Data to any third party. YOU AGREE NOT TO USE OR EXPLOIT DATA EXCEPT AS EXPRESSLY PERMITTED HEREIN.

You agree that your non-exclusive license to use the Technology will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Technology or Data. Bose, its vendors and licensors reserve all rights in the Technology, including all ownership rights. You agree that the vendors and licensors of Bose may enforce their rights under this Agreement directly in their own name.

Bose warrants this System in accordance with the provisions of the warranty card delivered with this System. EXCEPT AS EXPRESSLY SET FORTH THEREIN, BOSE, ITS VENDORS, AND ITS LICENSORS HEREBY DISCLAIM ALL WARRANTIES, EXPRESS, IMPLIED, AND STATUTORY, IN CONNECTION WITH THE TECHNOLOGY, INCLUDING WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OF THIRD PARTY RIGHTS, AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL BOSE, ITS VENDORS, OR ITS LICENSORS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE TECHNOLOGY. IN NO EVENT SHALL BOSE BE LIABLE FOR ANY DAMAGES.

None of the Technology shall be exported or re-exported in violation of any export provisions of the United States or any other applicable jurisdiction. Any attempt to sublicense, assign or transfer any of the rights, duties or obligations hereunder shall be void. This Agreement shall be governed by and interpreted under the laws of the Commonwealth of Massachusetts, without regard to its conflicts of law provisions.

YOU ACKNOWLEDGE THAT YOU HAVE READ AND UNDERSTAND THIS AGREEMENT AND AGREE TO BE BOUND BY ITS TERMS. YOU FURTHER AGREE THAT THIS AGREEMENT IS THE COMPLETE AND EXCLUSIVE STATEMENT OF THE AGREEMENT BETWEEN YOU AND BOSE AND SUPERCEDES ANY PROPOSAL OR PRIOR AGREEMENT, ORAL OR WRITTEN, AND ANY OTHER COMMUNICATIONS RELATING TO THE SUBJECT MATTER OF THIS AGREEMENT.

©2008 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

The distinctive design of the 3•2•1® media center is also a registered trademark of Bose Corporation.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. ©1992-1997 Dolby Laboratories. All rights reserved.

This product contains one or more programs protected under international and U.S. copyright laws as unpublished works. They are confidential and proprietary to Dolby Laboratories. Their reproduction or disclosure, in whole or in part, or the production of derivative works therefrom without the express permission of Dolby Laboratories is prohibited. ©1992-1996 by Dolby Laboratories, Inc. All rights reserved.

MPEG Layer-3 audio compression technology licensed by Fraunhofer IIS and THOMSON multimedia.



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents

issued & pending. DTS and DTS Digital Surround are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. ©1996-2007 DTS, Inc. All Rights Reserved.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Consumers should note that not all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture. In case of 525 or 625 progressive scan picture problems, it is recommended that the user switch the connection to the "standard definition" output. If there are ques-

tions regarding your TV set compatibility with this model 525p and 625p DVD player, please contact our customer service center.

Designed with UEI Technology™ Under License from Universal Electronics Inc. ©UEI 2000-2002.

This product incorporates copyright protected technology and other intellectual property rights owned by Cirrus Logic, Inc. and subject to the copyright protection of the U.S. as well as other licensing restrictions and protections. Use of this copyright protected technology is limited solely to use with the Cirrus Logic integrated circuits incorporated in this product. Reverse engineering or disassembly is prohibited.

Music recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery. For more information, please visit www.gracenote.com.



CD and music-related data from Gracenote, Inc., ©2000-2008 Gracenote. Gracenote Software, copyright 2000-2008 Gracenote. This product and service may practice one or more of the following U.S. Patents #5,987,525; #6,061,680; #6,154,773; #6,161,132; #6,230,192; #6,230,207; #6,240,459; #6,330,593, and other patents issued or pending. Some services supplied under Open Globe, Inc. for U.S. Patent: #6,304,523.



Gracenote and CDDB are registered trademarks of Gracenote. The Gracenote logo and logotype, the Gracenote logo, CDDB logo and logotype and the "Powered by Gracenote" logo are trademarks of Gracenote.

Data provided by All Music Guide ©2004 AEC One Stop Group, Inc. All Music Guide is a registered Trademark of AEC One Stop Group, Inc.

The Simplay™ logo and the 'Simplay™,' and 'Simplay Labs™,' trademarks are owned by Silicon Images, Inc. and are used under license from Silicon Images, Inc. and/or Simplay Labs, LLC.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.

DEVICE CODES

TV **A-2**

CBL **A-15**
Cable box

SAT **A-16**
Satellite receiver

CD/DVD **A-21**

DVD **A-21**

VCR **A-26**

A-ACC **A-32**
Audio accessory

V-ACC **A-32**
Video accessory

R-ACC **A-32**
Audio receiver

TV

888	0264, 0412	Aiwa.....	0264, 0032, 0701, 1180, 1904, 1911, 1916	Amplivision	0370, 0217	ART	1037
A-Mark	0047, 0054, 0003, 0009, 0020, 0032, 0039, 0165	Akai.....	0000, 0060, 0812, 0702, 0178, 0030, 0145, 0556, 0037, 0548, 0714, 0606, 0361, 0264, 0218, 0433, 0696, 0729, 0745, 0753, 1935, 0826, 1259, 1537, 1675, 1676, 1903, 0672, 0648, 0602, 0480, 0473, 0412, 0371, 0217, 0208, 0163, 0151, 0056, 0038, 0035, 0009	Ampro	0751	Arthur Martin	0163
A.R. Systems ...	0556, 0037, 0455, 0352, 0374	Akashi	0009, 0860	Amstrad	0000, 0171, 0037, 1037, 0264, 0218, 0433, 0163, 0039, 0177, 0033, 0011, 0362, 0371, 0412, 0648, 0009, 1982	ASA	0070, 0105
Abex.....	0032	Akiba	0037, 0218, 0455, 0282	Amtron	0000, 0180, 0019	Asberg	0037
Accent	0037, 0009	Akira	0418	Anam	0250, 0180, 0037, 0003, 0009, 0628, 0700	Asora	0009
Accuscan	0047, 0018, 0135	Akito	0037	Anam National .	0250, 0037, 0650, 0055	Astar	1531, 1548
Acec.....	0012	Akura	0171, 0037, 0714, 0668, 1037, 0264, 0218, 0009, 0163, 0282, 0412, 1498, 1556, 1982	Andersson	1149, 1163	Astra	0037
Acer.....	1339	Alaron	0170, 0179	Anglo	0264, 0009	Asuka	0264, 0218, 0217, 0282
Acoustic Research	1269	Alba	0037, 0714, 0668, 1037, 0487, 0370, 0218, 0036, 1935, 0474, 0443, 0418, 0371, 0163, 0038, 0032, 0009	Anhua	0051	ATD.....	0698
Action	0030, 0650, 0003, 0019, 0052, 0185	Alfide	0672	Anitech.....	0037, 0264, 0009, 0282, 0474	Atlantic	0037
Acura	0009	All-Tel.....	0865, 1269	Ansonic.....	0037, 0668, 0370, 0009, 0012, 0163, 0374, 0411	Atori	0009
Addison.....	0653, 0108, 0092, 1150	Alleron	0030, 0170	AOC	0451, 0093, 0180, 0060, 0178, 0030, 0108, 1365, 1150, 1089, 0628, 0474, 0185, 0179, 0157, 0092, 0052, 0039, 0038, 0032, 0019, 0018, 0009, 0003	Auchan	0163
ADL	1217	Allorgan	0217	Aolnpike	0264, 0412	Audinac	0180
Admiral.....	0047, 0054, 0017, 0051, 0093, 0463, 0180, 0264, 0016, 0018, 0019, 0163, 0165, 0179, 0418	Allstar	0037	Apex Digital.....	0156, 0748, 0765, 0185, 0767, 0879, 0890, 1217, 1943	Audio-Technica	0019
Advantz	0282	Ambassador	0150, 0177	Arc	0473	Audiosonic	0037, 0714, 0486, 0264, 0370, 0218, 0009, 0109, 0217, 0374, 0820, 1308
Advent	0761, 0783, 0815, 0817, 0842, 1933	American Action	0180	Arc En Ciel	0109	Audioton.....	0486, 0264, 0370, 0217
Adventura	0046	American High..	0000, 0060	Arcam	0217	Audiovox	1564, 0451, 0180, 0003, 0092, 0179, 0623, 0802, 0875, 1937
Adventuri	0000			Archer	0003	Audioworld.....	0698
Adyson	0032, 0217			Ardem	0037, 0714	Aumark	0060
AEG	1163, 1556			Aristocrat	0163	Autovox.....	0217, 0247, 0544
Agashi	0264, 0217			Aristona.....	0556, 0037, 0012	Aventura	0171
Agna.....	0150					AVP.....	0000
Aiko	0037, 0361, 0264, 0433, 0009, 0035, 0092, 0217, 0371					Awa	0451, 0606, 0264, 0036, 0108, 0009, 0011, 0157, 0217, 0374, 1376
Aim.....	0706, 0037, 0455, 0753					Axion	1937

Baird	0037, 0109, 0179, 0208, 0217, 0343, 1196	Black Diamond .	1909, 1037, 0614, 0753, 0820, 1163		0355, 0335, 0282, 0217, 0208, 0163, 0009	Changfei	0009, 0374, 0817
Bang & Olufsen	0565, 0619, 1620	Black Star	0247			Changfeng	0264, 0412, 0696, 0753, 0817
Baohuashi	0264, 0412	Blackway	0218, 0282	Byd:sign	1309, 1311	Changhai	0009, 0817
Baosheng	0009, 0817	Blaupunkt	0195, 0036, 0455, 0170, 0200, 0327, 0535, 0554	C-Tech	0891, 0896	Changhong	0156, 0765, 0264, 0508, 0009, 0767, 0783, 0817, 0820, 1156
Barco	0556, 0163			Caihong	0009, 0817		
Basic Line	0556, 0037, 0668, 1037, 0218, 0455, 0009, 0163, 0217, 0282, 0339, 0374, 1163	Blue Sky	0556, 0037, 0714, 0668, 1037, 0487, 0218, 0455, 0282, 0499, 1254, 1314, 1363, 1916	Cailing	0748	Chengdu	0009, 0817
Bastide	0217			Caishi	0891	Ching Tai	0003, 0009, 0092, 0179, 0474
Baur	0037, 0195, 0361, 0455, 0146, 0512, 0535, 0544, 0554	Blue Star	0282	Candle	0030, 0039, 0046, 0056, 0186	Chun Yun	0000, 0180, 0003, 0009, 0033, 0092, 0179, 0474, 0700, 0843, 1150
Baycrest	0032, 0046, 0186	Bondstec	0247	Canton	0218		
Baysonic	0236, 0463, 0180	Boots	0009, 0217	Capehart	0017, 0178, 0030, 0036, 0003, 0019, 0032, 0046, 00052, 0092	Chunfeng	0264, 0009
Bazin	0217	Boxlight	0893			Chung Hsin	0180, 0053, 0036, 0108, 0033, 0474, 1150
Beaumark	0017, 0178, 0030, 0019, 0179	BPL	0037, 0208, 0282, 0896	Capetronic	0030, 0003		
Beijing	0812, 0264, 0226, 0009, 0208, 0374, 0412, 0661, 0817	Bradford	0180	Capsonic	0264	Chungfeng	0412
Beko	0037, 0714, 0195, 1037, 0486, 0606, 0370, 0418, 0808	Brandt	0625, 0714, 0560, 0109, 0287, 0335	Carad	0668, 1037, 0610	Chunsun	0009, 0817
Belcor	0030, 0019	Brick	0039	Carena	0037, 0455	Cimline	0218, 0009
Bell & Howell ...	0054, 0017, 0154, 0093, 0016, 0179	Brinkmann	0037, 0668, 0486, 0418, 0519	Carnivale	0030	Cinema	0672
Belson	0698	Brionvega	0037, 0362	Carrefour	0037, 0036, 0070	Cineral	0451, 0092
Belstar	1037	Britannia	0217	Carver	0054, 0170	Cinex	0648, 1556
BenQ	1032, 1315, 1562, 1756	Brockwood	0178, 0030, 0019, 0056	Cascade	0037, 0009	Citek	0047, 0032
Beon	0037, 0218, 0032, 0039, 0163, 0418	Broksonic	0236, 0463, 0180, 0003, 0039, 0177, 1911, 1929, 1935, 1938	Casio	0037	Citizen	0054, 0000, 0451, 0463, 0180, 0060, 0030, 0171, 1935, 1928, 0535, 0003, 0016, 0282, 0280, 0186, 0019, 0092, 0020, 0056, 0046, 0039, 0035, 0032
Berthen	0668	Brother	0264	Cathay	0037, 0218, 0032, 0474		
Best	0370	BSR	0163			City	0009
Bestar	0037, 0370, 0374	BTC	0218	CCE	0037, 0217	Civet	0185
Bestar-Daewoo	0374	Bush	0556, 0037, 0714, 0668, 1037, 0698, 0487, 0361, 0264, 0218, 0036, 1259, 1556, 1900, 0661, 0660, 1954, 0614, 0519, 0374, 0371,	Celebrity	0000	Clairtone	0185
Binatone	0217			Celera	0765	Clarion	0180
				Celestial	0767, 0820	Clarivox	0037, 0070, 0418
				Centrex	0706, 0780, 0826, 0891	Classic	0030, 0019, 0056, 0092, 0499
				Centrum	1037		
				Centurion	0037		
				Century	0247		
				CGE	0370, 0074, 0163, 0247, 0418		
				Changcheng	0051, 0264, 0009, 0374, 0412, 0661, 0817		

Clatronic	0037, 0714, 0264, 0370, 0218, 0009, 0217, 0247, 0371	Curtis Mathes ...	0047, 0054, 0154, 0000, 0051, 0451, 0093, 0180, 0060, 0702, 0178, 0030, 0145, 0166, 0037, 0179, 0466, 1147, 1347, 1919, 0056, 0044, 0039, 0038, 0035, 0032, 0019, 0018, 0016	0019, 0032, 0039, 0056, 0092, 0374 0374, 0661	Dream Vision	1704
Clayton.....	1037			Dayu.....	Drean	0037
CMS Hightec....	0217			De Graaf.....	DSE	0698, 0820, 1556
Colortyme	0047, 0054, 0017, 0060, 0178, 0030, 0018, 0019, 0032			DEC.....	DTS	0009
Colt	0019			Decca	Dual.....	0037, 1037, 1137, 0217, 0343, 0352, 0394, 0519, 0544
Commercial Sols	0047, 1447	CXC	0180	Degraff	Dual Tec	0217
Concerto	0056	Cybertron	0218	Deitron	Dumont	0017, 0180, 0178, 0016, 0019, 0032, 0070, 0217
Concorde	0009	Cytron	1326	Dell.....	Durabrand	0463, 0180, 0178, 0171, 0003, 1034, 1463
Condor	0037, 0264, 0370, 0009, 0247, 0282, 0411, 0418	Cytronix	1298	Delphi	Dux.....	0037, 0012
Conia	0754, 0820, 1498	D-Vision	0556, 0037, 1982	Delta	DVX	0891
Conic	0178, 0032	Daenyx	0180, 0179, 0672	Denko	Dwin	0093, 0720, 0774
Conrac	0808	Daewoo	0154, 0451, 0180, 0178, 0030, 1661, 0556, 0037, 0634, 1909, 0264, 0218, 0036, 0108, 1928, 0661, 0672, 0700, 1902, 0860, 0865, 1756, 1755, 0880, 1150, 1307, 1598, 0003, 0009, 0019, 0020, 0032, 0039, 0056, 0092, 0109, 0170, 0217, 0374, 0474, 0499, 0623, 0627, 0628	Denstar	Dynatech.....	0217
Conrowa.....	0156, 0145, 0698, 0264, 0009, 0412, 0696, 0753, 1156			Denver	Dynatron.....	0037, 0012
Contec	0180, 0037, 0036, 0009, 0157, 0185			Desmet	Easy Living	1248
Continental Ed.	0487, 0109, 0287			Dewo.....	Eaton	0060
Cosmel	0037, 0009			Diamond	Ecco	0773
Craig	0180, 0171, 0179, 0282			Diamant	ECE	0037
Crosley	0054, 0000, 0180, 0030, 0171, 0370, 0074, 0096, 00163, 0187, 0247	Dainichi.....	0218	Dick Smith Elec.	Edison-Minerva	0487
Crown	0093, 0180, 0053, 0037, 0714, 1037, 0486, 0487, 0606, 0712, 0370, 0412, 0418, 0339, 0208, 0672, 0 0056, 0039, 0009	Dansai	0037, 0036, 0009, 0032, 0035, 0208, 0217	Digatron	Elbe	0037, 0610, 0218, 0217, 0362, 0411
Crown Mustang	0672			Digiline	Elcit	0163, 0247
CS Electronics	0218, 0247	Dansette	0412	Digital Life	Electroband.....	0000, 0185
CTC	0247	Dantax	0714, 0486, 0370	Digitex.....	Electrograph.....	1755
CTX.....	1756	Datsura.....	0208	Digitron	Electrohome	0154, 0000, 0463, 0150, 0178, 0030, 0019, 0032, 0039, 0056, 0151, 0185, 0381
		Dawa	0037, 0009	Dixi.....	Elekta	0264, 0009, 0282
		Daytek	0672, 1376	DL	Elektra	0017, 1661
		Dayton	0009, 0092	DMTech	Element	1498
		Daytron.....	0180, 0178, 0030, 0037, 0036, 0009,	Domeos	Elfunk	1037, 1208
				Domland	ELG	0037
				Dongda		
				Donghai		

Elin	0037, 0548, 0361, 0009	Feilu	0009, 0817	Fujimaro	0865, 1498	General Tech. ..	0009
Elite	0037, 0218	Feiyan	0264, 0412	Fujitsu	0009, 0179, 0186, 0217, 0352, 0683, 0809, 0853, 1181	Genesis	0037, 0009
Elta	0264, 0009, 0474	Feiyue	0009, 0817			Genexxa	0037, 0218, 0009, 0163, 0412
Emco	0247	Fenner	0009, 0374	Fujitsu General	0009, 0186, 0217, 0683	Gericom	0808, 0865, 0880, 1217, 1298
Emerald	0178, 0177	Fer0	0335			Giant	0009, 0217
Emerson	0047, 0017, 0154, 0451, 0236, 0463, 0180, 0150, 0178, 0171, 0037, 0714, 0668, 0195, 1909, 0486, 0361, 0370, 0036, 0282, 0371, 0623, 1394, 1911, 1928, 1929, 0280, 0247, 0185, 0179, 0177, 0170, 0146, 0135, 0111, 0070, 0044, 0039, 0038, 0032, 0019, 0012	Ferguson	0053, 0037, 0625, 0548, 0560, 0195, 1037, 0003, 0109, 0287, 0335, 0343, 0443, 1935	Fujitsu Siemens	0808, 0809, 1163, 1298	Gibraltar	0017, 0000, 0030, 0019
Emperor	0282	Fidelity	0171, 0037, 0361, 0264, 0163, 0217, 0371, 0412, 0423, 0474, 0512, 0544	Funai	0000, 0180, 0171, 0668, 0264, 0039, 0179, 0342, 1271, 1904	Gintai	0474, 1150
Envision	0030, 0019, 0032, 0039, 0813, 1365	Filsai	0217	Furi	0145, 0264, 0412, 0817	Go Video	0060, 0886
Enzer	0753, 0860	Finlandia	0548, 0361, 0105, 0163, 0208, 0346	Furichi	0860	Go Vision	1937
Epson	0833, 0840, 1290, 1322, 1122	Finlux	0556, 0037, 0714, 0070, 0105, 0163, 0179, 0217, 0346, 0411, 0473, 0480, 0492, 0808, 1556	Futronic	0264, 0860	Goldfunk	0668
Erres	0037, 0012			Futuretech	0180	GoldStar	0047, 0054, 0154, 0178, 0030, 0037, 0714, 0606, 0361, 0036, 0455, 0247, 0474, 1150, 1154, 1378, 1926, 0217, 0163, 0109, 0056, 0044, 0039, 0032, 0019, 0018, 0009
ESA	0812, 0171			Galaxi	0037	Gooding	0487
ESC	0037, 0217, 0474	Fistar	0236, 0009, 0033	Galaxis	0037, 0370	Goodmans	1163, 0000, 0556, 0037, 0625, 0714, 0560, 0668, 0634, 1909, 1037, 0487, 0264, 0218, 0036, 0587, 0009, 1900, 1376, 1308, 1259, 0335, 0880, 0808, 0011, 0032, 0661, 0035, 0343, 0179, 0217, 0499, 0360, 0480, 0374, 0371
Ether	0030, 0003, 0009	Firstline	0556, 0037, 0714, 0668, 1037, 0361, 0009, 0208, 0217, 0247, 0374, 0411, 0544, 0808, 1363	Ganxin	0817	Gorenje	0370
Etron	0009, 0163, 0820	Fisher	0047, 0054, 0154, 0000, 0361, 0370, 0036, 0157, 0159, 0208, 0217, 0544	Gateway	1755, 1756	GPM	0218
Eurofeel	0264, 0217	Flint	0037, 0610, 0264, 0218, 0455	GBC	0218, 0009, 0163, 0374	GPX	0179
Euroman	0037, 0264, 0370, 0217	Force	1149	GE	0047, 0000, 0051, 0451, 0093, 0180, 0060, 0178, 0030, 1447, 1454, 0625, 0560, 1922, 1919, 1917, 11347, 1147, 0018, 0335, 0282, 0135, 0021, 0092, 0055, 0052, 0027, 0046, 0044, 0038, 0035	Gradiente	0053, 0037, 0056, 0170
Europa	0037	Formenti	0037, 0163	GEC	0037, 0361, 0163, 0217	Graetz	0714, 0487, 0361, 0163, 0339, 0371, 1163
Europhon	0037, 0109, 0217	Fortress	0093	Geloso	0009, 0163, 0247, 0374		
Evesham	1248	Fraba	0037, 0370	Gemini	0047		
Evolution	1756	Friac	0037, 0610, 0370, 0009, 0499	General	0109, 0186, 0287		
Expert	0163	Frontech	0264, 0009, 0163, 0217, 0247, 0474	General Elec. ...	0047, 0021, 0027, 0055		
Exquisit	0037, 0247						
Feilang	0009						

Gran Prix	0179, 0648		0394, 0499, 0519, 0544, 0661, 0808		0009, 0208, 0696, 0753, 0780, 0860, 1156, 1208, 1314,	Huanghe	0009, 0817
Granada	0037, 0548, 0560, 0036, 0108, 0226, 0012, 0032, 0146, 0163, 0208, 0217, 0339, 0343, 0473	Hantarex.....	0037, 0009, 0829, 0865	Hitachi	1445, 0047, 0054, 0017, 0000, 0156, 0051, 0150, 0178, 0030, 1145, 0145, 1256, 0037, 0548, 0634, 1037, 1137, 0036, 0108, 0225, 0508, 0719, 0744, 0578, 0576, 0499, 0492, 0481, 0480, 0797, 0877, 1045, 1149, 1150, 1156, 1225, 1245, 1378, 1481, 1576, 1904, 0009, 0016, 0018, 0019, 0027, 0032, 0035, 0038, 0039, 0044, 0055, 0056, 0092, 0105, 0109, 0151, 0157, 0163, 0165, 0179, 0185, 0186, 0217, 0282, 0343, 0381, 0473, 0474	Huanglong	0009
Grandin	0037, 0714, 0668, 1037, 0610, 0218, 0455, 0009, 0163, 0282, 0374, 0865, 0880	Hantor	0037			Huangshan	0264, 0009, 0412, 0817
Gronic	0217	Harley Davidson	0000, 0180, 0060, 0178, 0030, 0019, 0179, 1904			Huanyu	0264, 0217, 0374, 0817
Grundig	0706, 0556, 0037, 0195, 0487, 0036, 0587, 1954, 1935, 1916, 1376, 1308, 0683, 0672, 0554, 0535, 0443, 0163, 0070, 0009	Harman/Kardon	0054			Huaqiang	0264, 0412
Grundy	0180, 0195, 0179	Harsper	0865			Huari	0145, 0264, 0412
Grunkel.....	1163	Harvard	0180			Hugoson	0890, 1217
Grunpy	0180, 0179	Harwa	0773, 1196, 1269			Huodateji	0051
H & B	0808	Harwood	0037, 0487, 0009, 0032, 0412			Hygashi.....	0217
Haaz.....	0706	Hauppauge	0037			Hyper	0009, 0217, 0247
Haier	0037, 0698, 0587, 0508, 0768, 0891, 0896, 1034	Havermy.....	0093			Hypersonic	0361
Haihong.....	0009	HCM.....	0037, 0264, 0218, 0009, 0217, 0282, 0412, 0418			Hypson	0556, 0037, 0714, 0668, 1037, 0486, 0264, 0455, 0217, 0282
Haiyan	0264, 0412, 0817	Heathkit.....	0017	Hitachi Fujian ...	0150, 0108, 0860	Hyundai	0753, 0849, 0860, 0865, 1376, 1531, 1556, 1598
Halifax	0264, 0217	Helios	0865	Hitec	0698	Iberia	0037
Hallmark.....	0236, 0180, 0178, 0019, 0135, 0179, 0187	Hello Kitty.....	0451	Hitsu	0610, 0218, 0455, 0009	ICE	0037, 0264, 0218, 0217, 0371
Hampton	0217	Hema.....	0009, 0217	Hoeher	0714, 0865, 1163, 1556	ICeS.....	0218
Hanimex.....	0218	Hemmermann ..	0544	Home Elec.	0606	IIsonic.....	1376
Hankook.....	0180, 0178, 0030, 0019, 0056, 0628	Hewlett Pkd	1494, 1502, 1088, 1089, 1642	Hongmei.....	0093, 0264, 0009, 0817	iiyama	0877, 0890, 1217
Hannspree	1348, 1351	Hicon	1467	Hitsu	0610, 0218, 0455, 0009	iLo.....	1603, 1684
Hanseatic	0556, 0037, 0714, 0634, 0361, 0370, 0009, 0217, 0282,	Hifivox	0109	Hoeher	0714, 0865, 1163, 1556	Ima.....	0236, 0180, 0178, 0179
		Highline	0037, 0264	Home Elec.	0606	Imperial.....	0037, 0370, 0074, 0247, 0418
		Hikona	0218, 0474	Hongyan	0264, 0412, 0817	Imperial Crown	0264, 0009, 0374, 0412, 0661
		Hikone	0218	Hornlyphon	0037, 0012	Indiana.....	0037
		Himitsu	0180, 0628	Hoshai	0218, 0455, 0282	Infinity	0054
		Hinari	0037, 0264, 0218, 0036, 0009, 0032, 0096, 0163, 0179, 0208, 0282, 0352, 0355, 0443	HP	1088, 1089, 1494, 1502, 1642	Ingelen.....	0714, 0610, 0487, 0163
		Hisawa	0714, 0610, 0218, 0455, 0282	Hua Tun	0009, 1150	Ingersol.....	0009
		Hisense	1363, 0156, 0748, 0145, 0556, 0508,	Huafa	0145, 0009	Initial	1603
				Huanghaimei	0009		

Inno Hit.....	0218, 0009, 0217, 0247, 0282, 1163	JBL.....	0054	Kamp.....	0017, 0180, 0019, 0185, 0217	Kolin.....	0180, 0150, 0053, 0036, 0108, 0033, 0474, 1150, 1331
Innova.....	0037	JCB.....	0000	Kanghua.....	0896	Kolster.....	0037, 0218, 0247
Innovation.....	0519	JDV.....	1982	Kangli.....	0264, 0009, 0374, 0661, 0817	Kongque.....	0264, 0009, 0817
Innowert.....	0865, 1298	Jean.....	0156, 0051, 0236, 0036, 0003, 0009, 0092, 0179, 0474	Kangyi.....	0264, 0009, 0412	Konichi.....	0009
Inotech.....	0773, 0820	JEC.....	0035	Kapsch.....	0361, 0163	Konig.....	0037
Insignia.....	1564, 0171, 1204, 1326, 1517, 1641, 2002	Jensen.....	0761, 0815, 0817, 1933	Karcher.....	0714, 0610, 0606, 0264, 0370, 0282, 1556	Konka.....	0180, 0037, 0714, 0218, 0587, 0817, 0754, 0720, 0719, 0707, 0703, 0638, 0632, 0628, 0418, 0371, 0282, 0080
Inteq.....	0017, 0145	Jiahua.....	0051	Kathrein.....	0556	Kontakt.....	0487
Interbuy.....	0037, 0264, 0009, 0247	JiaLiCai.....	0264, 0009, 0412	Kawa.....	0371	Korpel.....	0037
Interfunk.....	0037, 0361, 0012, 0109, 0163, 0200, 0247, 0327, 0512	JIL.....	0030, 0019	Kawasho.....	0030, 0019, 0185	Korting.....	0370, 0039
Internal.....	0037, 1909	Jinfeng.....	0051, 0226, 0208, 0817	Kaypani.....	0052	Kosmos.....	0037
Intervision.....	0037, 0486, 0487, 0264, 0218, 0455, 0009, 0217, 0247, 0282, 0394, 0519	Jinque.....	0264, 0009, 0412, 0817	KB Aristocrat....	0163	Kost.....	1262
Irradio.....	0037, 0218, 0009, 0247, 0371	Jinta.....	0264, 0009, 0412	KDS.....	1498	Kotron.....	0412
IRT.....	0451, 1661, 0698, 0628	Jinxing.....	0054, 0156, 0145, 0556, 0037, 0698, 0264, 0009, 0817	KEC.....	0180, 0060	Koyoda.....	0009
Isukai.....	0037, 0218, 0455, 0282	JMB.....	0556, 0634, 0443, 0499	Ken Brown.....	0236, 0463	Kriesler.....	0012
ITC.....	0217	JNC.....	1964	Kendo.....	0037, 1037, 0610, 0370, 0247, 0362, 0411, 0519, 0648	KTV.....	0463, 0180, 0030, 0039, 0185, 0217, 0280
ITS.....	0037, 0264, 0218, 0282, 0371	Jocel.....	0712	Kenia.....	0030, 0019	Kuaile.....	0264, 0009, 0412
ITT.....	0548, 0610, 0361, 0163, 0179, 0208, 0339, 0346, 0473, 0480, 0544	Johnson.....	0455	Kenmore.....	0146	Kulun.....	0009
ITT Nokia.....	0180, 0548, 0195, 0610, 0606, 0361, 0070, 0163, 0179, 0208, 0339, 0346, 0473, 0480	Jubilee.....	0556	Kennedy.....	0163	Kunlun.....	0051, 0264, 0226, 0208, 0374, 0661, 0817
ITV.....	0037, 0264, 0247, 0374	Juhua.....	0264, 0412, 0817	Kennex.....	0668, 1037	Kyoshu.....	0032, 0412, 0418
IX.....	0877	Juhan.....	0030, 0019	Kenwood.....	0180, 0030, 0019	Kyoto.....	0032, 0163, 0217
Janeil.....	0046	JVC.....	1253, 0054, 0093, 0463, 0053, 0030, 0606, 0218, 0036, 0650, 0653, 0508, 0055, 0070, 0371, 0418, 0683, 0731, 1172, 1923	Khind.....	0706, 0896	L&S Electronic.....	0714, 0808, 0865
		Kaige.....	0264, 0009, 0412, 0817	KIC.....	0217	Lark.....	0154, 0386
		Kaisui.....	0037, 0218, 0455, 0009, 0217, 0282	Kiata.....	0455, 0371	LaSAT.....	0486
		Kambrook.....	0217	Kioto.....	0054, 0706, 0556	Lavis.....	1037
				Kiton.....	0037, 0668	Leader.....	0009
				KLH.....	0156, 0180, 0765, 0767	Lecson.....	0037
				KLL.....	0037	Legend.....	0009
				Kloss.....	0030, 0024, 0046	Lemair.....	0032, 0411
				KMC.....	0003, 0032		
				Kneissel.....	0556, 0037, 0610, 0370, 0362, 0374, 0411, 0499		
				Kobra.....	1467		

[illegible]

Microstar	0808	Multitech	0180, 0037, 0486, 0264, 0370, 0009, 0179, 0217, 0247	Neufunk.....	0556, 0037, 0714, 0610, 0218, 0009	Oceanic	0548, 0361, 0163, 0208, 0473
MicroTEK	0820, 0860			New Tech	0556, 0037, 0009, 0056, 0217, 0343	Odeon	0264
Midland	0047, 0017, 0051, 0018, 0019, 0032, 0039, 0056, 0135	Murphy	0032, 0039, 0163, 0474	New World	0218	Okano	0037, 0264, 0370, 0009
Mikomi	1037, 1149	Musikland	0218, 0247	Newave	0093, 0178, 0009, 0092, 1150	Olevia	1144, 1240, 1331, 1610
Minato	0556, 0037	Mx Onda.....	1498	Nextier.....	1598	Olidata	1376
Minerva	0195, 0487, 0108, 0070, 0535, 0554	Myryad	0556	Nicam	0544	Omega	0264
Minoka	0037, 0412	NAD	0156, 0178, 0166, 0037, 0361, 0019, 0056, 0866, 1156	Nikkai	0037, 0264, 0218, 0036, 0009, 0032, 0035, 0163, 0179, 0217	Omni.....	0748, 0698, 0780, 0826, 0872, 0891
Mintek	1603	Naiko	0037, 0606, 1982	Nikkai	0714	Onida	0053, 1253
Minutz	0021	Nakimura	0037, 0374	Nikko	0178, 0030, 0092	Onimax	0714
Mirror	1900	Nanbao	0264, 0009, 0412	Nikkodo.....	0178, 0030, 0092	Onking	0280
Mitsubishi.....	0150, 0868, 0154, 0250, 0093, 0236, 0180, 1250, 0178, 0030, 0556, 0037, 0195, 1037, 0036, 0108, 1171, 1150, 1182, 0836, 0817, 1917, 0535, 0512, 0474, 0381, 0179, 0056, 0033, 0019, 0011	Nansheng	0264, 0412, 0817	Nintaus.....	0891	Onwa	0180, 0218, 0433, 0371, 0602
Mivar	0217, 0609	Narita	1982	Nishi	0030, 0018	Opera	0037
Monaco	0009	NAT	0226	Noblex	0154, 0037, 0264, 0018, 0052	Optimus.....	0154, 0250, 0093, 0180, 0150, 0178, 0030, 0166, 0650, 0016, 0032, 0039, 0056, 0165
Monivision	0700, 0843	National	0051, 0226, 0508, 0055, 0208	Nobluko.....	0070	Optoma	0887, 1348
Morgan's	0037	NEC	1398, 0047, 0154, 0156, 0051, 0053, 0178, 0030, 0264, 0036, 0455, 0653, 0508, 0499, 0603, 0661, 0704, 0817, 0882, 1150, 1182, 1378, 1456, 1704, 0497, 0474, 0412, 0381, 0374, 0217, 0186, 0170, 0165, 0056, 0046, 0019, 0016, 0011, 0009	Nokia	0180, 0548, 0610, 0606, 0361, 0163, 0179, 0208, 0339, 0346, 0374, 0473, 0480, 0492	Optonica.....	0093, 0165
Motorola.....	0054, 0051, 0093, 0150, 0055	Neckermann	0556, 0037, 0370, 0200, 0247, 0327, 0411, 0418, 0554	Norcent	0748, 0824, 1089, 1365, 1590	Orbit	0037
MTC	0180, 0060, 0030, 0370, 0011, 0019, 0032, 0039, 0056, 0092, 0185, 0282, 0512	NEI.....	0037, 0163, 0371	Nordic	0217	Origo	0003
MTEC	0032	Neovia	0865, 1376, 1964	Nordmende	0037, 0714, 0560, 0195, 0109, 0287, 0343, 0891	Orion	0443, 0017, 0236, 0463, 0180, 0178, 0556, 0037, 0714, 0264, 1954, 1929, 1916, 1911, 1463, 1196, 0880, 0544, 0474, 0443, 0412, 0355, 0179, 0177, 0019, 0011
MTlogic	0714	Nesco	0179, 0247	Normerel	0037	Online	0037, 0218
Mudan	0051, 0264, 0226, 0009, 0208, 0412, 0817	Netsat	0037	Noshi	0018	Ormond	0668, 1037
Multitec	0037, 0668, 1037, 0486, 1556	NetTV	0762, 1755	Novak	0012	Osaki	0556, 0037, 0264, 0218, 0032, 0217, 0355, 0374, 0412, 0474
		Network	0032	Novatronic.....	0037, 0105, 0374	Osio	0037
				NTC.....	0092		
				Nu-Tec	0698, 0455, 0820		
				Nyon.....	0000		

Oso	0218		0780, 0817, 0826, 0891		0009, 0096, 0092, 0080, 0056, 0012, 0019, 0032, 0027, 0024, 0020		0815, 0817, 1269, 1933
Osume	0037, 0218, 0036, 0032, 0038, 0039, 0157, 0474	Pathe Cinema...	0163			Princeton	0700, 0717
Otic	1498	Pathe Marc.	0109			Prinston.....	1037
Otto Versand	0093, 0556, 0037, 0195, 0361, 0036, 0226, 0109, 0217, 0247, 0343, 0512, 0535, 0544, 0554	Pausa	0009, 0179	Phocus	0714, 1289, 1308	Prinz	0361, 0544
Pace.....	0019, 0092	Paxonic.....	0060, 0030, 0019, 0032, 0039	Phoenix.....	0037, 0486, 0370, 0163	Prism	0250, 0051, 0055
Pacific	0556, 0037, 0714, 1037, 1137, 0443, 1935	PCE	0156, 0060, 0179	Phonola.....	0556, 0037, 0012, 0080	Profex	0361, 0009, 0163
Packard Bell.....	0092, 1314	Peng Sheng.....	0891	Pilot	0051, 0060, 0178, 0030, 0706, 0712, 0011, 0019, 0039, 0052, 0056	Profi	0009
Palladium	0556, 0037, 0714, 0370, 1137, 0163, 0200, 0217, 0247, 0327, 0411, 0418, 0519, 0554	Penney	0047, 0000, 0156, 0250, 0051, 0060, 0178, 0030, 0037, 0036, 0108, 0159, 1347, 0135, 0070, 1378, 1919, 1926, 0056, 0046, 0039, 0038, 0035, 0032, 0027, 0021, 0019, 0018, 0016, 0003	Pioneer.....	0166, 0037, 0486, 0361, 0370, 1398, 1260, 0866, 0760, 0679, 0512, 0423, 0287, 0170, 0163, 0109, 0055, 0038, 0011	Profilo.....	1556
Palsonic	0037, 0698, 0264, 0218, 0217, 0418, 0773, 1196, 1269, 1904	Perdio	0037, 0163, 0282	Pionier.....	0486, 0370, 1556	Profitronic.....	0037
Panama	0037, 0264, 0009, 0217, 0247	Perfekt.....	0037	Plantron	0037, 0264, 0009	Proline	1376, 0037, 0625, 0634, 1037, 0012, 0411
Panasonic	0054, 0000, 0156, 0250, 0051, 0236, 0030, 0037, 0548, 0361, 0650, 0108, 0225, 0226, 0508, 1271, 1291, 1177, 1175, 1310, 1410, 1480, 1650, 1919, 1941, 1168, 0896, 0853, 0423, 0367, 0208, 0163, 0055, 0052, 0035, 0024, 0018, 1335	Petters	1523	Playsonic	0037, 0714, 0217, 0339	Proscan	0047, 1447, 0018, 0135, 0466, 1347, 1922
Panavision.....	0037, 0411	Phase	0032	Polaroid.....	0765, 0865, 1262, 1276, 1314, 1316, 1326, 1327, 1328, 1341, 1498, 1523, 1991, 1992	Proscos	0156
Panda	0051, 0706, 0698, 0264, 0226, 0508, 0009, 0208, 0412,	Philco	0054, 0451, 0463, 0180, 0178, 0030, 0145, 1661, 0037, 0370, 0628, 0474, 0774, 0418, 0381, 0247, 0187, 1911, 0186, 0179, 0163, 0096, 0092, 0074, 0056, 0038, 0033, 0032, 0024, 0020, 0019	Polytron.....	0282	Prosonic	0037, 0714, 0668, 0370, 0217, 0371, 0374
		Philharmonic.....	0217	Poppy	0009	Protec	0037, 0264, 0009, 0217, 0247
		Philips.....	0054, 0017, 0000, 0051, 0178, 0030, 0171, 1454, 0556, 0037, 0361, 0108, 1154, 0774, 0690, 1254, 0554, 0512, 1455, 0474, 0423, 0374, 1756, 0343, 0200, 0187, 0186,	Portland	0451, 0003, 0019, 0032, 0039, 0092, 0374	Protech.....	0037, 0668, 1037, 0486, 0264, 0009, 0217, 0247, 0282, 0418
				Powerpoint	0037, 0698, 0487	Proton	0178, 0030, 0003, 0009, 0039, 0052, 0056, 0466, 0474, 0644, 1092
				Prandoni-Prince	0361, 0247	Provew	1498
				Precision	0236, 0180, 0177, 0185, 0217, 0282	ProVision	0556, 0037, 0714, 1037
				Premier	0264, 0009	Pulsar	0017, 0016, 0019, 0092
				President	0860	Pulser	0178, 0019, 0092
				Prima	1196, 0761, 0264, 0009, 0032, 0412, 0474, 0753, 0783,	Pye	0556, 0037, 0012, 0374, 0412, 0554
						Pymi	0009
						Qingdao.....	0051, 0264, 0226, 0208, 0412, 0817

Quadral	0051, 0218		0165, 0157, 0135, 0092	Saba.....	0250, 0625, 0548, 0714, 0560, 0361, 0109, 0163, 0287, 0335, 0343, 0498	Sanky	0060, 0030, 0019, 0038, 0039, 0280
Qualcraft	0039	Realistic	0047, 0154, 0180, 0150, 0178, 0030, 0003, 0016, 0019, 0032, 0039, 0056, 0165	Sagem	0610, 0455, 0618, 0830	Sansei	0451, 0092
Quartz	0150, 0178, 0046	Recor	0037, 0418	Saige	0009, 0817	Sansui	0463, 0060, 0030, 0706, 0037, 0714, 0455, 1935, 1929, 1911, 1904, 1537, 1531, 0826, 0753, 0729, 0602, 0371, 0165, 0019
Quasar	0250, 0051, 0650, 0009, 0016, 0024, 0035, 0055, 0165, 0247, 0474, 0865, 1919	Rectiligne.....	0037	Saisho	0264, 0009, 0011, 0033, 0163, 0177, 0217, 0544	Santon	0009
Quelle	0037, 0668, 0195, 1037, 0361, 0554, 0544, 0535, 0512, 0327, 0247, 0200, 0109, 0074, 0070, 0032, 0011	Rediffusion.....	0548, 0361, 0036, 0163, 0346	Saivod	0037, 0668, 1037, 0712, 1163, 1556, 1982	Sanyo	0047, 0054, 0154, 0000, 0156, 0463, 0180, 0145, 0171, 0037, 0264, 0370, 0036, 0108, 0508, 0412, 0424, 0474, 0544, 0704, 0798, 0799, 0893, 1755, 1208, 1142, 1150, 1154, 1179, 0381, 0376, 0339, 0280, 0217, 0208, 0170, 0163, 0159, 0157, 0146, 0105, 0088, 0046, 0011, 0009
Questa	0036, 0032	Redstar	0037	Sakai	0163		
Questar	0036	Reflex	0037, 0668, 1037	Sakyno	0455	Sanyong	0037
R-Line	0037	Relisys	0865, 0877, 0878, 1211, 1298	Salora	0548, 0361, 0163, 0208, 0480	Sanyuan	0093, 0009, 0817
Rabbit	0047	Remotec	0250, 0093, 0145, 0171, 0037, 0376, 0424, 0509, 0627	Salsa	0335	Saville	0060
Radialva	0218, 0163	Reoc	0714	Sampo	0047, 0154, 0093, 0178, 0030, 0171, 0036, 0650, 1756, 1755, 0762, 0700, 0474, 0092, 0052, 0039, 0032, 0009	SBR	0556, 0037, 0012
Radiola	0556, 0037, 0012, 0217	Revox	0037			Sceptre.....	0878, 1217, 1360, 1599
Radiomarelli	0037, 0247	Rex	0264, 0163, 0247, 0411	Samsung.....	1249, 1619, 0060, 0054, 0017, 0154, 0156, 0093, 0047, 0812, 0702, 0178, 0030, 0556, 0037, 0264, 0370, 0036, 0587, 0618, 0226, 1060, 0817, 1150, 0814, 1235, 0774, 0766, 1312, 0718, 1584, 0644, 1630, 1903, 0009, 0019, 0032, 0035, 0039, 0055, 0056, 0090, 0092, 0163, 0179, 0208, 0217, 0362, 0371, 0474, 0519	Schaub Lorenz .	0548, 0714, 0486, 0606, 0361, 0374
RadioShack.....	0047, 0154, 0180, 0150, 0178, 0030, 0037, 0019, 0032, 0039, 0056, 0165, 1904	RFT	0037, 0264			Schneider	0556, 0037, 0714, 0668, 1037, 0361, 1137, 0218, 1982, 1904, 0648, 0544, 0519, 0394, 0371, 0352, 0343, 0247, 0217, 0163, 0070, 0012
Radiotone	0037, 0668, 1037, 0264, 0370, 0009, 0412, 0418, 0648	Rhapsody	0185	Samsux	0038, 0039	Scimitsu.....	0019
Rank	0070	Rinex	0773	Sanjian	0264, 0412	Scotch	0178
Rank Arena.....	0036, 0602, 0753	Road Authority .	0282				
RBM	0070	Roadstar.....	0037, 0714, 0668, 1037, 0264, 0218, 0009, 0282, 0418, 1189, 1900				
RCA.....	0047, 0054, 0000, 0051, 0093, 0060, 0178, 0030, 1447, 1454, 0625, 0560, 0618, 2002, 1922, 1919, 1917, 1547, 0018, 0019, 1347, 1247, 1147, 1047, 0774, 0753, 0679, 0021, 0038, 0090,	Rover	0036, 0877				
		Rowa	0748, 0037, 0698, 0712, 0264, 0587, 0009, 0817				
		Royal	0825				
		Royal Lux	0370, 0335, 0412				
		Runco	0017, 0060, 0030, 0016, 0497, 0603, 1398				
		Ruyi.....	0817				

Scotland.....	0163	Sharp	1393, 0818, 0093, 1602, 0054, 0180, 0053, 0030, 0668, 0036, 0650, 0653, 1193, 0688, 0689, 0720, 0787, 0851, 1165, 1917, 0491, 0474, 0386, 0256, 0200, 0179, 0165, 0157, 0039, 0032, 0019, 0009	Silver	0361, 0036, 0455, 0019, 0179	Sonolor.....	0548, 0361, 0163, 0208, 0282
Scott	0236, 0180, 0178, 0030, 0019, 0039, 0177, 0179, 1189	Shen Ying	0003, 0009, 0092, 0179, 0474	SilverCrest	1037	Sontec	0037, 0370, 0009
Sears	0047, 0054, 0017, 0154, 0000, 0156, 0051, 0093, 0060, 0053, 0178, 0030, 0171, 0166, 0037, 0036, 0159, 0165, 0179, 0208, 0280, 1904, 1926, 0146, 0135, 0096, 0056, 0055, 0039, 0038, 0035, 0032, 0024, 0021, 0020, 0019, 0018, 0016	Shencai.....	0145, 0264, 0009, 0412	Simpson.....	0178, 0030, 0011, 0186, 0187	Sony	0000, 0834, 1599, 0017, 0154, 1100, 0150, 0053, 0037, 1505, 0036, 0650, 1925, 1904, 1751, 1685, 1651, 1619, 0011, 1317, 1300, 1167, 0074, 0810, 0080, 0632, 0353, 0157, 0111
Seaway	0634	Sheng Chia.....	0093, 0236, 0009, 0033, 0179, 0474, 1150	Singer	0060, 0037, 0433, 0009, 0092, 0247, 0335, 0371, 0891, 1537	Sound & Vision	0218, 0374
Seelver	1037	Shenyang	0264, 0009, 0696, 0753, 0817	Sinotec.....	0773	Soundesign	0180, 0178, 0019, 0056, 0179, 0186
SEG.....	0037, 0668, 1037, 0487, 0264, 0218, 0036, 0009, 0217, 0247, 0362, 1163	Sherwood	0009	Sinudyne.....	0037, 0361, 0163, 0177, 0544	Soundwave	0037, 0032, 0418
SEI.....	0037, 0163, 0177, 0544	Shintoshi	0037	Skantic.....	0163	Sowa	0156, 0051, 0060, 0178, 0036, 0226, 0092, 0474, 1150
Sei-Sinudyne....	0037, 0544	Shivaki.....	0178, 0556, 0037, 0374, 0443	SKY	0037, 0282, 0880	Soyea	0773
Seimitsu	0019	Shogun	0019	Sky Brazil.....	0880	Spectra.....	0009
Seleco	0264, 0163, 0346, 0362, 0371, 0411, 1351	Shorai	0179	Sky-North	0037	Spectravision ...	0156, 0178, 0159, 0179, 0186
Semivox	0236, 0463, 0180	Show	0009, 0418	Skygiant.....	0180	Spectricon.....	0003, 0032
Semp.....	0156, 1356	Siam	0037	Skysonic	0696, 0753	Spectroniq.....	1498
Sencora.....	0009	Siarem	0163	Skyworth.....	0748, 0037, 0698, 0264, 0009, 0696, 0753, 0817, 0825	Squareview.....	0171
Sentra	0035	Siemens.....	0145, 0037, 0195, 0032, 0146, 0157, 0200, 0327, 0535, 0554	Sliding.....	0865, 0880	SR2000	0154, 0171
Serie Dorada....	0156, 0180, 0178, 0030, 0019, 0056	Shiera	0556, 0037, 0012	SLX	0668	Ssangyong	0009, 0032
Serino	0093, 0610, 0455	Siesta	0370	Smaragd	0487	SSS	0180, 0019
Shancha	0264, 0412, 0817	Signature	0047, 0093, 0030, 0016, 0165, 0179, 0187	Soemtron	0865, 1298	Stag.....	0032
Shanghai	0264, 0226, 0009, 0208, 0412, 0817	Signa	0047, 0093, 0030, 0016, 0165, 0179, 0187	Solar Drape.....	0000, 0032	Staksonic	0009
Shaofeng.....	0145, 0817	Signet	1262	Solavox	0037, 0548, 0361, 0032, 0163	Standard.....	0037, 1037, 0218, 0009, 0217, 0374
		Silva	0037, 0361, 0648	Sole.....	0813	Standard Comps	0218, 0009
		Silva Schneider	0037, 1556	Sonawa	0218	Starlite	0236, 0180, 0037, 0264, 0009, 0019, 0163
		Silvano.....	0587	Songba	0009	Stenway	0218, 0282
				Soniko	0037	Stern	0264, 0163, 0411
				Soniq	1467	Stevison	1982
				Sonitron	0370, 0208, 0217, 0339		
				Sonix	1376		
				Sonneclair.....	0037		
				Sonoko	0037, 0264, 0009, 0217, 0282		

Strato	0037, 0264, 0009	Synco	0000, 0451, 0093, 0060, 0178, 0036, 0092, 0474	Tech Line	0037, 0668, 1163		0754, 0820, 0896, 1556
Strong	1149, 1163			Tech Lux.....	1189	Telefusion	0037
Studio Experience	0843	Syntax	1144, 1240, 1331	Techica.....	0218	Telegazi.....	0037, 0264, 0218, 0163
Stylandia	0217	Sysline	0037	Technica.....	1982	Telemeister	0037
Sunkai	0610, 0487, 0218, 0455, 0355, 0865	T+A	0447	Technics.....	0054, 0250, 0051, 0556, 0650, 0226, 0046, 0055	Telestar	0037
Sunstar	0037, 0264, 0009, 0371	Tacico	0178, 0009, 0092, 0179, 0474, 1150	TechniSat	0556	Teletest	0556, 0037, 0009
Sunwatt.....	0455	Tai Yi	0009, 1150	Technisson	0714, 1289	Teletech	0037, 0668, 1037, 0009, 0247
Sunwood.....	0037	Taishan	0009, 0374, 0817	Technol Ace	0179	Teleton	0036, 0179, 0186, 0217
Superla.....	0217	Talent	0178	Technosonic.....	0556, 0499	Televideon	0163
Superscan	0093, 0864	Tandberg.....	0361, 0109, 0367	Technotrend	1531	Television	0037
Supersonic	0455, 0009, 0208, 1189	Tandy	0093, 0218, 0039, 0163, 0165, 0217, 0247	Technovox	0030, 0217	Tempest	0264, 0455, 0009
SuperTech	0556, 0037, 0218, 0009	Tashiko	0036, 0650, 0032, 0033, 0092, 0146, 0163, 0170, 0217, 1150	Techview	0847	Tennessee	0037
Supra	0178, 0009, 0039, 0056, 0374	Tatung	0054, 0154, 0000, 0156, 0051, 0060, 0037, 0036, 0038, 0033, 0055, 0011, 0009, 0003, 0217, 0474, 1150, 1156, 1248, 1254, 1556, 1756	Techwood	0250, 0051, 0060, 0003, 0055, 0056, 1163	Tensai	0037, 1037, 0218, 0009, 0105, 0217, 0247, 0371, 00374
Supre-Macy	0039, 0046, 0186	TCC	0826	Tecnimagen.....	0556	Tenson	0009
Supreme.....	0000	TCL.....	0706, 0698, 0412, 0826, 1537	Teco	0051, 0093, 0178, 0264, 0218, 0036, 0653, 0009, 0092, 0280, 0474	Tera.....	0030, 0092, 0466, 0474
Susumu	0218, 0287, 0335, 0474	TCM.....	0714, 0808, 1289	Tedelex.....	0698, 0606, 0009, 0208, 0217, 0418, 0891, 1537	Tevion	0556, 0037, 0714, 0668, 1037, 1137, 0648, 0767, 0808, 1248, 1259, 1289, 1298, 1498, 1556
Sutron	0009	Teac	0706, 0154, 0178, 0171, 0037, 0714, 0668, 1909, 1037, 0698, 0712, 0264, 0455, 0418, 0512, 0544, 0412, 0689, 0282, 0217, 0170, 0159, 0146, 1149, 1755, 1904, 0009	Teiron	0009	Texet	0218, 0009, 0217, 0374
SV2000	0054	Tek.....	0820	Tek.....	0820	Texla	0780
SVA.....	0748, 0587, 0768, 0865, 0870, 0871, 0872	Teknika.....	0054, 0463, 0180, 0150, 0060, 0178, 0016, 0019, 0032, 0039, 0046, 0056, 0092, 0179, 0186	Teknika.....	0054, 0463, 0180, 0150, 0060, 0178, 0016, 0019, 0032, 0039, 0046, 0056, 0092, 0179, 0186	ThemeScene	0887
Svasa	0455			Teleavia	0287, 0343	Thomas	0047, 0178, 0019, 0039, 0056, 1904
Swisstec.....	0880			Telecolor	0017	Thomson	0047, 1447, 0037, 0625, 0560, 0109, 0287, 0335, 0343
Sydney	0217			Telecor	0037, 0218, 0163, 0217, 0394	Thorn	0037, 0361, 0264, 0036, 0035, 0074, 0109, 0163, 0335, 0343, 0499, 0512, 0535
Sylvania.....	1271, 0047, 0054, 0154, 0000, 0051, 0178, 0030, 0171, 0037, 0036, 0381, 1314, 1394, 1904, 1926, 1931, 0187, 0186, 0179, 0159, 0096, 0092, 0056, 0024, 0020	Tec.....	0037, 0009, 0163, 0217, 0247, 0335, 0474	Telefunken	0702, 0037, 0625, 0714, 0560, 0486, 0698, 0712, 0587, 0498, 0346, 0343, 0335, 0287, 0109, 0074, 0056, 0753,	Thorn-Ferguson	0335, 0343, 0499

Tiane	0093, 0817	Toyoda	0264, 0009, 0371	0544, 0554, 1163,	Waltham	0037, 0668, 1037,
Tiny	1269	Toyomenka	0178	0346, 0327, 0247,		0109, 0217, 0418,
Tiny Digital	0660	Trakton.....	0264, 0217	0217, 0200, 0177,		0443
TMK	0236, 0180, 0178, 0056, 0177	Trans Continens	0037, 0668, 1037, 0217	0170, 0157, 0146, 0109, 0105, 0074, 0070, 0032, 0011, 0009	Wards	0047, 0054, 0017, 0154, 0000, 0156, 0051, 0093, 0236, 0180, 0060, 0178, 0030, 0166, 0037, 0195, 0020, 0019, 0165, 0179, 0018, 0186, 0187, 0016, 0866, 1147, 1156, 1347, 0151, 0135, 0111, 0096, 0021, 0080, 0024, 0056, 0055, 0027, 0033, 0046, 0039, 0038, 0035
TML.....	1756	TRANS-contrs ..	0556, 0865	Univox		
TNCi.....	0017	Transonic	0037, 0698, 0712, 0264, 0455, 0587, 0009, 0418, 0512, 0780	V.....		
Tobishi.....	0218					
Tobo	0748, 0264, 0009, 0412					
Tocom	0156	Triad	0556, 0218	V2max		
Tokai	0037, 0668, 1037, 0009, 0163, 0217, 0374	Trical	0157	V7 Videoseven .		
		Trident.....	0217			
Tokaido.....	1037	Trio.....	1498	Vector Research		
Tokyo	0035	Tristar.....	0264, 0218	Vestel		
Tomashi.....	0218, 0282	Triumph	0556, 0037, 0177, 0346	Vexa		
Tongguang	0264, 0412	Truetone	0250, 0051, 0055	Victor		
Tongtel	0587, 0780	Tsoschi	0282			
Tophouse	0180, 0672	Tuntex	0030, 0009, 0092, 0474	Videocon.....		
Topline.....	0668, 1037			Videologic		
Toshiba.....	1163, 1256, 1508, 1306, 0156, 1524, 0154, 0093, 0150, 1265, 0060, 1145, 0145, 0166, 0195, 1037, 0264, 0036, 0618, 0650, 0508, 1325, 1289, 1343, 1356, 1360, 1369, 1456, 1556, 1635, 1656, 1704, 1918, 1935, 1936, 0009, 0011, 0035, 0070, 0109, 0217, 0381, 0412, 0423, 0509, 0644, 0718, 0832, 0845, 1150, 1156, 1169, 1173	TVS.....	0463	Videologique ...		
		TVTEXT 95	0556	Videomac.....		
		Uher.....	0037, 0486, 0370, 0019, 0374, 0418, 0480	Videosat.....		
				VideoSystem....		
		Ultra	0019, 0039, 0092	Videotechnic ...		
		Ultravox	0037, 0163, 0247, 0374	Videoton.....		
				Vidikron.....		
		Unic Line	0037, 0455, 0473	Vidtech.....		
		Unitech.....	0039	Viewsonic		
		United	0037, 0714, 1037, 0587, 1916, 1982			
		Universal	0047, 0037, 0714, 0021, 0027, 0135	Viking		
				Vision		
		Universum	0037, 0668, 0195, 1037, 0361, 0264, 0370, 0036, 0618, 0362, 0411, 0418, 0473, 0474, 0480, 0492, 0512, 0535,			
				Vizio		
				Vortec		
				Voxson		
Tosonic.....	0185					
Totevision.....	0051, 0039					
Towada	0217					

Windstar 0282
 Windy Sam 0556
 Wintel 0714
 World 0451, 0236, 0463, 0180
 World-of-Vision 0865, 0877, 0880, 0890, 1217, 1289, 1298
 Worldview 0455
 Wyse 1365
 Xenius 0634, 0661
 Xiahua 0698, 0264, 0009, 0412, 0773, 0817
 Xianghai 0009
 Xiangyang 0264, 0412
 Xiangyu 0009
 Xihu 0264, 0412, 0817
 Xinaghai 0412
 Xingfu 0009
 Xinghai 0264
 XLogic 0698, 0860
 Xoro 1196, 1217
 XR-1000 0154, 0180, 0171, 0016, 0096, 0179
 Xrypton 0037
 Yamaha 0030, 0650, 0019, 0769, 0797, 0833, 0838, 0839, 1576
 Yamishi 0037, 0218, 0455, 0217, 0282
 Yapshe 0250
 Yingge 0009
 Yokan 0037
 Yoko 0037, 0264, 0370, 0218, 0009, 0217, 0247, 0339
 Yonggu 0009
 Yorx 0030, 0218
 Youlanasi 0817
 Yousida 0009

Ytaiwai 1531
 Yuhang 0009
 Zanussi 0264, 0163, 0217
 Zenith 0047, 0017, 0000, 0093, 0463, 1265, 0812, 0178, 0030, 1145, 0145, 0171, 0037, 1909, 0146, 0092, 0039, 0016, 1305, 1904, 1911, 1929
 Zenor 0339
 ZhuHai 0009, 0374
 Zonda 0698, 0003

CBL

3M 0033
 A-Mark 0144, 0277, 0008, 0040
 ABC 0237, 0014, 0003, 0008, 0007, 0011, 0013, 0017, 0033
 Accuphase 0014, 0003, 0007, 0011, 0013, 0017
 Acorn 0237
 Action 0237
 Active 0237
 ADB 1082, 1230, 1269, 1927
 Aichi Denshi 1512
 Aim 0015
 Allegro 0153, 0315
 American 0060
 Americast 0899
 Amstrad 1222
 Archer 0237, 0153, 0797
 Auna 0277, 1230, 1269

Austar 0276, 0012
 BCC 0276
 Bell & Howell 0014
 Bell South 0899
 Birmingham
 Cable Comms .. 0276
 British Telecom 0003
 Cable & Wireless 1068
 Canal+ 0443
 Century 0008, 0153, 0315
 Citation 0017
 Citizen 0153, 0242, 0315
 Clearmaster 0883
 ClearMax 0883
 Colour Voice 0025, 0031
 Comcor 1522
 Comcrypt 0443
 Comtec 0019
 Comtronics 0040, 0060
 Contec 0019
 Cool Box 0883
 Coolmax 0883
 Curtis Mathes 0015, 0242
 Daeryung 0877, 1877, 0477, 0277, 0008
 Dalvi 1522
 Digeo 1187
 Digi 0637
 Director 0476
 Dumont 0637
 DX Antenna 1500, 1502
 Eastern 0002, 0418
 Emerson 0014, 0015, 0797
 Encon 0008
 Everquest 0015, 0040
 Fastweb 1630
 Filmnet 0443
 Focus 0400

Force 1798
 Fosgate 0276
 Foxtel 1222
 France Telecom 0817
 Freebox 1482
 Fujitsu 1497
 Funai 0019
 Galaxi 0008
 Garrard 0153
 GC Electronics 0040
 GE 0237, 0144, 0021
 Gehua 0476
 Gemini 0015, 0070, 0242, 0400, 0797
 General Instr. 0476, 0810, 0014, 0276, 0003, 0012, 0011, 0015, 0024
 Gettersson 0040
 Gibraltar 0003
 GMI 0015, 0797, 0883
 Golden Channel 1110
 GoldStar 0144, 0040
 Goodmind 0797
 Hamlin 0009, 0273, 0015
 Hitachi 0009, 0014, 0003, 0008, 0011, 0033
 Houston 0011
 Humax 1813
 Hytek 0007
 Hytex 0007
 Insight 0476, 0810
 Jasco 0015, 0153, 0315
 Jebsee 0014, 0400
 Jerrold 0476, 0810, 0014, 0276, 0003, 0012, 0011, 0015, 0024, 0031
 Kabel Deutschld 1981
 Kabelvision 0003

Kloss	0277	Pace	0877, 1877, 0237, 1068, 1060, 0008, 1577	Scientific Atlanta	0877, 1877, 0477, 0237, 0000, 0003, 0277, 0008, 0012, 0017, 0021, 0025, 1510	TS.....	0003, 0024
KNC	0008	Panama	0107, 0021	Sigma	0019	Tusa.....	0015
Kuang Yu.....	0024	Panasonic	0000, 0144, 0107, 0008, 0021, 0040, 0375, 1488	Signal	0011, 0015, 0040	TV Comm	0019
Leon.....	0015	Panther.....	0637	Signature	0011	TV86	0040
LG	0144, 0040	Paragon.....	0000, 0525, 0008	SL Marx	0040	Unika	0153
Macab	0817	Penney	0000, 0637	Sony.....	1006, 1460	United Artists ..	0007, 0024
Macom	0033	Philips.....	0317, 0817, 0013, 0025, 0031, 0060, 0153, 0242, 0290, 1305	Sprucer	0144, 0021	United Cable	0014, 0276, 0003, 0011
Madritel	1230	Pioneer	0877, 1877, 0144, 0533, 0023, 1021, 1500	Starcom	0014, 0003, 0015	Universal	0153, 0315
Magnavox	0014, 0797	Popular Mechs .	0400	Stargate	0014, 0015, 0040, 0797	UPC.....	1582
Maspro	1510	Prism	0012, 0013	StarHub.....	0276, 1927	US Electronics .	0276, 0003, 0008, 0017
Matav	1082	Pulsar	0000, 0040	Starquest	0015	V2	0883
Melita	0003	Pulser	0040	Storm	0637	Videoway.....	0000
Mellenium	0153	PVP Stereo VM.	0003	Suena Madritel	1230	Viewmaster.....	0883
Memorex.....	0000	Quasar	0000	Sumitomo	1500, 1503, 1504	Viewstar.....	0060
Mitsubishi.....	0003	R-Line	0040	Supercable.....	0276	Vision	0883
MNET	0019, 0443	RadioShack	0015, 0153, 0315, 0797, 0883	Supermax	0883	Visiopass	0817
Mood.....	1386	RCA	1256, 0021, 0060, 0797	Tadiran	0040	Vortex View	0883
Motorola.....	1376, 0476, 0810, 1187, 1254, 0014, 0276, 1106, 0400, 1540	Realistic	0153	Tele+1	0443	Zenith	0000, 0525, 0899, 0008, 0015, 0017, 0060, 0153, 0315
MS.....	0015	Recoton.....	0153, 0400	Teleavia	0040	Zentek	0400
Multichoice.....	0019, 0443	Regal	0279, 0273, 0276	Telenet	1920		
Multitech	0883	Regency	0002	Telepiu.....	0443		
MultiVision.....	0012	Rembrandt	0011, 0040, 0070, 0153	Teletronik.....	1522		
NEC.....	1496	Runco	0000	Televew	0040		
Nikkai	0153	Sagem	0817, 1624	Telewest.....	1068		
Nokia	1569	Salora	0000	Telsey	1630		
Noos.....	0817, 1624	Samsung	0000, 0144, 1060, 0003, 0023, 0040, 0070, 1666	Thomson.....	1256, 1110, 1582		
Nova Vision	0277, 0008	Satbox	0375	Time Warner cbl	1877		
Novaplex.....	0277, 0008, 0017			Timeless.....	0040, 0418		
NSC.....	0012, 0070, 0400, 0637			Tocom	0019, 0012, 0013		
NTL	1068, 1060, 0276, 0003, 0277			Torx	0003		
Oak	0019, 0007, 0017			Toshiba	0000, 1509		
Ono	1068			Trans PX.....	0276, 0153, 0315		
Optimus	0021			TransACT	1106, 1386		
Optus	1060, 0276			Tristar	0883		

SAT

@sat	1300, 1831
@Sky	1334
ABsat	0713
ADB.....	0642, 0887, 0241, 1259, 1367, 1418, 1473, 1491
Aiwa	1514, 1515
Akai	0200
Alba	0455, 0713, 1284, 1659, 1811
Allsat	0200, 0364, 1017

Allsonic.....	0369	Axis.....	1111, 0369	CityCom.....	0299, 0607, 0818, 1075, 1176, 1232	DiPro.....	1367, 1543
Alltech.....	0713	B@ytronic.....	1412	Classic.....	1672	DirecTV.....	1377, 0392, 0566, 0639, 1639, 1142, 0247, 0749, 1749, 0724, 0819, 1856, 1076, 1108, 0099, 1109, 1392, 1414, 1442, 1443, 1444, 1609, 1640
Allvision.....	1232, 1334, 1412	Bauckhage.....	1331	Clatronic.....	0332, 1413	Discoverer.....	0605
AlphaStar.....	0772	Beko.....	0455	Clemens Kamphus.....	0396	Dish Network Sys.....	1505, 1005, 0775, 1170, 1775
Amitronica.....	0713	Bell ExpressVu.....	0775	CNS.....	1367	Dishpro.....	1505, 1005, 0775, 1775
Ampere.....	0132, 0396	Bentley Walker.....	1017	Cobra.....	0396	Distratel.....	0885, 1283, 1704
Amstrad.....	0847, 1175, 0132, 0338, 0396, 0713, 0885, 1113, 1693, 1801	Best.....	0369	Colombia.....	0132	DMT.....	1075
Anglo.....	0713	Big Sat.....	1457	Columbia.....	0132	DNT.....	0200, 0396
Ankaro.....	0369, 0713, 1279	Black Diamond.....	1284	Comag.....	0132, 1232, 1366, 1412, 1413, 1579	Dream Multimedia.....	1237
AntSat.....	1017, 1083	Blaupunkt.....	0173	Condor.....	0369, 0607	DSE.....	1375
Apollo.....	0455	Blue Sky.....	0713	Connexions.....	0369, 0396	DSTV.....	0879, 0642, 1433
Arcon.....	0332, 1075, 1279	Blue Star.....	1279	Conrad.....	0132, 0369, 0607	Dune.....	0369
Arcus.....	1143	Boca.....	0132, 0713, 1232, 1366	Coship.....	1457	Durabrand.....	1284
Arion.....	1115	Bose.....	1616	Crossdigital.....	1109	DX Antenna.....	1530
Armstrong.....	0200	Boston.....	1251	Crown.....	1284	Echostar.....	1505, 1005, 0775, 0853, 0167, 0610, 1200, 1775, 1767, 1473, 1418, 1409, 1323, 1170, 0713, 0455, 0396
Arnion.....	1300	Brainwave.....	0332, 0658, 1294, 1672	Cryptovision.....	0455	Einhell.....	0132, 0713
Asat.....	0200	British Sky Bcasing.....	0847, 1175, 1656, 1662	Cyfra+.....	1076	Elap.....	0713, 1129, 1567
ASCI.....	0114, 1334	Broco.....	0713	Cyrus.....	0200	Electron.....	1279
ASLF.....	0713	BskyB.....	0847, 1175, 1662	D-box.....	0723, 1114	Elsat.....	0713
AssCom.....	0853	BT.....	1296	Daeryung.....	0396	Elta.....	0200, 0364, 0369, 1659
AST.....	0321	Bubu Sat.....	0713	Daewoo.....	1111, 0713, 1296, 1743	Emme Esse.....	0369
Aston.....	1129, 1261	Bush.....	1284, 1471, 1645, 1672, 1743, 1811	Deltasat.....	1075	Energy Sistem.....	1631
Astra.....	0607, 0713	Canal.....	0853	Dgtec.....	1242, 1542, 1631	Engel.....	0713, 1017, 1251
Astratec.....	1743	Canal Digital.....	0853, 1622, 1780	Digatron.....	1294	EP Sat.....	0455
Astro.....	0173, 0369, 0607, 0658, 1099, 1100, 1113	Canal Satellite.....	0853, 0292, 1339, 1853	Digenius.....	0299, 1161	Esat.....	0879
Atsat.....	1300, 1831	Canal+.....	0853	Digitality.....	0607	Eurieult.....	0885
AtSky.....	1334	Centrex.....	1457	Digifusion.....	1645, 1743		
Audioline.....	1672	Century.....	0856	DigiLogic.....	1284		
Audioton.....	0364	CGV.....	1413	DigiQuest.....	1300, 1457, 1473		
Aurora.....	0879, 0642, 1433	Chaparral.....	0216	DigiSat.....	1232		
Austar.....	0879, 0642, 0494, 1176, 1259	Chess.....	0114, 0713, 1334, 1626	Digisky.....	1457		
Avalon.....	0396	Chili.....	1718	DigitAll World.....	1227		
Axil.....	1457, 1659			Digiturk.....	1076		
				Digiwave.....	1631		
				Dijam.....	1296		

Eurocrypt	0455	Gecco	1412	Homecast	1214, 1680	JVC.....	0775, 0492, 1170, 1507, 1531, 1532, 1775
EuroLine.....	1251	General Instr. ...	0869	Hornet	1300	K-SAT	0713
Europa	0607	General Satellite	1176	Houston	0775, 0396	Kamm.....	0713
Europhon	0132, 0299, 0607	Globo	1251, 1334, 1412, 1429, 1626	HTS.....	0775, 1775	Kaon.....	1300, 1583
Eurosky	0132, 0114, 0299, 0369, 0607	GOD Digital	0200	Hughes Net Sys	1142, 0749, 1749, 1442, 1443, 1444	KaTelco.....	1111
Eurostar.....	0607, 0818	GOI.....	0775, 1775	Humax	1176, 1427, 1670, 1675, 1743, 1790, 1882, 1915	Kathrein.....	0173, 0200, 0114, 0480, 0504, 0553, 0658, 0713, 0818, 1416, 1561, 1567, 1706, 1707, 1709
Eutelsat	0713	Gold Box	0853, 0292	Hung Chang.....	0732	Kennex	0125
Expressvu	0775, 1775	Gold Vision	1017, 1631	Huth	0132, 0332, 0335, 0364, 0607, 1017, 1075, 1143	Kenwood.....	0853
Eycos	1279	Golden Interstar	1283	Hwalin	0885	Key West	0132
Fagor	0364	GoldStar	0335	Hyundai.....	1075, 1159	Kiton	0114
Fenner	0369, 0605, 0713	Goodmans.....	0455, 1246, 1284, 1291	iCan.....	1367	Konig	0607
Ferguson.....	0711, 0455, 1291, 1743	Gradiente	0856, 0099, 0887	ID Digital	1176	Kosmos	0335
Finepass.....	1593, 1780	Granada.....	0455	IEEC.....	0605	Kreatel	1385
Finlandia	0455	Grothusen	0335	ILLUSION sat...	1557, 1631	Kreiling	0114, 0658
Finlux	0455	Grundig.....	0847, 0853, 0173, 0879, 1291	iLo	1535	Kreiselmeyer.....	0173
Flair Mate.....	0713	Haensel & Gretel	0132	Imperial.....	1334, 1429, 1672	L&S Electronic .	0132, 0369, 1334
FMD	0114, 1251, 1413, 1457	Handan	1622, 1780	Indovision	0887	Labgear.....	1296
Fortec Star	1017, 1083	Hanseatic	0605, 1099, 1100	Ingelen	0114, 0396	LaSAT	0173, 0132, 0299, 0369, 0607
Foxtel	0879, 0720, 0455, 1176, 1356	Hantor	0332	Innova	0099	Lava.....	1631
Fracarro.....	0125	Hauppauge	1294, 1672	International....	0132	Legend	1718
Freecom.....	0335	HB	1214, 1801	Interstar	1017, 1214	Legrand.....	1718
Fresat	0885	HDT	1159	Intervision	0364, 0607	Lemon	1334
FTEmaximal	0369, 0713	HE@D	1279	Irradio.....	1331	Lenco	0335, 0369, 0607, 0713
Fuba.....	0173, 0299, 0369, 0396, 1161, 1214, 1251, 1801	Heliocom	0607	ISkyB	0887	Lennox	0369
Fugionkyo	0125	Helium	0607	ITT Nokia	0723, 0455	Lenoxx	1611
Funai	1377, 0338	Hills	1232	Jadeworld	0642	LG	0335, 1075, 1226, 1414
Galaxis	0853, 1111, 0879, 0364, 0369, 1557	Hirschmann	1111, 0173, 0125, 0299, 0369, 0396, 0607, 1232, 1412	Jaeger	1334	Lifesat.....	0132, 0299, 0369, 0605, 0713
Galaxisat	0321	Hisawa	0332	Jerrold.....	0869	Lodos	1284
Gardiner	0818	Hisense.....	1535	JiWon	0364	Logik	1284
Garnet	1075	Hitachi	0749, 0819, 0214, 0455, 0489, 0491, 1250, 1284, 1518, 1523, 1525	Johansson	0332, 0364	Logix	1017, 1075
GbSAT	1214	HNE	0132	Jolly	0364		
GE.....	0392, 0566			JSR	0364		

Lorenzen	0132, 0299, 0607, 1161, 1294, 1579	Microtec.....	0713	Optex	0114, 0364, 0713, 1283, 1611	Pioneer	1142, 0853, 0292, 0329, 0352, 1308, 1442
Lorraine	0335	Mitsubishi	0749, 0455, 0491	Optimus	0724	Planet	0396
Lupus	0369	Morgan's.....	0200, 0132, 0364, 0713, 1232, 1412	Optus	0879, 1143	PMB	0713, 1611
M Electronic	0818	Motorola	0869, 0856, 1473	Orbis	1232, 1334, 1412	Polytron	0396
M vision.....	1557	MTEC.....	1214	Orbitech	0114, 1099, 1100	Portland	1296
M&B	0605	Multibroadcast .	0879, 0642	P/Sat	1232	Power Sky	1279
Magnavox	0724, 0722	Multichoice	0879, 0642, 1433, 1559, 1560	Pace.....	0847, 0853, 0200, 0887, 0720, 1175, 0791, 0455, 0329, 0241, 1323, 1356, 1423, 1623, 1693, 1717, 1848, 1850	Predki	0332
Manata	0132, 0713	Muratto	0321, 0335	Pacific	1284, 1375	Preisner	0132, 0396, 1113, 1366
Manhattan	0332, 0364, 0455, 1017, 1083	Mx Onda.....	1659	Packard Bell.....	1111	Premier.....	0853, 0723, 0292, 1429
Marantz.....	0200	Myryad	0200	Palcom	0299, 1161, 1331, 1409	Primacom	1111
Maspro	0173, 0713, 1520, 1530	Mysat	0713	Palladium	0396	Primestar	0869
Matsui	0173, 0332, 1284, 1743	MySky	1693, 1848, 1850	Panarex.....	1159	Promax	0455
Matsushita.....	0214, 0340, 0500	Navex	0332	Panasat.....	0879, 1433	Proscan	0392, 0566
Max	0607	NEC	0496, 1270, 1519, 1617	Panasonic	0247, 0701, 0847, 0214, 0340, 0455, 0500, 1304, 1404, 1508, 1526, 1527, 1528	Proton	1535
Maximum	1075, 1334	NEOTION.....	1334	Panda	0173, 0455, 0607	QNS	1367, 1404
McIntosh	0869	Netgem	1322	Pansat	1159, 1807	Quadral.....	0369
Mediabox	0853, 0292	Netsat	0099, 0887	Patriot	0132	Quali-TV	1955
Mediacom	1206	Neuf TV	1322	Paysat	0724	Quelle	0299, 0607
MediaSat	0853, 0292	Neuhaus	0607, 0713	peeKTon.....	1457	Radiola	0200
Medion	0132, 0299, 0369, 0713, 1075, 1161, 1232, 1334, 1412, 1626	Neuling	0132, 1232	Philips	1142, 0749, 1749, 0775, 0724, 0819, 0856, 1076, 0722, 0099, 0847, 0853, 0173, 0200, 1114, 0887, 0292, 0818, 0455, 0133, 1442, 1543, 1672	RadioShack.....	0566, 0775, 0869
Medison	0713	Neusat	0713, 1279, 1331	Phonotrend.....	1200, 0364, 1017	Radix	0396, 1113, 1317
Mega	0200	Neveling.....	1161	Pilotime	1339	RCA	0392, 0566, 1142, 0775, 0855, 0143, 1291, 1392, 1442
Memorex	0724	Nevir	1659	Pino.....	1334	Rebox	1214
Metronic	0132, 0713, 0818, 0885, 1279, 1283, 1334, 1375, 1704	Newton	0396			Redstar.....	0369
Metz	0173	Next Level.....	0869			Regal	1251
MiCO	1811	NextWave	0732, 1017, 1143			RFT.....	0200
Micro	0607, 0713, 1294	Nikko	0723, 0200, 0713			Roadstar.....	0853, 0713
Micro Elektronik	0713	Noda Electronic	0885, 1704			Rollmaster	1413
Micro Technology	0713	Nokia	0853, 0723, 0455, 1023, 1223, 1311, 1723			Rover	0369, 0713
Micromaxx	0299, 0369	Nordmende	0455, 1611			Rownsonic	1567
Microstar	1075	Novis	0332			S-ZWO	1207
		OctalTV.....	1505, 1294			SAB	1251
		Omega	0887			Saba	0820, 0607, 0885
		Opentel	1232, 1412				

Sabre	0455	Sharp	0494, 1489, 1513, 1517, 1955	Stream	1848	Telestar	0114, 1099, 1100, 1251, 1334, 1610, 1626
Sagem	0820, 1114, 1253, 1690, 1692	Siemens.....	0173, 0396, 1334, 1429, 1657	Strong	0853, 0820, 0879, 0132, 0125, 0369, 0713, 1159, 1284, 1300, 1409, 1626, 1765	Telesystem	1801
Samsung.....	1377, 1142, 1276, 1108, 1109, 0853, 1017, 1206, 1293, 1442, 1458, 1570, 1609, 1795, 1916	Silva	0299, 0335	Sunny	1300	Teletech	0114
Sanyo	0493, 1219	Skantin	0713	Sunny Sound ...	0369	Televés	0132, 0455, 1214, 1300, 1334, 1742
SAT	0321	SKR	0713	Sunsat	0713	Televisa.....	0887
Sat Control.....	1300	SKY	0856, 1856, 0099, 0847, 0887, 1175, 0711, 1656, 1662, 1693, 1848, 1850	Sunstar	0642, 0132, 0369	Telewire	0364, 1232
Sat Cruiser	1143	Sky Brazil.....	0856, 0887	Supermax	1143, 1283	Tempo	1143
Sat Partner.....	0332, 0335	SKY Italia.....	0853, 1693, 1848	Supernova	0887	Tensai	0332
Sat Team	0713	Sky XL	1251, 1412	Systec	1334	Tevion	0713, 1409, 1593, 1622, 1672
SAT+	1409	Sky+	1175	Tagra	0364	Thomson	0392, 0566, 0847, 0853, 0820, 1175, 0292, 0711, 0713, 0607, 0455, 0885, 1046, 1291, 1534, 1543, 1662
Satcom	0605, 0607	Skymaster	1200, 0605, 0713, 1075, 1334, 1409, 1567, 1611	Targa	1807	Thorn	0455
Satec	0713	Skymax	0200	Tatung	0455	Tiny.....	1672
Satelco.....	0369, 1232	Skyplus.....	1232, 1334, 1412	TBoston	1659	Tioko	0132
Satplus	1100	SkySat	0114, 0605, 0607, 0713	TCL	1143	Tivo.....	1142, 1442, 1443, 1444
Satstation.....	1083	Skyvision	0364, 1334	Teac	1227, 1251, 1322	Tokai	0200
Schaub Lorenz .	1214	SL	0132, 0299, 1294, 1672	Tecatel.....	1200	Tonna	0364, 0455, 0713, 1611
Schneider	1206, 1251	SM Electronic...	1200, 0713, 1409	Techniland.....	0364	Topfield.....	1206, 1207, 1208, 1545, 1783, 1824
Schwaiger	1111, 0132, 0504, 0605, 0607, 0732, 0885, 1075, 1083, 1317, 1334, 1412, 1457	Smart	0132, 0396, 0713, 1113, 1232, 1404, 1413	TechniSat	0114, 0396, 0455, 1099, 1100, 1195, 1197, 1322	Toshida.....	0749, 1749, 0790, 0819, 0455, 0486, 1285, 1446, 1501, 1516, 1530
SCS.....	0299, 1331	Sony	0639, 1639, 0847, 0853, 0292, 0163, 0275, 0282, 0294, 0455, 1524, 1558, 1640	Technomate	1283, 1610	TPS.....	0820, 1253
Sedea Electro. .	0132, 0125, 1206, 1279, 1283, 1626	SR.....	0132	Technosat	1143, 1206, 1331	Triad	0321, 0335
Seemann.....	0396	Star.....	0887	Technosonic....	1672	Triax	0853, 0200, 0132, 0114, 0396, 0713, 1113, 1227, 1251, 1291, 1296, 1626, 1742
SEG.....	0114, 0332, 0369, 0605, 1075, 1251, 1626	Star Choice.....	0869	Technotrend.....	1429	Trio	1075
Seleco	0364	Star Trak	0772, 0869	Technowelt.....	0132, 0607	TT-micro	1429
Septimo.....	0885, 1375	Starland	0713	Techsan.....	1017		
Serd.....	1412	Starlite	0200	Techwood	0114, 1284, 1626		
Serino	0610	Starring.....	0332	tekComm	1017		
Servimat.....	1611			Telasat.....	0605, 0607		
ServiSat.....	0713, 1251			Tele System Elec.	0396, 1251, 1409, 1611, 1801		
				TeleClub.....	1367		
				Teleka	0396, 0607		
				Telesat.....	0605, 0607		

Turnsat	0713
Twiner	0713, 1611, 1742
UEC	0879, 1356
UltimateTV	1392, 1640
Uniden	0724, 0722, 1521
Unisat	0200, 0132
United	1251
Unitor	0332
Universum	0173, 0114, 0299, 0607, 1099, 1251
US Digital	1535
USDTV	1535
Van Hunen	1161
Variosat	0173
Vega	0369
Ventana	0200
Versatel	1795
Vestel	0114, 1251
VH Sat	0299
Viasat	1682
Victor	0492
Vidtech	0321
ViewSat	1232
Visionic	0125, 1279, 1283
VisionNet	1557
Visiosat	0114, 0713, 1129, 1413, 1457, 1718, 1742, 1807
Viva	0856
Voom	0869
VTech	0321, 0818
Wavelength	1232, 1413
Wetekom	0605
Wewa	0455
Wharfedale	1284
Winbox	1801
Winersat	0332
Wintel	0299, 1161

Wisi	0173, 0132, 0299, 0321, 0396, 0455, 0607
World	0332
Worldsat	0114, 1214, 1251, 1543
XMS	1075
Xoro	1807
Xrypton	0369
Xsat	0847, 0713, 1214, 1323
Xtreme	1300
Yakumo	1413
Yamada	1718
Yes	0887
Zehnder	0114, 0321, 0369, 0504, 0818, 1075, 1232, 1251, 1616
Zenith	0856, 1856
Zeta Technology	0200
Zodiac	0396, 1801

CD/DVD

RCA	0522
Sharp	0037
Sony	0878, 1033
Universum	0053

DVD

3D LAB	0503, 0539
4Kus	1158
A-Trend	0714
Accurian	1072, 1416

Acoustic Solutions	0730, 0713, 1228, 1242, 1316
Adcom	1094
Advent	1016
AEG	0770, 0790, 0788
AFK	1051, 1152
Afreedy	0698
Aim	0672, 0699, 0778, 0833, 1165, 1177
Airis	0672, 0826, 1005, 1107, 1224, 1321, 1345
Aiwa	0533, 0641
Akai	0770, 0695, 0790, 0690, 0705, 0716, 0766, 0779, 0788, 0884, 0898, 0899, 1089, 1115, 1233
Akashi	0838
AKI	1005
Akira	0699, 1321
Akura	0898, 1051, 1140, 1171, 1233, 1367
Alba	0672, 0539, 0717, 0695, 0730, 0699, 0713, 0783, 0884, 1140, 1530, 1610
Albatros	1001
Alco	0790
Alize	1151
All-Tel	0835, 1451
Allegro	0869
Altacom	1224
Amisos	0782
Amitech	0784, 0770, 0850
Amoi	0852
Amoisonic	0835
Amphion Media Works	0872, 1245
Amstrad	0770, 0713, 1151, 1173, 1367, 1407

Amuseer	1351
AMW	0872, 1245
Ansonic	0831, 0759, 1316, 1351
Apex Digital	0533, 0672, 0717, 0755, 0794, 0796, 0797, 0830, 1004, 1020, 1056, 1061, 1100, 1126
Aria	0893
Arianet	0818, 0893
Aristona	0539, 0646
Arrgo	1023
Asono	1224
Aspire Digital	1168, 1407
Astar	1489
Atacom	1224
Audiologic	0736
Audiosonic	0690, 1265
Audiovox	0717, 0790, 1041, 1071, 1072, 1121, 1122
Audioworld	0790
Autovox	0713
Auvio	0843
Avious	1165
Awa	0730, 0872
Axion	0730, 1071, 1072, 1193
B & K	0655, 0662
Bang & Olufsen	1696
Base	1451
Basic Line	0713
Baze	0898, 1165
BBK	0862, 1224
Beep	1163
Bel Canto Design	1571
Bellagio	1004, 1245
Belson	1086

Best Buy	1089	Centrum.....	0713, 0779, 0789, 1005, 1227		1117, 1129, 1173, 1502, 1537	digiRED	0717
Black Diamond.	0713, 0766, 0833, 0884	CGV.....	0751, 1115	Cydectin.....	1074	Digital i	0893
Blaupunkt	0717	Changhong	0627, 1061	Cytron	0651, 0705, 0716, 1347	DigitalMax	1738
Blu:sens	1233, 1321, 1489	Cinea	0831, 0841	D-Link	1881	Digitor.....	0651, 0690, 0833, 1005, 1423
Blue Nova Intn .	1321	Cinego	1399	D-Vision	1115, 1367	Digitrex	0672, 1004, 1056, 1100
Blue Parade	0571	Cineral	0730	Daenyx	0872	Digix Media	0826
Blue Sky.....	0672, 0651, 0695, 0790, 0699, 0713, 0778, 0804, 0843, 1423	Cinetec	0713, 0872	Daewoo	0490, 0784, 0770, 1483, 1443, 1441, 1436, 1242, 1234, 1172, 1169, 1072, 0872, 0869, 0833, 0714, 0705	DiK	0831
Boghe	1004	cineULTRA	0699			Dinamic	0788
Boman	0783, 0898, 1005	CineVision.....	0876, 0833, 0869, 1483	Dalton	1036, 1107	Disney	0831, 0675, 1270
Bose	2023	Citizen	1003, 0695, 1277	Dansai	0770, 0783, 1115	DiViDo	0705
Brainwave	0770, 1115	Clairtone	0571	Dantax	0539, 0790, 0713, 0723, 1089	DK Digital	0831
Brandt	0503, 0651, 0551	Classic.....	0730, 1730	Daytek	0872, 1005	DMTech	0783, 1072
Broksonic	0695, 0868, 1419	Clatronic	0672, 0675, 0788, 0818, 1165, 1177, 1233	Dayton	0872	Dragon	0831
Buffalo.....	1882	Clayton.....	0713	DCE.....	0831	DreamX	1151
Bush.....	0672, 0717, 0730, 0831, 1483, 1436, 1419, 1351, 1177, 1165, 1140, 1128, 1051, 0884, 0879, 0833, 0778, 0758, 0723, 0713, 0699, 0690, 0516	Coby.....	0730, 0778, 0852, 1077, 1086, 1107, 1165, 1177, 1321, 1351	Decca	0770, 1115	DSE	0833, 1152, 1483, 1730
Byd:sign	0872	Codex	1233	Denon	0490, 0634, 1282, 1634	DTS	0799
C-Tech	0798, 1152	Commax	1321	Denver	0672, 0699, 0778, 0788, 0898, 1056, 1104, 1107, 1165, 1177, 1265, 1316, 1321	Dual.....	0651, 0730, 0831, 0790, 0665, 0675, 0713, 0779, 0783, 1023, 1068, 1085, 1436
Calif Aud Labs..	0490	Compacts.....	0826, 1107, 1265			Durabrand	1003, 0831, 0713, 1023, 1127, 1502
Cambridge Aud	0751, 1109, 1589	Conia	0672, 0516, 0835, 0852, 1321	Denzel	0665	DVD2000.....	0521
Cambge Sndwks	0690	Contel	0788	Desay	0800, 0843, 1407, 1455	DVX	0768
Campomatic Dig.	1051	Continental Ed.	0831, 0872	Dgtec	0672	E:max	1233, 1321
Cary Audio Des	1477	Craig	0831	Diamond	0651, 0768, 0790, 0751, 0778	EagleTec.....	0714
Cat	0699, 0789, 1421	Creative	0503, 0539	Diamond Vision	1316, 1609, 1610	eBench	1152
CAVS.....	1057	CrossWood	1446	Dick Smith Elec	0833, 1152, 1483, 1730	ECC.....	0730
CCE.....	0730	Crown	0770, 0690, 0713, 0769, 1115	Digihome.....	0713	Eclipse.....	0723, 0751
Celestial	1020	Crypto	1228	DigiLogic	0713	Electrohome....	1003, 0893
cello	1730	Curtis Mathes ...	1087			Elfunk	0713, 0850, 0884
Centrex	0672, 1004	Cybercom.....	0831			Elin	0770
Centrios.....	1577	CyberHome	0714, 0816, 0874, 1017, 1023, 1024,			Elite	1152

	1115, 1151, 1173, 1233	GoldStar	0591, 0741, 0801, 0869	Hoeher	0651, 0831, 0713, 0826, 1004, 1224	Kansas Tech.	1233, 1530
Eltax	0766, 1233, 1321	Goodmans.....	0651, 0730, 0790, 0690, 0713, 0723, 0783, 0833, 0879, 1004, 1140, 1177, 1316, 1423, 1530, 1730	Home Elec.	0770, 0730	Karcher.....	0783
Emerson	0591, 0675, 0705, 0821, 1268			Home Tech Indus.	1107, 1224	Kawasaki.....	0790
Encore	0698			Hoyo	0665	Kendo	0672, 0831, 0699, 0713
ENTERprise.....	0591			Humax	0646, 1588	Kennex	0770, 0713, 0898
Entivo	0503, 0539	GP Audio	1140	Hyundai.....	0766, 0783, 0850, 1061, 1228	Kenwood	0490, 0534, 0682, 0737, 1063
Enzer	0784, 0770, 0766, 1228	GPX	0741, 0699, 0769	I-O Data	1405	Kiiri	0770
ESA	0821, 1268, 1443	Gradiente	0490, 0651	iLo	1348, 1472	King DHome.....	0799
EuroLine	0675, 0788, 1115, 1233, 1351	Graetz	0665	Ingelen	0788	Kingavon	0818
Fenner	0651	Gran Prix	0831, 0898	Ingersol	1023	Kiss.....	0665, 0841, 1523
Ferguson	0651, 0695, 0713, 0884, 0898, 1730	Grandin	0713, 0716, 1173, 1233	Initial.....	0839, 0717, 1472	KLH	0815, 0717, 0790, 1020, 1149, 1261
Finlux	0672, 0591, 0741, 0770, 0751, 0783, 1165	Greenhill	0717	Inno Hit	0713	Kloss	0533
Fintec	1169	Grundig	0539, 0651, 0551, 0695, 0790, 0670, 0705, 0713, 0775, 1004, 1036, 1128, 1177, 1436, 1730	Innovative Tech.	1542	Koda.....	1230
Firstline	0651, 0713, 0799, 0843, 0869, 1530			Insignia.....	1013, 1268	Konka	0711, 0719, 0720, 0721
Fisher	0670	Grunkel	0770, 0831, 0790, 1316	Integra.....	0571, 0627, 1634	Koss	0651, 0769, 0896, 1061, 1423
Funai	0695, 0675, 1268, 1334	GVG.....	1169	Irradio.....	0869, 1115, 1224, 1233	Kreisen	1421
Fusion	0862	H & B	0713, 0818, 0841, 0850, 1233, 1421	IRT.....	0783, 1489	KXD	0857, 1321
Gateway	1073, 1077, 1158, 1194	Haaz	0751, 1152	ISP	0695	Landel	0826
GE	0522, 0815, 0717	Haier	0843	Jamo	1036	Lasonic.....	0627, 0798, 0789, 1173
General Electric	0717	Hanseatic	0741, 0790, 0783	Jaton	0665, 1078	Lawson	0768, 0716
Germatic	1051	Harman/Kardon	0582, 0702	Jay-tech	1265	Lecson	1533
Global Link	1224	HCM	0788	JBL.....	0702	Leiker	0872
Global Solutions	0768	HDT	0705	JDB	0730	Lenco	0651, 0770, 0699, 0713, 0778, 1165, 1177
Global Sphere ..	1152	HE.....	0730, 1163	JDV	1367	Lenoir	1228
Go Video	0573, 0744, 0717, 0741, 1730, 1483, 1443, 1304, 1158, 1144, 1099, 1075, 1044, 0869, 0833, 0783, 0715	Henss	0713	Jeken	0699	Lenoxx	0690, 0838, 1127
Go Vision	1071, 1072	Himage	1089	Jensen	1016	Lexia	0768, 0699
		HiMAX	0843	Jeutech	0766	LG.....	0591, 0741, 0790, 0801, 0869, 1526
		Hitachi	0573, 0664, 0695, 0665, 0713, 0857, 1247, 1664	JMB.....	0695	Lifetec.....	0651, 0831, 1347
		Hiteker	0672	JNC.....	0672	Limit	0768, 0716, 1104
				JSI.....	1423	LiteOn	1058, 1158, 1416, 1440, 1656, 1738
				JVC	0503, 0539, 0558, 0623, 0867, 1164, 1241, 1275, 1597, 1602		
				jWin	1049, 1051		
				Kansai	1107		

Lodos	0713	0783, 0879, 1006,	Neufunk	0665	Packard Bell	0831
Loewe	0539, 0741, 0511,	1107, 1165, 1270,	NeuNeo	0509, 1454	Palladium	0695, 0713, 0779
	0885	1345, 1347, 1423	Nevir	0770, 0831, 1197	Palsonic.....	0672, 0835, 0852,
Logik	0713, 0884	MEI	Next Base	0826		1056, 1321
Logix	0705, 0783	Memorex	NexxTech	1402	Panasonic	0503, 0490, 0571,
Luker	1367		NFREN	0826		0632, 0703, 1010,
Lumatron.....	0741, 0695, 0705,	Metronic	Nikenny.....	1089		1011, 1282, 1362,
	0713, 0833, 1115,	Metz.....	Nintaus.....	1051		1462, 1490, 1579,
	1321	MiCO	Norcent.....	1003, 0719, 0872,	Panda	1762, 1641
Lunatron.....	0741	Micromedia.....		1107, 1265, 1457		0717, 0789
Luxman	0573	Micromega	Nordmende	0831, 1316	Paramount Picts	0779
Luxor	0713, 1004, 1730	Microsoft	Noriko	0752	peekTton	0898, 1224
Magnasonic	0651, 0675, 0769	Microstar	Nowa.....	0843	Philco	0790, 0690, 0788,
Magnavox	0503, 0539, 0646,	Minato	Nu-Tec	0516, 1228		0862
	0675, 0713, 0821,	Minax	Okano	0752	Philips.....	0503, 0539, 0646,
	0885, 1140, 1177,	Minerva.....	Olidata	0672		0675, 0854, 0885,
	1268, 1472, 1506	Minoka	Omni	0690, 0698, 0778,		1158, 1260, 1267,
Magnex	0723, 1165, 1489	Minowa		0782, 0833, 0838,		1340, 1354, 1506,
Magnum	1436	Mintek		0862, 1104		1755, 2056
Majestic.....	1107, 1345	Mirror	Onix	0838	Philo	1345
Malata	0782, 1159	Mitsubishi.....	Onkyo	0503, 0627, 0792,	Phonotrend	0699, 1165, 1177
Manhattan	0705, 0713			1417, 1418, 1612,	PianoDisc	1024
Marantz	0503, 0539, 0675,	Mizuda	Oopla	1627	Pioneer	0490, 0525, 0571,
	1627			1158		0142, 0631, 0632,
Mark	0713	Momitsu	Oppo.....	1224, 1525		0638, 1460, 1531,
Marquant.....	0770	Monyka	Optim	0843		1571, 1900
Matsui	0672, 0651, 0695,	MPX.....	Optimus	0525, 0571	Playgo	1265
	0713, 0884, 1004,	MTlogic.....	OptoMedia Elec.	0896	Plu2	0850
	1316, 1730	Mustek	Orava	0818	Pointer.....	0784
Maxdorf.....	0788	Mx Onda.....	Orbit	0872	Polaroid.....	1020, 1061, 1086,
Maxent	1347	Myryad	Orion	0695, 1128, 1233,		1245, 1316, 1478,
Maxim	0713, 0872, 1242,	Mystrol.....		1419		1480, 1482
	1367	NAD	Oritron.....	0651	Polk Audio.....	0539
Maya	1345	Naiko	Ormond	0713	Portland.....	0770
MBO.....	0730, 0690, 1730	Nakamichi	Otic	0826, 1455	Powerpoint.....	0758, 0872, 1005
McIntosh	1533, 1273	Narita	P&B.....	0818, 1451	Presidian	0675, 1072, 1738
MDS.....	0713, 0778	NEC	Pacific	0695, 0831, 0768,	Prima	0766, 1016, 1228
Mecotek	0770			0790, 0713, 0759,	Prima Elec	0766
Medion	0651, 0630, 0831,	Nesa		0804	Primare.....	1467
	0652, 0716, 0758,				Princeton	0674
					Prinz	0831

Prism	0831, 0705, 1089	1051, 1177, 1227, 1446	SEG.....	0798, 0665, 0713, 0763, 0872, 0884, 1173, 1483, 1530	Sony	0533, 1533, 0864, 0573, 0630, 1017, 1033, 1069, 1070, 1431, 1432, 1433, 1516, 1536, 1548, 1633	
Pro2.....	1107, 1345	Rocksonic	0789	Semp.....	0503	Sound Color	1233
ProCaster	1004	Ronin	0710, 0872	Sensory Science	1158	Sound Mobile...	1298
Proceed	0672	Rotel	0558, 0623, 1178	Shanghai	0672	Soundmaster....	0768
Proline	0672, 0651, 0710, 0833, 1004, 1068, 1483	Rowa	0717, 0516, 0759, 0823, 0872, 1004	Sharp	0630, 0675, 0713, 0752, 1256, 1419, 1642	Soundmax	0768
Proscan	0522	Rownsonic	0789	Sharper Image .	1117	Soundwave	0783
Proson	0713	S&V.....	1165	Sherwood.....	0717, 0741, 0770, 0633, 1043, 1077	Sova	1122
Prosonic	0699, 0752, 1169, 1441	Saba	0651, 0551, 0769	Shinco	0717, 1472	Spectra.....	0872
ProVision	0730, 0699, 0778, 1107, 1163, 1321	Sabaki	0798	Shinsonic	0533, 0839	Standard.....	0651, 0831, 0768, 0788, 0898
Pye	0539, 0646	Saivod	0831, 0759, 1367	Siemssen	1382	Star Clusters....	1152, 1227
QONIX	1051, 1177	Salora	0741, 1446	Sigma Designs.	0674	Starlogic	1005
Qwestar.....	0651	Sampo	0698, 0752, 1321, 1347, 1501	Sigmathek.....	1005, 1224	Starmedia	0818, 1005, 1224
Radionette.....	0741, 0869	Samsung	0490, 0573, 0744, 0199, 0820, 0899, 1044, 1075, 1635	Siltex	1224	Stevison.....	1367
RadioShack.....	0571	Sansui	0784, 0695, 0768, 0716, 0751, 0763, 1051, 1228, 1230, 1316	Silva	0788, 0898	Strong	0713
Raite	0665	Santosh	1115	Silva Schneider	0831, 0898	Sungale	1074, 1532
RCA.....	0522, 0571, 0717, 0790, 0769, 0822, 1013, 1022, 1132, 1193, 1769	Sanyo	0695, 0670, 0675, 0713, 0873, 1228, 1334	SilverCrest.....	1152	Sunkai	0770, 0850
Realistic	0571	Scan	0705, 0835, 0850	Simaudio.....	0885	Sunstech	0831, 1072
REALmagic	0674	ScanMagic	0730, 1730	Singer	0768, 0690, 0716, 0751	Sunwood	0788, 0898
REC	0490, 0766	Schaub Lorenz .	0770, 0788, 1115, 1151, 1165	Sinudyne	1316	Superscan	0821
Recco	0698	Schneider	0539, 0646, 0651, 0831, 0790, 0705, 0713, 0779, 0783, 0788, 0804, 0869, 1367	Sistemas	0672	Supervision.....	0768, 1152
Redstar.....	1003, 0770, 0759, 0763, 0788, 0898, 1107, 1345	Scientific Labs .	0768	Skantic	0539, 1003, 0713	Supratech	0893
Relisys.....	1347	Scott	0672, 0651, 1005, 1036, 1233, 1423	Skymaster	0730, 0768	SVA.....	0672, 0717, 0752, 0860, 1105
Reoc.....	0768, 0752	Seeltech.....	1224, 1451	Skysonic	0766	Sylvania.....	0630, 0675, 0821, 1268
Revoy	0699, 0841			Skyworth.....	0766, 0898	Symphonic	0675, 0821, 1268, 1334
Rex	0838			Sliding	1115	Synn	0768
Richmond.....	1233			Slim Art	0784	TAG McLaren....	0894
Rio	0869			SM Electronic...	0730, 0768, 0690, 1152	Tandberg	0713
RJTech	1360			Smart	0705, 0713	Tangent.....	1321
Roadstar.....	0672, 0730, 0690, 0699, 0713, 0818, 0833, 0879, 0898,			Sonai	0755	Targa	1227
				Sonashi	0831, 0716	Tatung	0770
				Sonic Blue.....	0573, 0715, 0783, 0869, 1099	Tchibo	0741

TCM 0741, 0790
 Teac..... 0571, 0717, 0741,
 0768, 0790, 1483,
 1227, 1197, 1165,
 1006, 0833, 0809,
 0759, 0758, 0692,
 0675, 0516
 Tec..... 0898
 Technica..... 1367
 Technics 0490, 0703
 Technika..... 0770, 0831, 1115,
 1165, 1489
 Technisson 1115
 Technosonic..... 0730, 1051, 1115
 Techwood..... 0692, 0713, 1530
 Tedalex..... 0768, 0690, 1004,
 1228
 Telefunken..... 0790, 0758, 0789,
 0833, 1483
 Teletech..... 0768, 0713
 Tensai 0651, 0770, 0690
 Terapin 1031
 Tevion 0651, 0798, 0768,
 0652, 0833, 0898,
 1036, 1227, 1347,
 1382, 1483, 1730
 Theta Digital 0571
 Thomson 0522, 0551, 0511
 Tiny 1489
 Tivo 1503, 1588
 Tokai 0784, 0790, 0665,
 0698, 0788, 0898
 Tokaido..... 0698
 Tokiwa 0716
 Tom-Tec 0789
 Top Suxess 1224
 Toshiba..... 0503, 0573, 0539,
 0695, 1045, 1154,
 1503, 1510, 1588,
 1769
 Trans Continens 0826

TRANS-conts .. 0831, 0826, 0872,
 1165, 1321, 1327
 Transonic 0730, 1165
 Tredex 0799, 0800, 0803,
 0804, 0843
 TruVision 0857, 1451
 TSM 1224
 TYT..... 0705
 Umax..... 0690, 1151
 Unimax 0770
 United 0695, 0730, 1489,
 1446, 1367, 1351,
 1228, 1173, 1165,
 1152, 1115, 1072,
 0884, 0826, 0788,
 0713, 0699, 0675
 Universum 0591, 0741, 0790,
 0713, 0779, 0869,
 1227, 1530
 Uptek 0763
 upXus 1345
 Urban Concepts 0503, 0539
 US Logic..... 0839
 V 1064, 1126, 1226
 Valor 1298
 Venturer 0790
 Vestel 0713, 0884, 1530
 Vialta 1509
 Victor 1241, 1597
 Vieta 0705, 1265
 Viewmaster..... 0862, 1224
 Vizio 1064, 1126, 1226
 Vocopro 1027, 1360
 Voxson 0730, 0831, 0690
 Vtrek 1228
 Waitec 1151, 1224, 1233
 Walkvision 0717
 Waltham 1530
 Welkin 0831
 Wellington..... 0713

Weltstar..... 0713
 Wesder 0699
 Wharfedale..... 0790, 0698, 0751,
 0752
 Wilson 0831, 1233
 Windsor..... 0713
 Windy Sam 0573
 WIZE 1115
 Woxter 1005, 1151, 1224
 Xbox..... 0522, 1708, 2083
 Xenius 0790
 XLogic 0768, 1152, 1228
 XMS..... 0770, 0788
 Xoro 1173, 1183
 Xwave 1001
 Yakumo 0652, 1004, 1056
 Yamada 0652, 0872, 1004,
 1056, 1151, 1158,
 1416, 1489
 Yamaha 0490, 0539, 0646,
 0545, 1282, 1354
 Yamakawa 0665, 0710, 0872,
 1104, 1489
 Yukai 0730, 1730
 Zenith 0503, 0591, 0741,
 0869
 Zennox 1265
 Zeus..... 0784
 Zoece 1265

VCR

A-Mark 0037, 0240, 0000,
 0278, 0046
 ABS 1972
 Accent 0072

Admiral 0060, 0048, 0039,
 0047, 0104, 0121,
 0209, 0020, 0062,
 0065, 0479
 Adventura 0037, 0240, 0000
 Adyson 0072
 Aiko 0278
 Aim 0278, 0348, 0642,
 0020
 Aiwa 0037, 0032, 0000,
 0209, 0041, 0348,
 0307, 0352, 0124,
 0479, 0742, 1137,
 1284, 1291, 1332,
 1336
 Akai 0037, 0240, 0041,
 0348, 0642, 0352,
 0315, 0020, 0053,
 0061, 0175, 0242
 Akiba 0072
 Akitan 0295
 Akura 0041, 0072, 0271
 Alba 0081, 0000, 0209,
 0072, 0278, 0348,
 0352, 0315, 0020,
 0295
 Alienware 1972
 Allegro 0039, 1137
 Allorgan 0240
 Allstar 0081
 Ambassador..... 0020
 America Action 0278
 American High.. 0035, 0081
 Amoisonic 0479
 Amstrad..... 0000, 0072, 0278
 Anam 0162, 0037, 0240,
 0278, 0579, 1037
 Anam National.. 0162, 1562, 0454,
 0579, 1162
 Anitech 0072
 Ansonic 0000

Arion	1787	Broksonic	0184, 0121, 0209, 0002, 0348, 0208, 0211, 0295, 0361, 0479, 1479, 1815	Crosley	0035, 0081, 0000, 0149, 0110	Dual	0081, 0000, 0041, 0278, 0348
Aristona	0081			Crown	0037, 0072, 0278, 0020, 0271	Dumont	0081, 0000, 0104, 0105
ASA	0037, 0081	Bush	0081, 0000, 0209, 0072, 0278, 0348, 0642, 0352, 0315, 0742	Curtis Mathes ..	0060, 0035, 0162, 0240, 0000, 0041, 0278, 0432, 0277, 0454, 0643, 0760, 1035	Durabrand	0039, 0038, 0642, 0593
Asha	0240					Dynatech	0240, 0000
Astra	0035, 0240, 0051	Calix	0037	Cybernex	0240, 0051	Elbe	0278, 0038
Asuka	0037, 0081, 0000, 0072, 0038	Candle	0037, 0038	CyberPower	1972	Elcatech	0072
Audio-Technica	0058	Canon	0035, 0034	Cyrus	0081	Electrohome	0060, 0037, 0240, 0000, 0043, 0209, 0061
Audiolab	0081	Capehart	0002, 0020, 0062	Daewoo	0037, 0045, 0104, 0209, 0278, 0642, 0352, 0020, 0046, 0210, 0212, 0368, 0561, 0844, 1137, 1278	Electroponic ...	0037
Audiosonic	0278	Carena	0081, 0209			Elin	0240, 0051
Audioton	0020	Carrefour	0045	Dansai	0072, 0278	Elsay	0072
Audiovox	0037, 0278, 0038, 0054	Carrera	0240	Dantax	0352	Elta	0072, 0278
AVA Tech.	0615	Carver	0035, 0081	Daytron	0037, 0278, 0020	Emerald	0184, 0121, 0211
Avis	0000, 0072	Casio	0000	De Graaf	0048, 0081, 0042, 0104, 0046	Emerex	0032
AVP	0000, 0352	Cathay	0278	Decca	0081, 0000, 0067, 0209, 0041, 0352, 0008	Emerson	0035, 0037, 0184, 0039, 0240, 0045, 0000, 0121, 0043, 0209, 0072, 0002, 0278, 0348, 0561, 0510, 0593, 0479, 0378, 1278, 1479, 0361, 1593, 0343, 0295, 0294, 0212, 0211, 0208, 0202, 0088, 0068, 0061, 0036
Awa	0037, 0043, 0278, 0642, 0075, 0579	Catron	0020	Degraff	0048, 0081, 0042, 0104	ESA	1137
Baird	0000, 0104, 0041, 0278, 0046	CCE	0072, 0278	Deitron	0278	ESC	0240, 0278, 0020
Basic Line	0104, 0072, 0278, 0020, 0046	Centrum	0593	Dell	1972	EuroLine	1593
Beaumark	0240	CGE	0000, 0041	Denko	0072	Europhon	0020
Beko	0104	Changhong	0048, 0081	Denon	0081, 0042	Fenner	0020
Bell & Howell ...	0035, 0048, 0039, 0000, 0104, 0046, 0479	Cimline	0209, 0072	Derwent	0041	Ferguson	0000, 0041, 0278, 0348, 0320, 0053
Bestar	0278, 0020	Cineral	0278	Diamant	0037	Fidelity	0240, 0000, 0072, 0352, 0432
Black Diamond ..	0642	CineVision	1137	Diamond	0348	Finlandia	0037, 0048, 0081, 0000, 0042, 0104,
Black Panther ...	0278	Citizen	0035, 0037, 0240, 0000, 0209, 0278, 0036, 0479, 1278	Dick Smith Elec	0642, 0579		
Blaupunkt	0162, 0081, 0034, 0227, 0513	Classic	0037	Digiton	0642, 0579		
Blue Sky	0037, 0209, 0072, 0278, 0348, 0642, 0352, 0742, 1137	Clatronic	0000, 0072, 0020, 1593	DirecTV	0739, 2033		
Bondstec	0072, 0020	Colortyme	0060, 0035, 0045, 0278	Domland	0209		
BPL	0046	Colt	0000, 0072	DSE	0642, 0579		
Brandt	0041, 0320	Combitech	0352				
Brandt Elec.	0041	Condor	0278, 0020				
Brinkmann	0209, 0348	Craig	0037, 0047, 0240, 0072, 0271				
		Criterion	0000, 0072				

	0043, 0384, 0046, 0110	GoldStar	0035, 0037, 0039, 0000, 0209, 0278, 0038, 0018, 0054, 0225, 1137, 1237	Hischito	0045	JMB	0209, 0348, 0352, 0742
Finlux	0081, 0000, 0042, 0104, 0105			Hitachi	0035, 0037, 0081, 0240, 0045, 0000, 0042, 0041, 0384, 1326, 1286, 1037, 0593, 0544, 0105, 0089, 0082, 0065, 0046	Joyce	0000
Firstline	0037, 0045, 0042, 0043, 0209, 0072, 0278, 0348, 0088, 1137	Goodmans	0037, 0081, 0240, 0000, 0209, 0072, 0278, 0348, 0642, 0352, 0020, 0062, 0343, 0579, 0742			JVC	0184, 0081, 0045, 0067, 0041, 0384, 1707, 1329, 1299, 1283, 1279, 1162, 0486, 0366, 0207, 0061, 0058, 0008
Fisher	0039, 0047, 0000, 0104, 0020, 0046, 0054, 0066	GPX	0037	Hoehner	0278, 0642	Kaisui	0072
Flint	0209, 0348	Gradiente	0000, 0008, 1137	Hornophon	0081	Kambrook	0037
Frontech	0072, 0020	Graetz	0240, 0104, 0041	Howard Comps	1972	Karcher	0081, 0278, 0642
Fuji	0035, 0033	Granada	0035, 0037, 0048, 0081, 0240, 0000, 0042, 0104, 0011, 0046	HP	1972	Kathrein	1802, 1868, 1869, 1870
Fujitsu	0037, 0045, 0000, 0366			Hughes Net Sys	0042, 0739	KEC	0037, 0278
Fujitsu General	0037	Grandin	0037, 0000, 0209, 0072, 0278, 0020, 0742	Humax	0739, 1711, 1845, 1853	Keen	0693
Funai	0037, 0000, 0072, 0278, 0294, 0593, 1333, 1593	Grundig	0081, 0072, 0348, 0320, 0352, 0034, 0207, 0347, 0378, 0742	Hush	1972	Kendo	0037, 0209, 0072, 0278, 0348, 0642, 0315, 0053
Galaxi	0000			Hypson	0037, 0000, 0209, 0072, 0278, 0352	Kenwood	0067, 0041, 0038, 0384, 0046
Galaxis	0278	Haaz	0348	Hytek	0047, 0000, 0072, 0036	KIC	0000
Garrard	0000	Hanimex	0352, 0295	iBUYPOWER	1972	Kimari	0047
Gateway	1972	Hanseatic	0037, 0081, 0209, 0038	Imperial	0000	Kioto	0348
GBC	0020			Ingersol	0240, 0209	KLH	0072
GE	0060, 0035, 0048, 0240, 0000, 0149, 0320, 0065, 0077, 0202, 0277, 0760, 0761, 0807, 1035, 1060	Hantor	0020	Inno Hit	0072, 0020	Kneissel	0037, 0209, 0278, 0348, 0352
GEC	0081	Haojie	0240	Interbuy	0037, 0072	Kodak	0035, 0037
Gemini	0060	Harley Davidson	0000	Interfunk	0081, 0104	Kolin	0043, 0041
General	0045, 0020, 0366	Harman/Kardon	0081, 0038, 0075	Internal	0278	Kolster	0209
General Technic	0348	Harvard	0072, 0068	International	0037, 0278, 0642	Korpel	0072
Genexxa	0037, 0000, 0104, 0278	Harwood	0072, 0068	Intervision	0037, 0000, 0209, 0278, 0348	KTV	0000
Go Video	0240, 0432, 0232, 0526, 0614, 0643, 1137	HCM	0072	Irradio	0037, 0081, 0072, 1137	Kuba	0047
GoldHand	0072	Headquarter	0046	ITT	0240, 0104, 0041, 0384, 0046, 0378	Kuba Electronic	0047
		Hewlett Packard	1972	ITT Nokia	0240, 0104, 0041	Kyoto	0072
		HI-Q	0035, 0047, 0000	ITV	0037, 0278, 0020	Lenco	0278
		Hinari	0240, 0209, 0041, 0072, 0278, 0352, 0088, 0208, 0343	Janeil	0240	Leyco	0072
		Hisawa	0209, 0352	JBL	0278	LG	0037, 0240, 0045, 0000, 0042, 0209, 0278, 0038, 0051,
				Jensen	0067, 0041		

	0053, 0225, 1037, 1137, 1237	Master's.....	0278		0642, 1343, 0807, 0443, 0242, 0214, 0173, 0075, 0061	Nu-Tec	0209
Lifetec	0209, 0348	Matsui	0037, 0240, 0209, 0278, 0348, 0352, 0036, 0088, 0208, 0295, 0742	Motorola.....	0035, 0048	Oceanic.....	0048, 0081, 0000, 0104, 0041, 0046
Linksys	1972			Movie Walker ...	0072	Okano	0209, 0072, 0278, 0348, 0315
Lloyd's	0240, 0000, 0072, 0038, 0036, 0208	Matsushita.....	0035, 0162, 0081, 0227, 0367, 0454, 1162	MTC.....	0240, 0000, 0072	Olympus.....	0035, 0162, 0104
Loewe	1062, 0162, 0037, 0081, 1562, 0105, 0454, 1262	Media Center PC	1972	MTX	0000	Onimax	0642
Logik	0240, 0000, 0209, 0072, 0011	Mediator	0081	Multitec.....	0037	Onkyo	0222
Luker	0579	Medion	0209, 0348, 0642, 0352	Multitech	0039, 0000, 0072, 0020	Optimus.....	1062, 0035, 0162, 0037, 0048, 0047, 0240, 0000, 0104, 0432, 0062, 0058, 0054, 0454, 0593, 1048, 1162, 1262
Lumatron.....	0278, 0593, 1137	MEI	0035	Murphy	0000	Optonica.....	0062
Lunatron.....	1137	Memorex	0035, 0162, 0037, 0048, 0039, 0047, 0240, 0000, 0104, 0209, 0072, 0278, 0348, 0307, 0569, 1262, 1237, 1162, 1048, 1037, 0579, 0479, 0454, 0046, 0062, 0054	Myryad	0081	Orbit	0072
Lux May	0072			NAD	0240, 0104, 0058	Orion	0184, 0240, 0000, 0104, 0121, 0209, 0002, 0278, 0348, 0352, 1815, 1479, 0742, 0479, 0343, 0295, 0294, 0211, 0208, 0088, 0036
Luxor	0048, 0047, 0104, 0043, 0072, 0315, 0046, 0062	Memphis.....	0072	Naiko	0348, 0642		
LXI.....	0037, 0000, 0042, 0067, 0054	Mercury	0020	NAP.....	0039		
M Electronic.....	0037, 0240, 0000, 0038	Metronic	0081	Nebula Elec.	0033		
Magnadyne	0081, 0212	Metz.....	1062, 0162, 0037, 0081, 1562, 0227, 0347, 0454, 0836, 1162, 1262	NEC	0035, 0037, 0048, 0104, 0067, 0041, 0278, 0038, 0008, 0082, 0370, 1137, 1287, 1288		
Magnasonic	0037, 0240, 0000, 0072, 0278, 0020, 0082, 0593, 1278	MGA	0060, 0240, 0043, 0061	Neckermann	0081, 0041, 0208	Orson	0000
Magnavox	0035, 0037, 0048, 0039, 0081, 0240, 0000, 0149, 0642, 1781, 1593, 0618, 0593, 0563, 0110, 0054, 0011	Mercury	0020	Nesco	0000, 0072	Osaki	0037, 0000, 0072
		Metronic	0081	Neufunk	0209	Osume	0072
Magnin	0240	Metz.....	1062, 0162, 0037, 0081, 1562, 0227, 0347, 0454, 0836, 1162, 1262	New Tech	0072	Otake	0209
Magnum	0642	MGA	0060, 0240, 0043, 0061	Newave	0037	Otto Versand	0081
Manesth	0081, 0045, 0209, 0072	MGN Tech.	0240	Nikkai	0072, 0278, 0020	Pace	0352
Marantz.....	0035, 0081, 0209, 0038, 0062, 0295, 1381	Micormay.....	0348	Nikko	0037, 0278	Pacific	0000, 0348, 0642, 0742
Mark.....	0000, 0278, 0020	Micromaxx	0209	Nikkodo	0037, 0278	Packard Bell.....	1972
Marta	0037	Microsoft	1972	Nikon	0011, 0034	Palladium	0037, 0209, 0041, 0072, 0348
Mastec	0642	Midland.....	0240, 0051	Nishi	0240	Palsonic.....	0000, 0072, 0642
		Migros	0000	Niveus Media...	1972	Panama	0035
		Mind	1972	Noblex	0240	Panasonic	1062, 0035, 0162, 0000, 1562, 1807, 1393, 1317, 1308, 1293, 1292, 1262, 1244, 1162, 1035, 0836, 0616, 0615,
		Minolta.....	0042, 0105	Nokia	0048, 0081, 0240, 0042, 0104, 0041, 0278, 0315, 0036, 0046, 0378		
		Mitsubishi	0060, 0048, 0047, 0081, 0000, 0042, 0067, 0043, 0041,	Nordmende	0067, 0041, 0320, 0384, 0207		
				Northgate	1972		

	0614, 0513, 0454, 0378, 0367, 0246, 227, 0225, 0077, 0051, 0020	Protech..... 0081, 0072	Rex..... 0041, 0384	Schneider 0037, 0081, 0240, 0000, 0042, 0072, 0278, 0348, 0642, 0352, 0110, 1137
Pathe Cinema ..	0043, 0036	ProVision 0278	RFT..... 0072, 0020	Scientific Atlanta 0008
Pathe Marconi..	0041	Pulsar 0039, 0240, 0278, 0051	Ricavision 1972	Scott 0184, 0045, 0121, 0043, 0036, 0208, 0210, 0211, 0212, 0593
Penney	0035, 0162, 0037, 0047, 0081, 0240, 0000, 0042, 0067, 0038, 0054, 0077, 1035, 1237	Pulser 0240, 0051	Ricoh 0034	Sears 0060, 0035, 0162, 0037, 0048, 0039, 0047, 0033, 0045, 0000, 0042, 0104, 0067, 0043, 0209, 0041, 0072, 1237, 0105, 0066, 0065, 0011, 0058, 0054, 0018, 0034, 0046, 0036
Pentax	0042, 0065, 0105	Pye 0081, 0000	Rio..... 1137	Seaway 0278
Perdio	0000, 0209	Qisheng 0060	Roadstar 0037, 0081, 0240, 0072, 0278, 0038, 0742	SEG..... 0081, 0240, 0072, 0278, 0642, 0561
Philco	0035, 0081, 0000, 0209, 0072, 0038, 0110, 0479, 0561	Quarter 0046	Royal 0072	SEI..... 0081
Philips	0035, 0162, 0048, 0081, 0045, 0000, 0209, 0384, 0110, 0062, 0034, 0563, 0593, 0616, 0618, 0739, 1081, 1181, 1381	Quartz 0035, 0047, 0046	Saba..... 0041, 0278, 0320, 0384, 0062, 0207	Sei-Sinudyne.... 0081
Phoenix	0278	Quasar 0035, 0162, 0002, 0278, 0077, 0454, 1035, 1162	Saisho 0209, 0348, 0036, 0088, 0208	Seleco 0037, 0041, 0384, 0008, 0020
Phonola.....	0081	Quelle 0081, 0208	Salora 0104, 0043, 0046, 0075, 0443	Semivox 0045, 0209
Pilot	0037	Questar..... 0020	Sampo 0037, 0048	Semp..... 0045
Pioneer.....	0162, 0081, 0042, 0067, 0058, 1337, 1388, 1390	Radialva..... 0037, 0048, 0081, 0072	Samsung..... 0060, 0240, 0045, 0000, 0038, 0432, 0051, 0053, 0077, 0210, 0212, 0739, 0760, 1014	Sentra 0072, 0278, 0020
Polk Audio.....	0081	Radiola 0081	Samtron 0240, 0643	Setron 0072
Portland 0278, 0020		Radionette..... 0037, 1137	Samurai..... 0020	Sharp 0037, 0048, 0047, 0032, 0000, 0209, 0569, 0062, 0065, 0363, 0807, 0848, 1048, 1285, 1400, 1815
Precision 0058		RadioShack..... 0035, 0162, 0037, 0048, 0047, 0240, 0000, 0104, 0046, 0062, 0066, 1037, 1162	Sanky 0048, 0039	Shinco 0000
Presidian 1593		Radix 0037	Sansei 0048	Shintom..... 0039, 0240, 0000, 0104, 0072, 0208
Prinz 0000, 0088		Randex 0037	Sansui 0240, 0000, 0067, 0209, 0041, 0072, 0002, 0348, 0082, 0271, 0479, 1479	Shivaki..... 0037
Profitronic..... 0081, 0240		Rank 0041	Sanyo 0048, 0047, 0240, 0000, 0104, 0067, 0209, 0348, 0046, 0159, 0368, 0369, 0479, 1137, 1330, 1331	Shogun 0240, 0051
Proline..... 0000, 0278, 0642, 0320, 0615		Rank Arena..... 0041	Saville 0240, 0278, 0352	Shorai 0088
Proscan..... 0060, 0202, 0760, 0761, 1060		RCA 0060, 0035, 0048, 0240, 0045, 0000, 0042, 0149, 0320, 0065, 0077, 0105, 0058, 0202, 0211, 0054, 0277, 0760, 0761, 0807, 0880, 1035, 1060	SBR..... 0081	
Proscow 0278, 0844		Realistic 0035, 0162, 0037, 0048, 0047, 0240, 0000, 0104, 0121, 0278, 0046, 0062, 0065, 0066, 1162	ScanSonic 0240	
Prosonic..... 0209, 0278		Reoc 0348	Schaub Lorenz. 0000, 0104, 0041, 0348, 0315	
Protec 0000, 0072		ReplayTV..... 0614, 0616		

Siemens	0037, 0081, 0104, 0320, 0046, 0054, 0347, 0510	Sunstar	0000	Tedalex	0037, 0209, 0348, 0642		1290, 1289, 1145, 1008, 0845, 0828, 0742, 0544, 0366, 0212, 0210, 0066, 0062, 0054, 0008
Siera	0081	Suntronic	0000	Teknika	0035, 0037, 0000		
Signature	0060, 0035, 0037, 0048, 0000, 0149, 0046, 0065, 0066, 0479	Sunwood	0072	Teleavia	0041		
Silva	0037	Supra	0037, 0278, 0348	Telecorder	0240	Tosonic	0278
Silver	0278	Susumu	0037	Telefunken	0209, 0041, 0278, 0642, 0320, 0384, 0208, 0593	Totevision	0037, 0240
SilverCrest	0642	SV2000	0000, 0072			Touch	1972
Singer	0037, 0240, 0045, 0072, 0348, 0271	SVA	0000	Telenet	1784	Towada	0072
Sinudyne	0081, 0209, 0352	Sylvania	0035, 0081, 0000, 0043, 0110, 0593, 1593, 1781	Telestar	0037	Toyoda	0278
Smaragd	0348	Symphonic	0240, 0000, 0002, 0593, 1593	Teletech	0000, 0072, 0278	Tradex	0081
Solavox	0020, 0034	Systemax	1972	Tempest	0020	Trakton	0020
Sonic Blue	0614, 0616, 0643, 1137	T+A	0162	Tenosal	0072	Triad	0278
Sonneclair	0072	Tagar Systems..	1972	Tensai	0037, 0000, 0072, 0278	Triumph	0208
Sonographe	0046	Taisho	0209, 0088	Tevion	0209, 0348, 0642, 0479	Trix	0037
Sonolor	0048, 0046, 0062	Tandberg	0278	Texet	0278, 0020	Uher	0240
Sontec	0037, 0278	Tandy	0000, 0104	Thomas	0000, 0002	Ultra	0045, 0278, 0020
Sonwa	0642	Tashiko	0037, 0048, 0081, 0240, 0000	Thomson	0060, 0067, 0041, 0278, 0320, 0384, 0202	Ultravox	0278
Sony	0035, 0048, 0047, 0032, 0033, 0000, 0067, 1972, 1636, 1448, 1447, 1297, 1296, 1295, 1232, 1032, 0640, 0639, 0636, 0586, 0046, 0034, 0011	Tatung	0048, 0081, 0045, 0000, 0067, 0043, 0209, 0041, 0348, 0352, 0008, 0053, 0366	Thorn	0037, 0104, 0041, 0320, 0036, 0443	Unitech	0240, 0051
Soundmaster ...	0000	Tchibo	0348	Tisonic	0278	United	0348, 0742, 1593
Soundwave	0037, 0209, 0348	TCM	0348	Tivo	0618, 0636, 0739, 1337, 1996	Universum	0037, 0081, 0240, 0000, 0104, 0209, 0348, 1137
Ssangyong	0072	Teac	0037, 0000, 0067, 0041, 0072, 0278, 0307, 0642, 0526, 0593, 0844, 1593	TMK	0240, 0000, 0036, 0208	Vector	0045
Stack 9	1972	Tec	0072, 0020	TNIX	0037	Vector Research	0184, 0038
Standard	0278	Tech Line	0072	Tocom	0240	Vextra	0072
Stern	0278	Technics	0035, 0162, 0037, 0081, 0000, 0246, 1162	Tokai	0037, 0104, 0041, 0072	Victor	0067, 0041, 0384, 0008, 0370, 1283, 1299
Strong	0271	TechniSat	0348	Topfield	1959, 2045	Video Concepts	0045, 0061, 0210, 0242
STS	0042, 0105	Technosonic	0352	Topline	0348	Video Pro	0020
Sunkai	0209, 0278, 0348, 0295	Teco	0035, 0037, 0048, 0041, 0038	Toshiba	0081, 0240, 0045, 0000, 0042, 0067, 0043, 0209, 0041, 0384, 0352, 0432, 1384, 1386, 1972, 1325, 1323, 1996,	Video Technic...	0000
						Video Track	0443
						Videomagic	0037
						VideoPro	0020
						Videosonic	0240, 0000, 0072
						Viewsonic	1972
						Villain	0000
						Voodoo	1972

Wards 0060, 0035, 0037,
0048, 0039, 0047,
0081, 0033, 0240,
0045, 0000, 0042,
0043, 0041, 0072,
0038, 0149, 0046,
0058, 0018, 0062,
0065, 0011, 0212,
0479, 0760

Watson 0081, 0642, 0352

Weltblick 0037

Wharfedale..... 0642, 0593, 0615

White Westinghs 0000, 0209, 0072,
0278, 0479

World 0209, 0002, 0348,
0479

XR-1000..... 0035, 0240, 0000,
0072, 0208

Yamaha 0041, 0038

Yamishi..... 0072, 0278

Yokan 0072

Yoko 0037, 0240, 0072,
0020

Yoshita 0072

Zenith 0037, 0039, 0033,
0000, 0209, 0041,
0278, 0011, 0034,
0479, 1137, 1139,
1479

ZT Group..... 1972

ZX..... 0209, 0348, 0352

A-ACC

Accurian 2502

Altec Lansing ... 2500, 2501

Apple 2503, 2505

DLO..... 2504, 2509

Griffin 2508

iPort 2506, 2507

NaviPod..... 2505

Sonance 2506, 2507

TEN Technology 2505

V-ACC

ABS 1272

Accurian 1653

Alienware 1272

Amino 1481

Axonix 1447

Buffalo 1739

CyberPower..... 1272

D-Link 1554, 1731

Dgtec 1363

Epson 1563, 1650

Gateway 1272

Hewlett Packard 1272, 1267

Howard Comps 1272

HP..... 1272, 1267

Hush..... 1272

iBUYPower ... 1272

Keyspan 1344

KoolConnect 1481

LG..... 1415

Linksys 1272, 1365

Macro Image Tech.1383

Media Center PC 1272

Microsoft 1272, 1805, 2049

Mind 1272

Motorola 1363

MyHD 1383

Niveus Media.... 1272

Northgate 1272

Packard Bell 1272

Panasonic 1120

Philips 1218

Pinnacle Systems 1447

Pioneer..... 1010

ReQuest..... 1245

Ricavision 1272

Roku 1486

Samsung..... 1190, 1490

Sensory Science 1126

Sharp 1010

Sony..... 1272, 1324, 1364

Stack 9..... 1272

SureWest 1481

Sylvania 1563

Systemax..... 1272

Tagar Systems . 1272

Toshiba 1272

Touch 1272

Viewsonic 1272, 1329

Vizio 1126

Voodoo 1272

Xbox..... 1805, 2049

Zinwell..... 1363

ZT Group..... 1272

R-ACC

Bose..... 1629



312518

BOSE[®]
Better sound through research[®]

©2008 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM312518 Rev.01